

New

In-line PURGE ADAPTER

Ideal for eliminating residual pressure in piping

Slim and neat piping with an in-line design

High pressure up to 35 MPa

Couplings can be connected smoothly





Couplings and hoses are not included. Please purchase them separately.



PAD-3FM


PAD-4FM

Just Push

Eliminates residual pressure instantly

Purge residual pressure

Tube fittings are not included. Please purchase them separately.

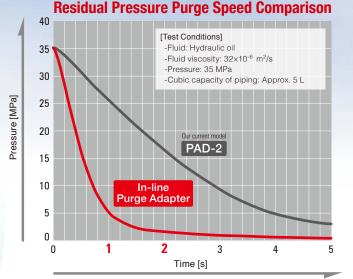



In-line design Slim and neat piping



Operate the button by leverage

Can be operated with a screwdriver if the button is stiff.

Insert an ordinary flat head screwdriver into the groove in the Valve Holder and press the button by leverage





The tee joint is not included. Please prepare separately

Specifications				
Model	PAD-3FM	PAD-4FM	PAD-6FM	PAD-8FM
Body material	Steel (Nickel plated)			
Application	R 3/8 × Rc 3/8	R 1/2 × Rc 1/2	R 3/4 × Rc 3/4	R 1 × Rc 1
Working pressure *1	35.0 MPa, 357 kgf/cm², 350 bar, 5080 PSI			
Drain outlet port	Application: Rc 1/8 (Max. Tightening Torque: 5 Nm)			
Applicable fluid	Hydraulic oil			
Type of grease used	Mineral grease			
Seal material Working temperature range *2	Seal material	Mark	Working temperature range	Remarks
	Nitrile rubber	NBR (SG)	-5°C to +80°C	Standard material

^{*1:} The normal allowable fluid pressure under continuous use. Continuously exceeding the working pressure may cause leakage or damage. *2: The working temperature range depends upon the operating conditions.

Max. Tightening Torque			Nm {kgf•cm}		
Application	R 3/8 × Rc 3/8	R 1/2 × Rc 1/2	R 3/4 × Rc 3/4	R 1 × Rc 1	
Torque	40 (408)	80 (816)	150 {1530}	250 (2550)	


Min. Cross-Sectional	(mm²)			
Model	PAD-3FM	PAD-4FM	PAD-6FM	PAD-8FM
Min. Cross-Sectional Area	78.5 (ø10)	122 (ø12.5)	213 (ø16.5)	363 (ø21.5)


Suitability for Vacuum


Not suitable for vacuum application.

Purge residual pressure

Models and Dimensions

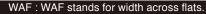

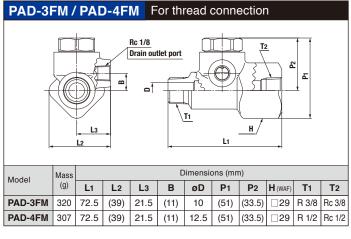

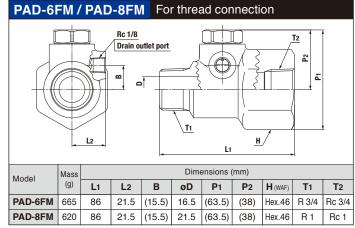

Safety Guide -Be sure to read the "Instruction for Purge Adapter" -



-Do not use for applications other than residue pressure releasing. If the button is pressed during dynamic pressure applied, the pressure of the main system may drop and cause unexpected damage due to malfunction of equipment. -Do not use continuously exceeding the rated working pressure. -Do not apply any artificial impact, bend or tension. -Do not disassemble.

-If the Purge Adapter is hot, use protective wear such as gloves and take special care in handling. -Do not strike the upper part of the button with a hammer or a similar tool. If the button is stiff, insert a flat head screwdriver into the groove in the Valve Holder and press the button down by leverage

Focused on you

NITTO KOHKI CO., LTD.

Web www.nitto-kohki.co.jp/e

9-4, Nakaikegami 2-chome, Ohta-ku, Tokyo 146-8555, Japan Tel: +81-3-3755-1111 Fax: +81-3-3753-8791

E-mail: overseas@nitto-kohki.co.jp



DISTRIBUTED BY



บริษัท นานดีอินเตอร์เทรด จำกัด NDEE INTER-TRADE CO., LTD.

314,316,318,320,322 ซอยจันทน์ 32 ถนนจันทน์ แขวงทุ่งวัดดอน เขตสาทร กทม. 10120

: 0-2675-8239

: @nandeeintertrade

: nandeeintertrade

: www.nandee.co.th

: marketing@nandee.co.th sales@nandee.co.th