


RIV508 Hydropneumatic tool for structural blind rivets and lockbolts

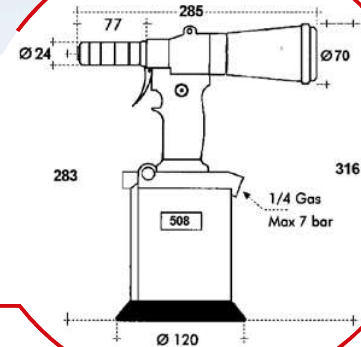

Code 3008000


To place structural blind rivets from Ø 4.8 to Ø 7.8 and lockbolts Ø 4.8 and Ø 6.4.

RIV508 is a reversible tool. It is supplied without head. Different kits of standard front heads are available on request. Fitted out with a system of blind rivet suction and nail recovery.

Optional



Extensions 100-150-200 mm.
Code **4348800-4348900-4349000**

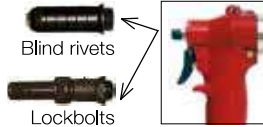

Blind rivets
Lockbolts



Collar cutter heads for standard collar (not flanged) Ø 4.8 and Ø 6.4.
Code **4047100-4047200**



Deflector kit for lockbolts.
Code **3259500**

RIV508 is sold in a case without the front head kit. Choose the correct one, according to the fastener to be placed, and order it separately (see head kits).

Technical data and features

Air working pressure	6 bar
Min-max air pressure	5/7 bar
Air consumption per cycle (6 bar)	4.9 lt
Stroke	21 mm
Max power (6 bar)	21000 N
Weight (without kit)	2.300 Kg
Vibrations	< 2,5 m/s²
Noise level	78.5 dB (A)

Head kits

Picture	Kit	Description	Kit code
	508/50R48	Head for standard and structural blind rivets Ø 4.8	4303400
	* 508/50R	Head for blind rivets Ø 6.0, 6.4, 7.8 and for structural blind rivets Ø 6.4 (Magnariv, Magnarivgrip, Monriv, Lockriv)	3123100
	508/80R	Head for Lockriv structural blind rivets Ø 7.8	3123200
	508/80RX	Head for Lockriv stainless steel structural blind rivets Ø 7.8	4729400
	508/100R	Head for structural aluminium blind rivets Ø 9.8 (Lockriv and Magnariv)	4609600
	508/50B	Complete head for Rivlock lockbolts Ø 4.8 - Property class 5.8	3020900
	508/64B	Complete head for Rivlock lockbolts Ø 6.4 - Property class 5.8	3020700
	508/64B/1	Complete head for Rivblock lockbolts Ø 6.4	3020700 + 2973000 **
	508/64B/2	Complete head for Rivtainer lockbolts Ø 6.4	3020700 + 4193200 ***
	508/50G	Complete head for Rivlockgrip lockbolts Ø 4.8 - Property class 5.8	3118400
	508/64G	Complete head for Rivlockgrip lockbolts Ø 6.4 - Property class 5.8	3119700

* Specific equipments are available on request, in order to use kit 508/50R Monriv Ø 6.4 and standard blind rivets Ø 7.8.

** To place Rivblock couple the special external cone without collar - code **2973000**.

***To place Rivtainer couple the special external cone with collar - code **4193200**.

