


Air Compressor, Vacuum Pump & Liquid Pump

General Catalog

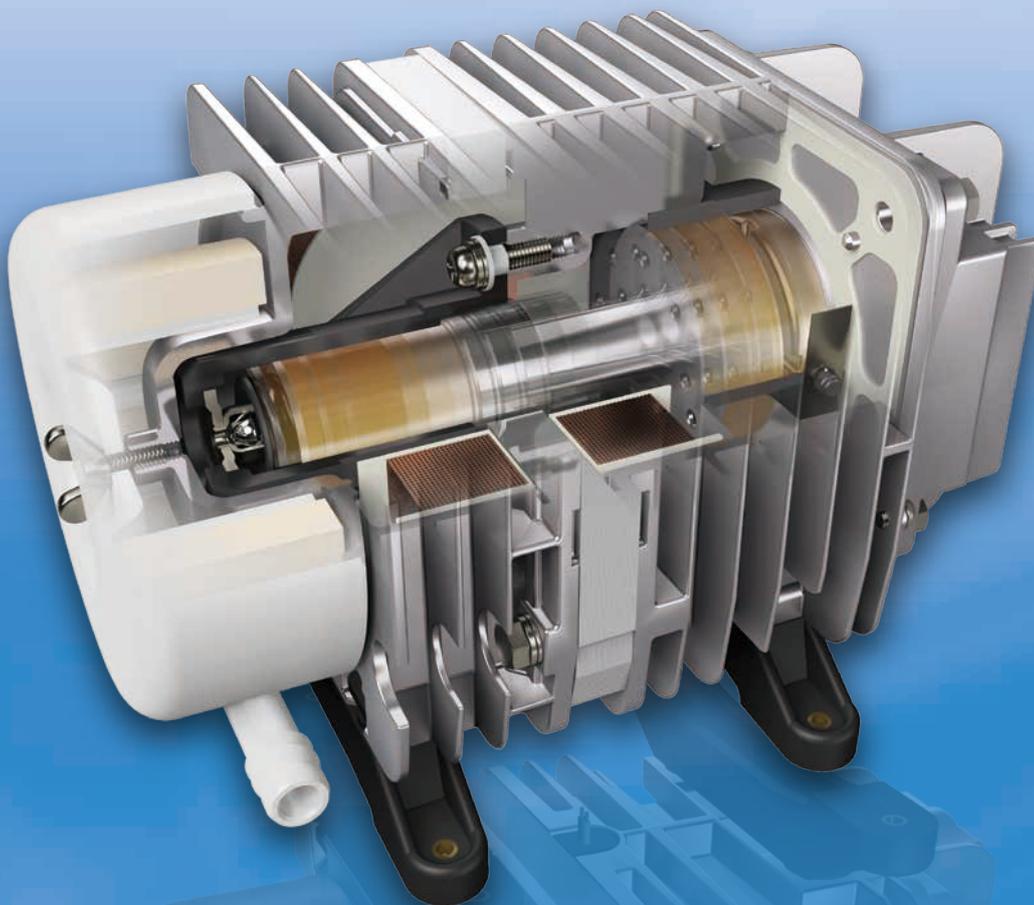


Our air compressors and vacuum pumps are unique products featuring a Linear-motor-driven Free Piston System. Nitto Kohki has made available a complete series of air compressors and vacuum pumps that incorporate this revolutionary mechanism. These are quite appropriate as air sources or vacuum units for various pneumatically operated equipment and apparatus in advanced industries.

Linear-motor-driven Free Piston Mechanism

The Electro-magnet and return spring alternately drive the piston inside the cylinder, the mechanical resonance of which is synchronized with the input current cycle.


In a single mechanism, the piston combines the functions of two normally independent devices; the pump and the motor.

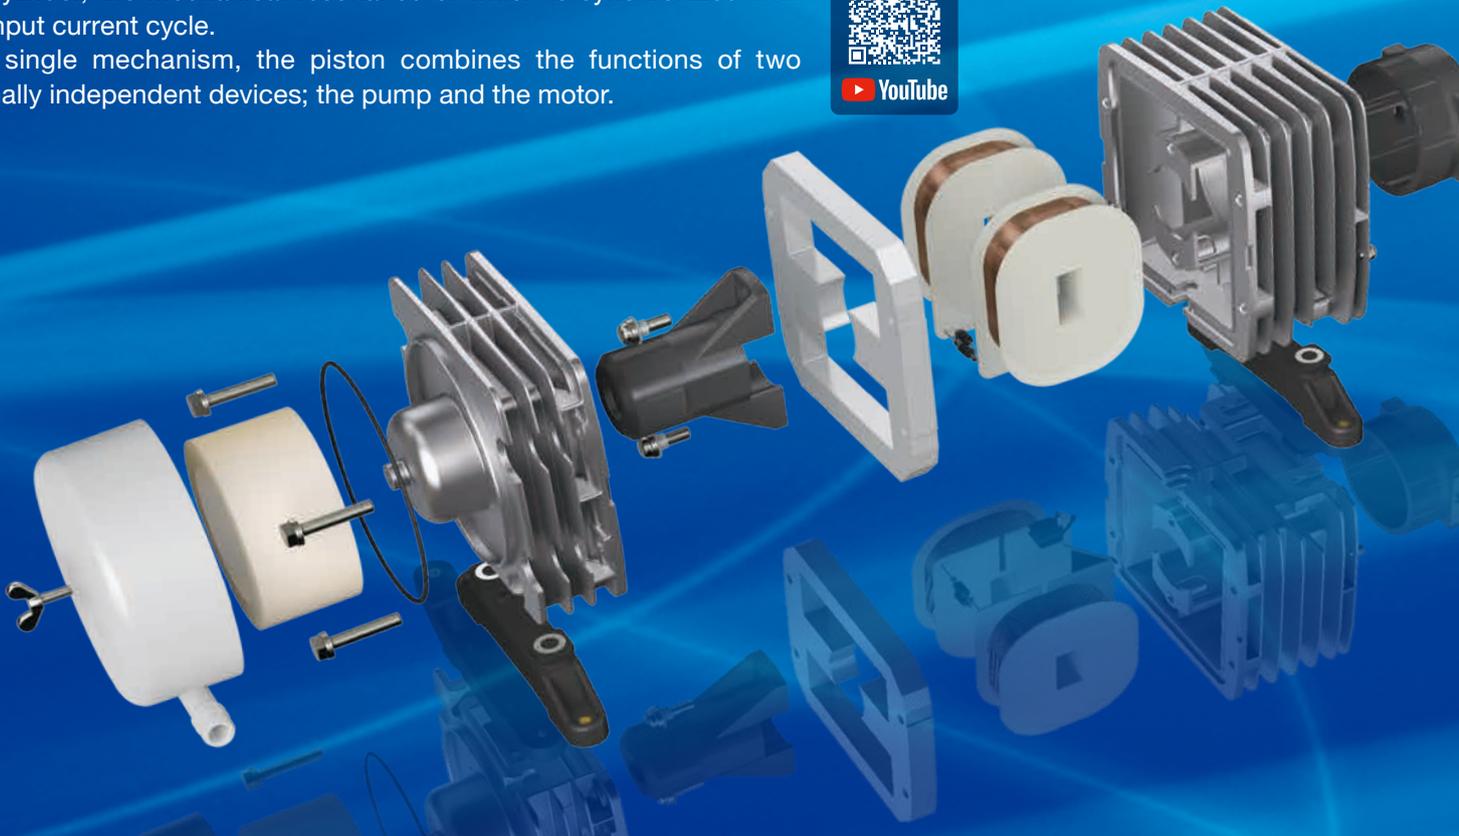


Operating Principle

*1) Incorporated in AC models *2) Incorporated in DC models

A silicon diode¹ in between the coils or inverter² converts the full-wave input current into half-rectified current. In turn this activates and deactivates the electro-magnet, producing a smooth mechanically resonating action.

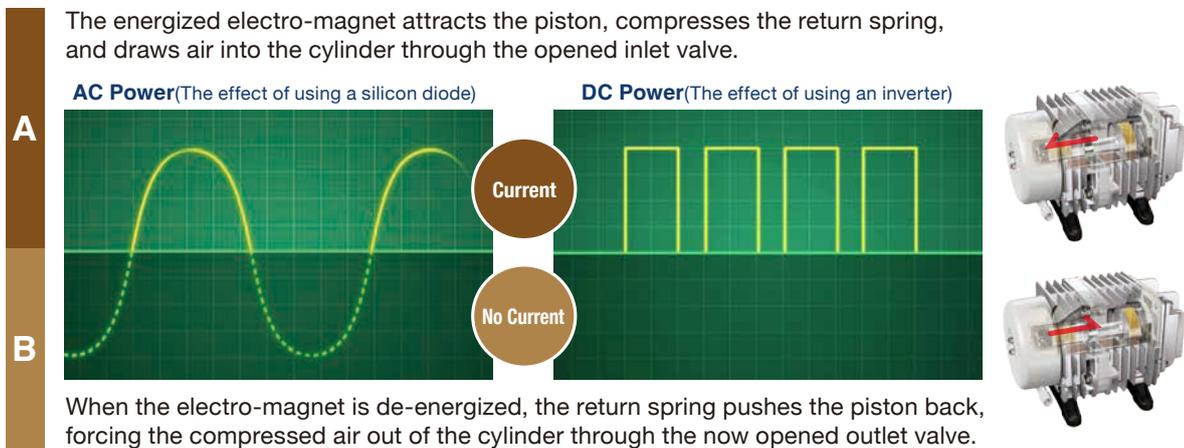

Repeating the movements of A and B delivers the function of compressor or vacuum pump.

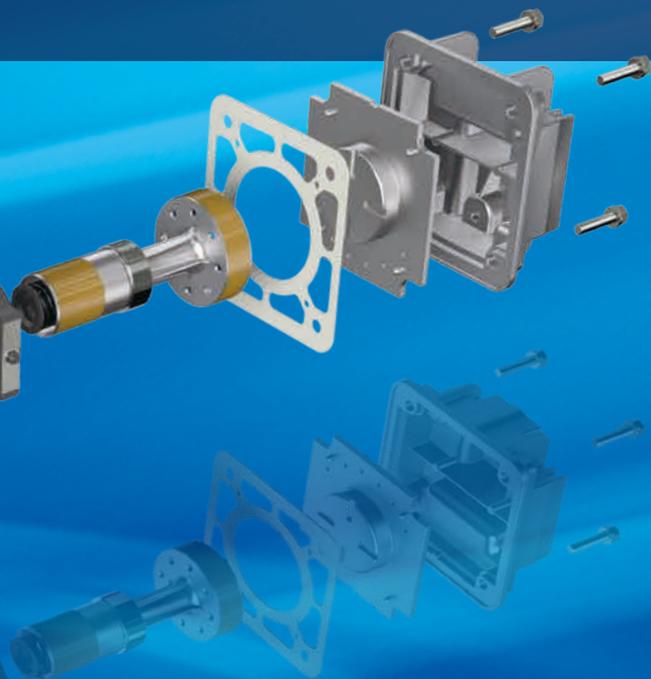

Compact Integrated Design

This unique system enables the mechanical resonance of a single part. An incredibly compact, lightweight design is achieved by combining what are entirely independent functions in conventional pumps – the motor and the compressor – into a superior single, unified structure.

Self-cooling Design

Cool intake air passes over the coils to reduce and control the rise in the pump's internal temperature. As a result of this feature, it is possible to almost completely seal the unit, thus improving the suppression of internal operating noise.

Overpressure Control Mechanism

Should the output pressure exceed the rated value, the piston will automatically adjust to a shorter stroke. Simultaneously, power consumption will automatically reduce to prevent the motor from failing or being burnt out.

Contents

Page

| | |
|---|----|
| Series Selection | 3 |
| Conversion Tables | 6 |
| The Mechanism and Structure of Nitto Kohki Pumps | 7 |
| Information Found in the Model Name | 8 |
| Explanation of Technical Terms | 9 |
| The Key Design Features of the Linear-motor-driven Free Piston System | 11 |
| Safety Guide | 89 |

| | | |
|--------------------|--|----|
| Linear Free Piston | AC Linear Free Piston Compressor AC0102 / AC0201A / AC0301A / AC0401A / AC0602 / AC0901 AC0902 / AC0105 / AC0110 / AC0207 / AC0210 / AC0410A / AC0610A AC0910 / AC0920 | 12 |
| | AC Linear Free Piston Vacuum Pump VP0125 / VP0140 / VP0435A / VP0450 / VP0625 / VP0660 VP0940 / VP0940T | 28 |
| | DC Linear Free Piston Compressor / Vacuum Pump DAH102-X1 / DAH102-Y1 / DAH105-X1 / DAH105-Y1 / DAH110-X1 / DAH110-Y1 DVH130-X1 / DVH130-Y1 / DVH145-X1 / DVH145-Y1 | 38 |
| Diaphragm | AC Linear Diaphragm Pump Dual & Blower Type: VC0100 / VC0101 / VC0101S / VC0201B / VC0301B | 44 |
| DC Motor | DC Piston Pump DC Diaphragm Pump DP0105-X1 / DP0105-Y1 / DPA0105-X1 / DPA0105-Y1 / DP0410-X1 DP0410-Y1 / DP0410-X2 / DP0410-Y2 / DP0410T-Y1 / DP0410T-Y2 DP0125A / DP0140 / DP0102 / DP0102S / DP0102H-X1 / DP0102H-X2 DP0110-X1 / DP0110-Y1 / DP0110-X3 / DP0110T-X1 / DP0110T-Y1 DP0210TA-Y1 | 54 |
| Liquid Pump | Piezoelectric Pump BPS / BPH / BPHS / BPF Type | 70 |
| | DC Diaphragm Liquid Pump DPE-100 / DPE-400 / DPE-400BL / DPE-800 / DPE-100BLC / DPE-200BLC | 70 |
| | AC Linear Free Piston Blower LA-28B / LA-45C / LA-60B / LA-80B / LA-100A / LA-120A / LA-200F | 78 |
| | Other products HK-400A / LV-125A and Vacuum Pen Assembly | 84 |
| | "CUPLA" Quick Connect Couplings | 90 |

Nitto Kohki's Official YouTube channel

Watch our products in action.

www.youtube.com/c/NittoKohkiGLOBAL



Green Procurement

Nitto Kohki has made every effort in developing "Environmental Improvement Plans" through the implementation of ISO14001, to execute environmentally conscious business activities on a company-wide basis. As a part of our ongoing commitment to the environment, we are also committed to reduce and/or exclude restricted substances from our products as designated by RoHS directives, laws and regulations of chemical substances.



Series Selection

AC Linear Free Piston Compressor

| Model | Rated Pressure | | Max. Pressure | | Rated Pressure & Max. Pressure | Rated Airflow | | Rated Airflow | Page |
|---------|----------------|------|---------------|------|--------------------------------|---------------|-------|---------------|------|
| | kPa | psig | kPa | psig | | L/min | cfm | | |
| AC0102 | 20 | 2.84 | 40 | 5.69 | | 5 | 0.177 | | 13 |
| AC0201A | 10 | 1.42 | 20 | 2.84 | | 20 | 0.71 | | 14 |
| AC0301A | 10 | 1.42 | 30 | 4.27 | | 28 | 0.99 | | 15 |
| AC0401A | 10 | 1.42 | 35 | 4.98 | | 35 | 1.24 | | 16 |
| AC0602 | 15 | 2.13 | 35 | 4.98 | | 40 | 1.41 | | 17 |
| AC0901 | 10 | 1.42 | 40 | 5.69 | | 80 | 2.83 | | 18 |
| AC0902 | 20 | 2.84 | 45 | 6.40 | | 55 | 1.94 | | 19 |
| AC0105 | 50 | 7.11 | 80 | 11.4 | | 2.5 | 0.088 | | 20 |
| AC0110 | 100 | 14.2 | 120 | 17.1 | | 0.8 | 0.028 | | 21 |
| AC0207 | 70 | 9.96 | 100 | 14.2 | | 3.5 | 0.124 | | 22 |
| AC0210 | 100 | 14.2 | 120 | 17.1 | | 3.5 | 0.124 | | 22 |
| AC0410A | 100 | 14.2 | 130 | 18.5 | | 5 | 0.177 | | 23 |
| AC0610A | 100 | 14.2 | 150 | 21.3 | | 8 | 0.283 | | 24 |
| AC0910 | 100 | 14.2 | 150 | 21.3 | | 16 | 0.57 | | 25 |
| AC0920 | 200 | 28.4 | 350 | 49.7 | | 8 | 0.283 | | 26 |

AC Linear Free Piston Vacuum Pump

| Model | Attainable Vacuum | | Attainable Vacuum | | Free Air Displacement | | Free Air Displacement | Page |
|---------|-------------------|-------|-------------------|-------|-----------------------|-------|-----------------------|------|
| | kPa | in.Hg | kPa | in.Hg | L/min | cfm | | |
| VP0125 | -33.3 | -9.84 | | | 7 | 0.247 | | 29 |
| VP0140 | -53.3 | -15.7 | | | 3 | 0.106 | | 30 |
| VP0435A | -46.7 | -13.8 | | | 25 | 0.88 | | 31 |
| VP0450 | -66.7 | -19.7 | | | 18 | 0.64 | | 32 |
| VP0625 | -33.3 | -9.84 | | | 40 | 1.41 | | 33 |
| VP0660 | -80 | -23.6 | | | 25 | 0.88 | | 34 |
| VP0940 | -53.3 | -15.7 | | | 60 | 2.12 | | 35 |
| VP0940T | -53.3 | -15.7 | | | 120 | 4.24 | | 36 |

DC Linear Free Piston Compressor

| Model | Rated Pressure | | Max. Pressure | | Rated Pressure & Max. Pressure | Rated Airflow | | Rated Airflow | Page |
|-----------|----------------|------|---------------|------|--------------------------------|---------------|-------|---------------|------|
| | kPa | psig | kPa | psig | | L/min | cfm | | |
| DAH102-X1 | 20 | 2.84 | 50 | 7.11 | | 5 | 0.177 | | 39 |
| DAH102-Y1 | 20 | 2.84 | 50 | 7.11 | | 5 | 0.177 | | 39 |
| DAH105-X1 | 50 | 7.11 | 80 | 11.4 | | 2.5 | 0.088 | | 40 |
| DAH105-Y1 | 50 | 7.11 | 80 | 11.4 | | 2.5 | 0.088 | | 40 |
| DAH110-X1 | 100 | 14.2 | 120 | 17.1 | | 1.0 | 0.035 | | 41 |
| DAH110-Y1 | 100 | 14.2 | 120 | 17.1 | | 1.0 | 0.035 | | 41 |

DC Linear Free Piston Vacuum Pump

| Model | Attainable Vacuum | | Attainable Vacuum | | Free Air Displacement | | Free Air Displacement | Page |
|-----------|-------------------|-------|-------------------|-------|-----------------------|-------|-----------------------|------|
| | kPa | in.Hg | kPa | in.Hg | L/min | cfm | | |
| DVH130-X1 | -40 | -11.8 | | | 7 | 0.247 | | 42 |
| DVH130-Y1 | -40 | -11.8 | | | 7 | 0.247 | | 42 |
| DVH145-X1 | -60 | -17.7 | | | 3 | 0.106 | | 43 |
| DVH145-Y1 | -60 | -17.7 | | | 3 | 0.106 | | 43 |

AC Linear Diaphragm Pump (Blower Type)

| Model | Rated Pressure | | Max. Pressure | | Rated Pressure & Max. Pressure | | Rated Airflow | | Page |
|---------|----------------|------|---------------|------|--------------------------------|----|---------------|-----|------|
| | kPa | psig | kPa | psig | | | L/min | cfm | |
| VC0100 | 4 | 0.57 | 16 | 2.28 | | 6 | 0.212 | | 46 |
| VC0101 | 10 | 1.42 | 20 | 2.84 | | 10 | 0.35 | | 48 |
| VC0101S | 5 | 0.71 | 26 | 3.70 | | 15 | 0.53 | | 49 |
| VC0201B | 10 | 1.42 | 18 | 2.56 | | 20 | 0.71 | | 51 |
| VC0301B | 10 | 1.42 | 20 | 2.84 | | 25 | 0.88 | | 53 |

AC Linear Diaphragm Pump (Dual Type)

| Model | Attainable Vacuum | Attainable Vacuum | | Rated Pressure | | Max. Pressure | | Rated Pressure & Max. Pressure | | Rated Airflow | | Page |
|-----------------|-------------------|-------------------|-------|----------------|------|---------------|------|--------------------------------|----|---------------|-----|------|
| | | kPa | in.Hg | kPa | psig | kPa | psig | | | L/min | cfm | |
| VC0100 | | -14.7 | -4.33 | 4 | 0.57 | 16 | 2.28 | | 6 | 0.212 | | 45 |
| VC0101 120 V | | -18.7 | -5.51 | 10 | 1.42 | 18 | 2.56 | | 10 | 0.35 | | 47 |
| VC0101 230 V | | -10 | -2.95 | 10 | 1.42 | 15 | 2.13 | | 10 | 0.35 | | 47 |
| VC0201B | | -18.7 | -5.51 | 10 | 1.42 | 18 | 2.56 | | 20 | 0.71 | | 50 |
| VC0301B | | -21.3 | -6.30 | 10 | 1.42 | 20 | 2.84 | | 25 | 0.88 | | 52 |

DC Liquid Pump

| Model | Working Pressure Range | | Working Pressure Range | Flow Rate | Flow Rate | Self-priming Pressure | | Self-priming Pressure | Page |
|------------|------------------------|-----------|------------------------|-----------|-----------|-----------------------|------|-----------------------|------|
| | kPa | psig | | | | kPa | psig | | |
| DPE-100 | 0 to 100 | 0 to 14.2 | | 100 | | 20 | 2.84 | | 73 |
| DPE-400 | 0 to 100 | 0 to 14.2 | | 400 | | 40 | 5.69 | | 73 |
| DPE-400BL | 0 to 100 | 0 to 14.2 | | 400 | | 40 | 5.69 | | 73 |
| DPE-800 | 0 to 100 | 0 to 14.2 | | 800 | | 40 | 5.69 | | 73 |
| DPE-100BLC | 0 to 100 | 0 to 14.2 | | 100 | | 10 | 1.42 | | 75 |
| DPE-200BLC | 0 to 100 | 0 to 14.2 | | 200 | | 20 | 2.84 | | 75 |

*Test conditions: Water at 25 degrees C

Liquid Pump (BIMOR PUMP)

| Model | Discharge Pressure | | Discharge Pressure | Flow Rate | Flow Rate | Self-priming Pressure | | Self-priming Pressure | Page |
|-----------|--------------------|------|--------------------|-----------|-----------|-----------------------|------|-----------------------|------|
| | kPa | psig | | | | kPa | psig | | |
| BPS-215i | 15 | 2.13 | | 30 | | 3 | 0.43 | | 72 |
| BPS-235G | 15 | 2.13 | | 30 | | 1.5 | 0.21 | | |
| BPH-214i | 18 | 2.56 | | 350 | | 8 | 1.14 | | |
| BPH-214D | 18 | 2.56 | | 350 | | 8 | 1.14 | | |
| BPH-214E | 18 | 2.56 | | 350 | | 8 | 1.14 | | |
| BPH-214G | 17 | 2.41 | | 350 | | 7 | 1.00 | | |
| BPH-414i | 35 | 4.98 | | 500 | | 12 | 1.70 | | |
| BPH-414D | 35 | 4.98 | | 500 | | 12 | 1.70 | | |
| BPH-414E | 35 | 4.98 | | 500 | | 12 | 1.70 | | |
| BPH-414G | 32 | 4.54 | | 450 | | 10 | 1.42 | | |
| BPH-474G | 35 | 4.98 | | 400 | | 10 | 1.42 | | |
| BPH-474P | 35 | 4.98 | | 400 | | 10 | 1.42 | | |
| BPHS-414i | 35 | 4.98 | | 700 | | 12 | 1.70 | | |
| BPHS-414E | 35 | 4.98 | | 700 | | 12 | 1.70 | | |
| BPHS-414G | 35 | 4.98 | | 700 | | 12 | 1.70 | | |
| BPHS-474G | 35 | 4.98 | | 500 | | 10 | 1.42 | | |
| BPHS-474P | 35 | 4.98 | | 500 | | 10 | 1.42 | | |
| BPF-465P | 35 | 4.98 | | 400 | | 10 | 1.42 | | |

*Test conditions: 25°C water at AC frequency 60 Hz.

DC Compressor and Vacuum Pump (Dual Type)

| Model | Attainable Vacuum | Attainable Vacuum | | Max. Pressure | | Max. Pressure | Free Air Displacement | | Free Air Displacement | Page |
|-------------|-------------------|-------------------|-------|---------------|------|---------------|-----------------------|-------|-----------------------|------|
| | | kPa | in.Hg | kPa | psig | | L/min | cfm | | |
| DP0125A | | -33.3 | -9.84 | 30 | 4.27 | | 2.5 | 0.088 | | 61 |
| DP0140 | | -53.3 | -15.7 | 50 | 7.11 | | 4 | 0.141 | | 62 |
| DP0102 | | -26.7 | -7.87 | 45 | 6.40 | | 5 | 0.177 | | 63 |
| DP0102S | | -26.7 | -7.87 | 45 | 6.40 | | 7 | 0.247 | | 63 |
| DP0102H-X1 | | -50.7 | -15.0 | 80 | 11.4 | | 4 | 0.141 | | 64 |
| DP0110-X1 | | -66.7 | -19.7 | 150 | 21.3 | | 7.5 | 0.265 | | 66 |
| DP0110-Y1 | | -66.7 | -19.7 | 150 | 21.3 | | 7.5 | 0.265 | | 66 |
| DP0110-X3 | | -66.7 | -19.7 | 150 | 21.3 | | 7.5 | 0.265 | | 67 |
| DP0110T-X1 | | -60 | -17.7 | 150 | 21.3 | | 5.5 | 0.194 | | 68 |
| DP0110T-Y1 | | -60 | -17.7 | 150 | 21.3 | | 5.5 | 0.194 | | 68 |
| DP0210TA-Y1 | | -60 | -17.7 | 150 | 21.3 | | 10 | 0.35 | | 69 |
| DP0105-X1 | | -66.7 | -19.7 | 250 | 35.6 | | 2.8 | 0.099 | | 55 |
| DP0105-Y1 | | -66.7 | -19.7 | 250 | 35.6 | | 2.8 | 0.099 | | 55 |

(kPa)-80 -60 -40 -20 0 0 50 100 150 200 250(kPa) 0 20 40 60(L/min)

DC Compressor only

| Model | Attainable Vacuum | Attainable Vacuum | | Max. Pressure | | Max. Pressure | Free Air Displacement | | Free Air Displacement | Page |
|------------|-------------------|-------------------|-------|---------------|------|---------------|-----------------------|-------|-----------------------|------|
| | | kPa | in.Hg | kPa | psig | | L/min | cfm | | |
| DP0102H-X2 | | | | 80 | 11.4 | | 4 | 0.141 | | 65 |
| DPA0105-X1 | | | | 220 | 31.3 | | 2.8 | 0.099 | | 56 |
| DPA0105-Y1 | | | | 220 | 31.3 | | 2.8 | 0.099 | | 56 |
| DP0410-X2 | | | | 180 | 25.6 | | 18 | 0.64 | | 58 |
| DP0410-Y2 | | | | 180 | 25.6 | | 18 | 0.64 | | 58 |
| DP0410T-Y2 | | | | 150 | 21.3 | | 34 | 1.2 | | 60 |

(kPa)-80 -60 -40 -20 0 0 50 100 150 200 250(kPa) 0 20 40 60(L/min)

DC Vacuum Pump only

| Model | Attainable Vacuum | Attainable Vacuum | | Max. Pressure | | Max. Pressure | Free Air Displacement | | Free Air Displacement | Page |
|------------|-------------------|-------------------|-------|---------------|------|---------------|-----------------------|------|-----------------------|------|
| | | kPa | in.Hg | kPa | psig | | L/min | cfm | | |
| DP0410-X1 | | -77.3 | -22.8 | | | | 18 | 0.64 | | 57 |
| DP0410-Y1 | | -77.3 | -22.8 | | | | 18 | 0.64 | | 57 |
| DP0410T-Y1 | | -77.3 | -22.8 | | | | 34 | 1.2 | | 59 |

(kPa)-80 -60 -40 -20 0 0 50 100 150 200 250(kPa) 0 20 40 60(L/min)

Conversion Tables

Pressure / Flow Rate / Vacuum

Pressure

| kPa | kgf/cm ² (bar) | psig |
|------------|---------------------------|-------------|
| 300 | 3.0 | 42.7 |
| 280 | 2.8 | 39.8 |
| 250 | 2.5 | 35.6 |
| 200 | 2.0 | 28.5 |
| 180 | 1.8 | 25.6 |
| 150 | 1.5 | 21.3 |
| 120 | 1.2 | 17.1 |
| 100 | 1.0 | 14.2 |
| 80 | 0.8 | 11.4 |
| 70 | 0.7 | 9.96 |
| 50 | 0.5 | 7.11 |
| 45 | 0.45 | 6.40 |
| 40 | 0.4 | 5.69 |
| 35 | 0.35 | 4.98 |
| 34 | 0.34 | 4.84 |
| 30 | 0.3 | 4.27 |
| 20 | 0.2 | 2.84 |
| 18 | 0.18 | 2.56 |
| 15 | 0.15 | 2.13 |
| 11 | 0.11 | 1.56 |
| 10 | 0.1 | 1.42 |
| 7 | 0.07 | 1.00 |
| 5 | 0.05 | 0.71 |
| 1 | 0.01 | 0.142 |
| * 0 | 0 | 0 |

Flow Rate

| cfm | L/min | cfm | L/min |
|--------------|--------------|------|-------|
| 0.035 | 1.00 | 2.12 | 60.0 |
| 0.070 | 2.00 | 2.25 | 63.7 |
| 0.100 | 2.83 | 2.47 | 70.0 |
| 0.105 | 3.00 | 2.50 | 70.8 |
| 0.177 | 5.00 | 2.65 | 75.0 |
| 0.250 | 7.08 | 2.75 | 77.9 |
| 0.353 | 10.0 | 2.83 | 80.0 |
| 0.500 | 14.2 | 3.00 | 85.0 |
| 0.530 | 15.0 | 3.18 | 90.0 |
| 0.708 | 20.0 | 3.25 | 92.0 |
| 0.750 | 21.2 | 3.50 | 99.1 |
| 0.883 | 25.0 | 3.53 | 100 |
| 1.00 | 28.32 | 3.75 | 106 |
| 1.06 | 30.0 | 3.89 | 110 |
| 1.24 | 35.0 | 4.00 | 113 |
| 1.25 | 35.4 | 4.24 | 120 |
| 1.41 | 40.0 | 4.50 | 127 |
| 1.50 | 42.5 | 5.00 | 142 |
| 1.59 | 45.0 | 5.30 | 150 |
| 1.75 | 49.6 | 6.00 | 170 |
| 1.77 | 50.0 | 7.00 | 198 |
| 2.00 | 56.6 | 7.06 | 200 |

Vacuum

| kPa | mmHg | mbar | in.Hg |
|-----------|------|-------|-------|
| * 0 | 0 | 0 | 0 |
| -13.3 | -100 | -133 | -3.94 |
| -26.7 | -200 | -267 | -7.87 |
| -33.3 | -250 | -333 | -9.84 |
| -44.0 | -330 | -440 | -13.0 |
| -45.3 | -340 | -453 | -13.4 |
| -46.7 | -350 | -467 | -13.8 |
| -53.3 | -400 | -533 | -15.7 |
| -60.0 | -450 | -600 | -17.7 |
| -66.7 | -500 | -667 | -19.7 |
| -73.3 | -550 | -733 | -21.7 |
| -80.0 | -600 | -800 | -23.6 |
| -93.3 | -700 | -933 | -27.6 |
| -100 | -750 | -1000 | -29.5 |
| ** -101.3 | -760 | -1013 | -29.9 |

Pressure

| from \ to | kPa | kgf/cm ² | bar | psig |
|---------------------|-----|---------------------|------|-------|
| kPa | 1 | 0.01 | 0.01 | 0.142 |
| kgf/cm ² | 100 | 1 | 1 | 14.2 |
| bar | 100 | 1 | 1 | 14.2 |
| psig | 7 | 0.07 | 0.07 | 1 |

Vacuum

| from \ to | kPa | mmHg | in.Hg | mbar |
|-----------|--------|-------|---------|--------|
| kPa | -1 | -7.50 | -0.295 | -10 |
| mmHg | -0.133 | -1 | -0.0394 | -1.335 |
| in. Hg | -3.39 | -25.4 | -1 | -33.92 |
| mbar | -0.1 | -0.75 | -0.0295 | -1 |


* Gauge pressure
** Absolute vacuum

The Mechanism and Structure of Nitto Kohki Pumps


Linear Motor Driven Free Piston System

The attractive force of the electromagnet and the reaction force of the spring drive the piston to generate pressure. There are AC models that use AC waveform and a silicon diode, and DC models that use DC waveform and an inverter.



[AC Power (The effect of using a silicon diode)] AC power

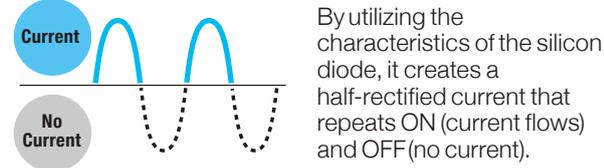


[DC Power (The effect of using an inverter)] DC power

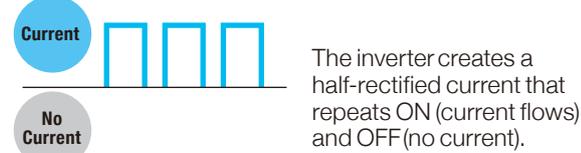

<Structural image>

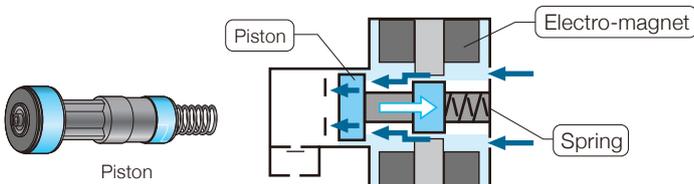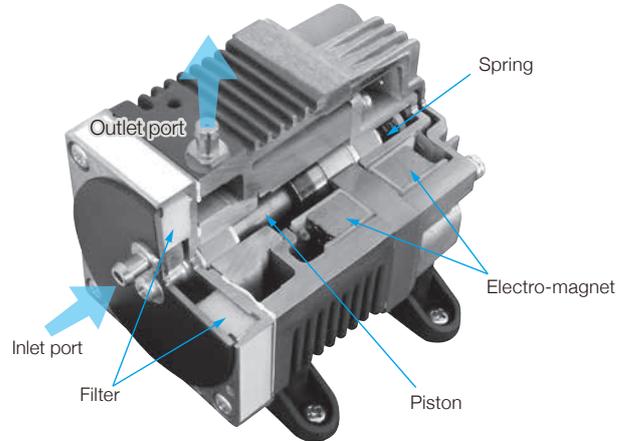

When electric current flows, a magnetic force is generated to pull the piston and the spring is compressed.

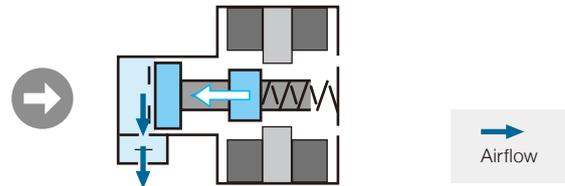


When the electric current stops, the magnetic force is lost and the piston is pushed back by the restoring force of the compressed spring.


Electromagnetic Driven Diaphragm System

The attractive /repulsive force of the electromagnet reciprocates a vibrator that moves the diaphragm to generate pressure.



[AC Power (The effect of using a diaphragm)]

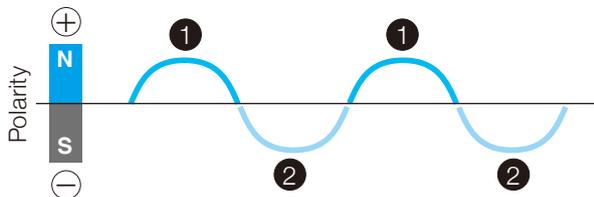

<Structural image>

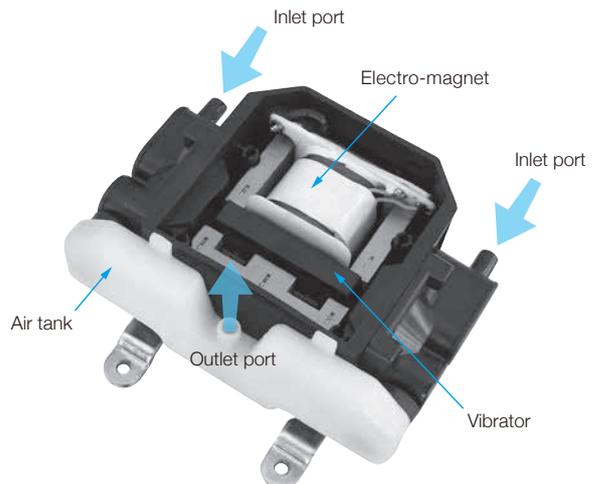


The air is drawn and discharged alternately by the changing polarity of the AC power supply

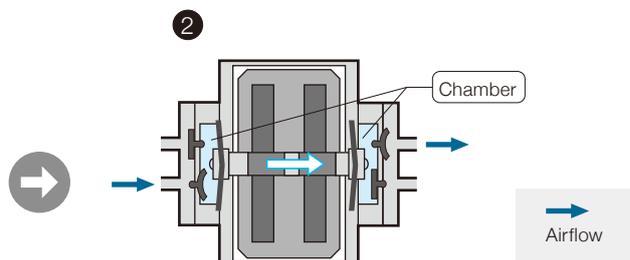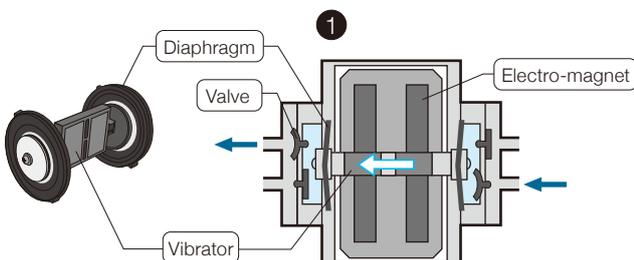


DC Motor Driven Diaphragm System

The rotational motion of the DC motor is converted into a reciprocating motion by the crank, and moves the diaphragm attached to the connecting rod to generate pressure.

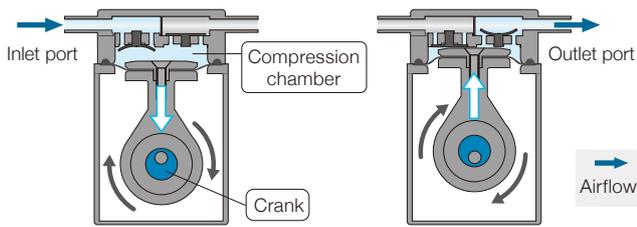


<Parts>

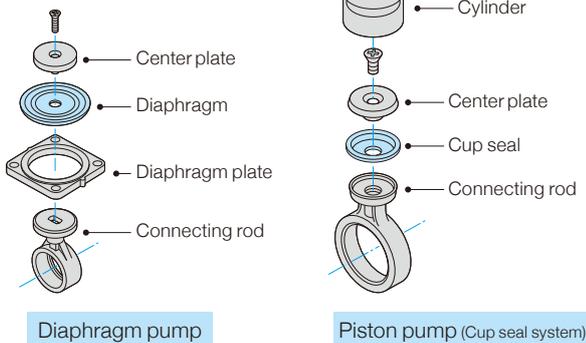

Diaphragm pump

Piston pump (Cup seal system)

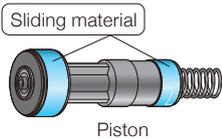


Piston

The know-how of the piston sliding material used for Nitto Kohki linear compressor and vacuum pump is utilized for the cup seal.


DC Motor Driven Piston Pump (Cup seal system)

The rotational motion of the DC motor is converted into a reciprocating motion by the crank, and moves the cup seal attached to the connecting rod to generate pressure.

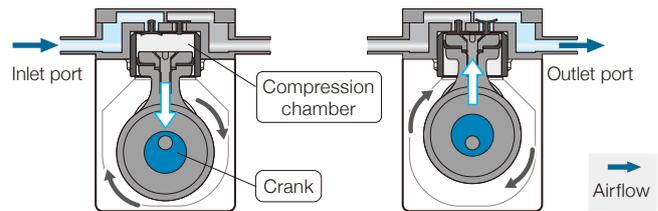

The outer circumference of the seal part (cup seal) flexibly follows the inner wall of the cylinder against the dynamic movement of the piston.


<Structural image> (Common to diaphragm and cup seal)

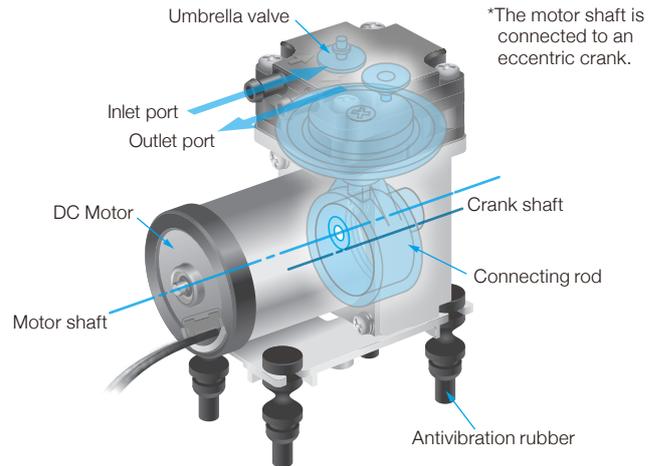

Liquid pump / Diaphragm System

<Pulse absorption mechanism>

1. Suction
2. Discharge. Partial fluid delivery to pulse absorption chamber, not directly forced to outlet port.
3. Cyclical suction drawn into pump is synchronized with the discharge. Pulses are attenuated through the process of 2 and 3.

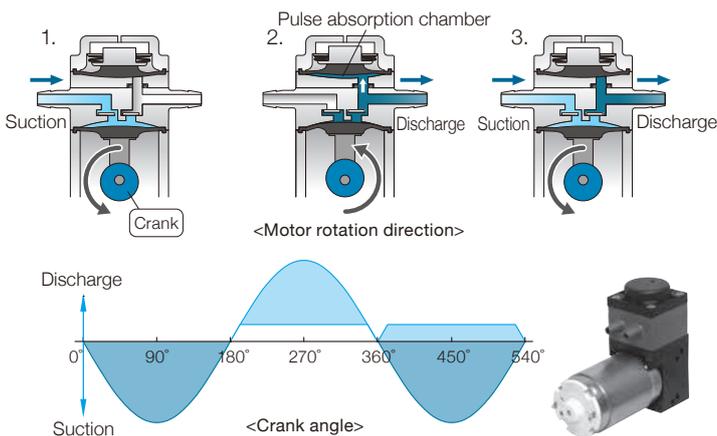


Liquid pump / Piezoelectric pump

<Piezoelectric element>


•Bimorph vibrator

BIMOR PUMP's driving force, the bimorph, comprises the elastic mold (Shim) between two parallel piezoelectric wafers.

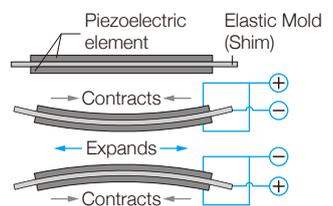

*The shape of Bimorph is circular. It deforms when applied with electricity.

<Cross section>

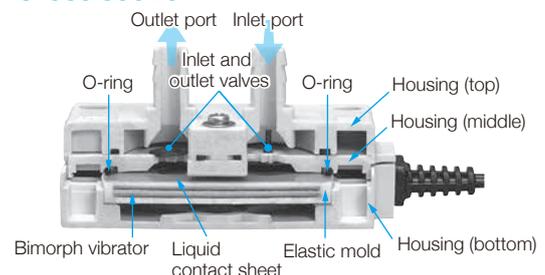

Information Found in the Model Name

The following indications of power consumption, rated pressure and attained vacuum should be used only as a general guideline for model selection.

AC0102

Rated Pressure: 20 kPa {0.2 kgf/cm²}
Rated Consumption: 10 W
Air compressor

VP0125

Attainable Vacuum: -33.3 kPa {-250 mmHg}
Rated Consumption: 10 W
Vacuum pump

Explanation of Technical Terms

Be sure to read the following “Explanation of Technical Terms” before selecting a model appropriate for your application.

Application Examples and Applicable Fluids for Compressors and Vacuum Pumps

Application: for incorporation into equipment **Applicable fluid:** Air

For Compressors & Vacuum Pumps

Rated performance: The average total accumulated time over which the unit can be used without repair, except the maintenance of the filter. This indicates the expected time required for the rated air flow to fall to 80% of the specification value in the rated operation. The actual life might vary depending on the actual operating and environmental conditions such as output pressure setting, maintenance schedule, ventilation, ambient temperature, duty cycle, etc.

MTTF: MTTF (Mean Time to Failure) is the average time that the product will function before it fails. However, this time is reference only and does not guarantee. Since MTTF depends on your actual operating environment and conditions, conduct performance evaluation test with an actual product prior to use.

Rated voltage: The two major types are 115 V AC/60 Hz and 230 V AC/50 Hz (excluding DC motors). While most models can be operated at both 50 Hz and 60 Hz with different performance characteristics, there are some models that are frequency specific.

Duty cycle: The period of operation under the condition that the coil temperature will not exceed the coil insulation class limit.

Rated frequency: In the case of AC drive pumps, the rated frequency will vary according to the model. While some are designed for only 50 Hz or for 60 Hz, some are designed for both 50 Hz and 60 Hz.

Coil insulations: The suggested class, most bare units attaining “E” class, is based on Japanese electric regulations. They are merely suggestions since bare units are considered “components” and are not classified as complete products or systems.

| Coil Insulation Class(for reference only) | (Temperature limit, degrees C) |
|---|--------------------------------|
| A | 100 |
| E | 115 |
| B | 125 |
| F | 150 |

Control method: Be careful when controlling compressors and vacuum pumps with electronic components because the power factor depends upon the load.

Outside & mounting dimensions: Useful for assessing the required space for installation. Include sufficient space surrounding the pump when designing it into your application.

Operating ambient temperature: 0 to 40°C

Operating ambient humidity: 30 to 85% non-condensing

Storage environment temperature: -10 to 60°C

Storage environment humidity: 10 to 90% non-condensing

Improvement Suggestion

Our compressors and vacuum pumps employ a unique internal coil cooling feature to reduce or control the rise in internal temperature. If they are operated at higher than rated pressures, elevated temperatures may result. Should these temperatures become excessive, operating duty cycles may need to be reduced, or the use of an auxiliary cooling fan should be considered.

For Compressors

| | |
|---|---|
| Rated pressure: | This is the pressure point where you will get optimum capabilities for performance and service life and where the pump is designed to have almost the same airflow regardless of a rated frequency of 50 Hz or 60 Hz. |
| Rated airflow: | The discharge airflow volume at the rated pressure. |
| Rated operation: | Operating conditions regarding the rated pressure, rated voltage, and rated frequency. |
| Maximum pressure: | The highest obtainable pressure at which the pump is designed to operate while producing zero discharge airflow (not guaranteed; for reference only). |
| Power consumption: | The wattage during operation at the rated pressure. |
| Electric current: | The electric current during operation at the rated pressure (for reference only). |
| Airflow characteristics: | Discharge pressure-airflow curve (for reference only). |
| Power consumption characteristics: | Discharge pressure-power consumption curve (for reference only). |

For Vacuum Pumps

| | |
|---|--|
| Attainable vacuum : | The highest vacuum the pump can attain with the pump inlet closed (except some of the exclusive models). *The degree of vacuum shown in this catalog is gauge pressure. |
| Free air displacement: | The airflow volume at 0 vacuum (within 3 minutes after starting). |
| Power consumption: | The maximum wattage on the power consumption curve when measured against vacuum levels up to the pumps attainable vacuum. |
| Electric current: | The maximum electric current on the current characteristics curve when measured against vacuum levels up to the pumps attainable vacuum. (for reference only). |
| Airflow characteristics: | Vacuum-airflow curve (for reference only). |
| Power consumption characteristics: | Vacuum-power consumption curve (for reference only). |
| Exhaust characteristics: | The time required to attain the respective vacuum in a 10 liter container (for reference only). |

For DC Pumps

| | |
|---------------------------------------|---|
| Free air displacement: | The airflow volume at 0 vacuum (within 3 minutes after starting). |
| Operating ambient temperature: | 0 to 40°C (5 to 50°C for DP0105 only) |
| Operating ambient humidity: | 30 to 85% non-condensing |

Start-up the pump at the same level as the atmospheric pressure (Similarly in the case of DPE series pumps)

For Liquid Pumps

| | |
|-------------------------------|--|
| Self-priming pressure: | The power the pump requires to draw up 25°C water. 1 kPa is equal to the power needed to draw up 25°C water 10 cm. |
|-------------------------------|--|

This catalog will give the guidelines needed to determine the appropriate model for your application(s). However, in certain cases you may need further detailed information, which will be provided in the form of a specifications sheet for each model/version by our technical staff who will further assist you in your selection.

**Specifications and designs are subject to change at any time without notice.
It is recommended that OEM customers confirm the required specifications in writing before placing orders.**

Experience gained in designing, engineering, manufacturing and continually perfecting our products in thousands of applications has resulted in a “functionally intelligent” package. Please review these key design features and see how every design element contributes overall to the creation of a superior compressor or vacuum pump.

The Key Design Features of the Linear-motor-driven Free Piston System

| | |
|---|---|
| <p>Compact and Lightweight With the motor and compressor combined into the single structure</p>  <p>With the piston as the only moving part, efficient space utilization enables our pump to be considerably smaller and lighter than other pumps. This allows the OEM design engineer increased packaging options for other internal components.</p> | <p>Low Vibration Using an ultra-lightweight piston</p>  <p>Reducing the moving parts to only the piston minimizes reactive force vibrations to the pump body. In addition, the secondary vibrations are isolated or absorbed through the anti-vibration rubber feet.</p> |
| <p>Low Noise Level No transmission assemblies, means less noise</p>  <p>With no need for complicated transmission mechanisms riding on ball bearings, or actuating linkages creating friction and noise, NITTO KOHKI's pumps are inherently quieter. Additionally, the almost completely sealed configuration further suppresses secondary internal operating noises.</p> | <p>Clean Operation – Clean Air Due to oil-less construction</p>  <p>All wearing surfaces use no oil, grease or other contaminating lubricants. The combination of a precision fluoropolymer sleeved piston assisted by an “air-bearing effect” made possible through a unique air path design, assures that the outlet air is completely free of oil.</p> |
| <p>Low Power Consumption Truly energy efficient through integrated design</p>  <p>Since the low mass piston is the only moving part, frictional losses are minimized, allowing lower starting and running current, and thus greater efficiency. Related benefits are realized through a lower rise in temperature, facilitating a longer operating life for the pump and the other components within your system.</p> | <p>Overload Protection Structure Protects against burnout</p>  <p>As the pressure within the compressor increases, the piston stroke decreases. Along with this, electric current decreases. Thus a temporary overload will not cause a failure or the pump to burnout.</p> |
| <p>Minimal Pulsating Effect Due to the ideal piston stroke</p>  <p>The piston's mechanical resonance speed is synchronized with the input power frequency regardless of the load, i.e., 3000 strokes at 50 Hz, and 3600 strokes at 60 Hz per minute. This high speed produces shorter pulses which translate into a smoother, more uniform and “linear” motion.</p> | <p>Instant Response Enabling easy start-ups in frequent on-off short cycle applications</p>  <p>A very low starting current enables our pumps to produce immediate performance in quick short cycle applications, even in the presence of residual back pressure.</p> |
| <p>Easy Maintenance Only air filter and piston to change</p>  <p>The oil-less construction requires no lubrication. A simple mechanism containing the piston as the only moving part causes no failure or burning due to an overload and provides stable performance over a long period of time.</p> | <p>Longer Lifetime Increased OEM value</p>  <p>All key design features listed here combine to provide superior performance in all the important aspects of superior pump design. This enables the OEM engineer to have complete confidence in incorporating the unit into the most demanding systems, in the most advanced equipment.</p> |

AIR COMPRESSOR

AC series
Low pressure


AC series
Intermediate pressure

- AC0102 — 13
- AC0201A — 14
- AC0301A — 15
- AC0401A — 16
- AC0602 — 17
- AC0901 — 18
- AC0902 — 19

- AC0105 — 20
- AC0110 — 21
- AC0207 — 22
- AC0410A — 23
- AC0610A — 24
- AC0910 — 25
- AC0920 — 26

Made to Order

- AC0210 — 22

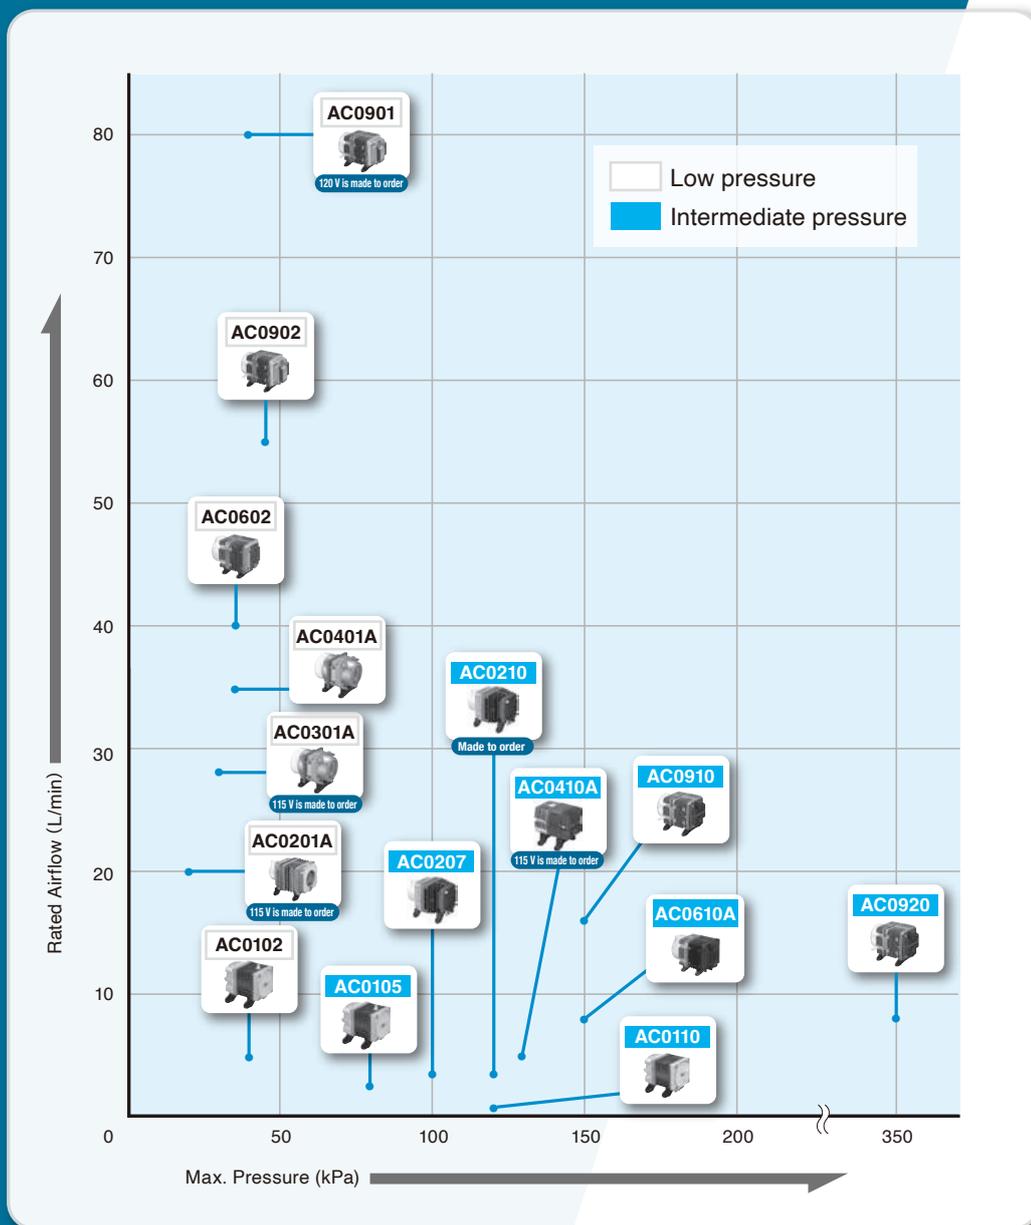



Compressor

Model **ACO201A**

115 V is made to order



Airflow & Power Consumption

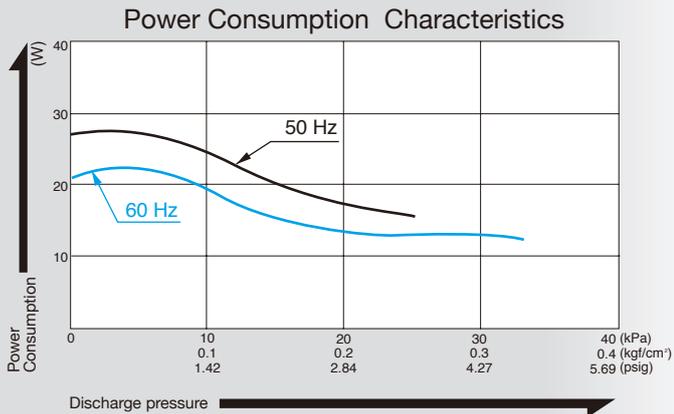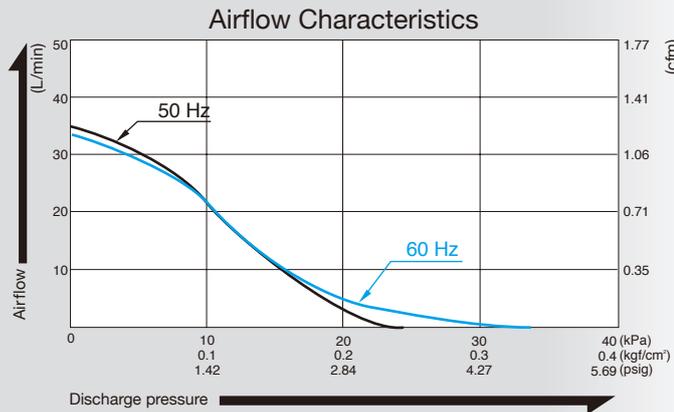

Specifications

| | | |
|-----------------------|---|--------------------|
| Rated Pressure | 10 kPa (0.1 kgf/cm ²) 0.1 bar 1.42 psig | |
| Rated Airflow | 20 L/min 0.71 cfm | |
| Maximum Pressure | 20 kPa (0.2 kgf/cm ²) 0.2 bar 2.84 psig | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 23 W / 19 W | |
| Rated Performance | 6,000 hours | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | Class E equivalent |
| Mounting Dimensions | 73 (L) x 88 (W) mm 2 - 7/8" (L) x 3 - 15/32" (W) | |
| Weight | 1.5 kg 3.3 Lbs | |
| Leadwire Length | 200 mm 7 - 7/8" | |

Application Examples


Seat Lifter



Bed Sore Prevention Mattress



External Dimensions (Unit: mm)

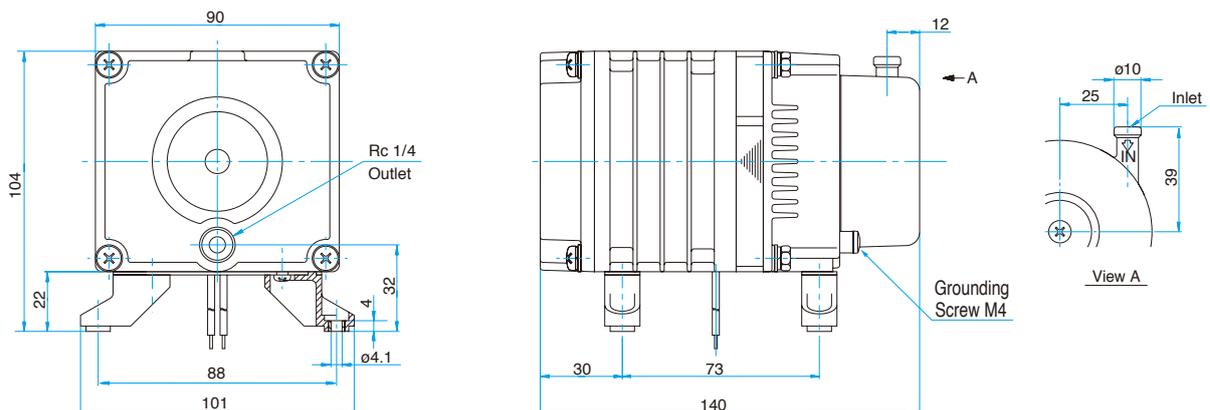



Compressor

Model **AC0301A**

115 V is made to order



Airflow & Power Consumption

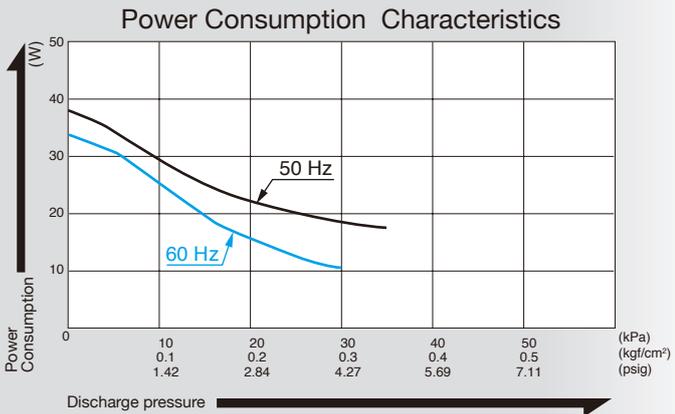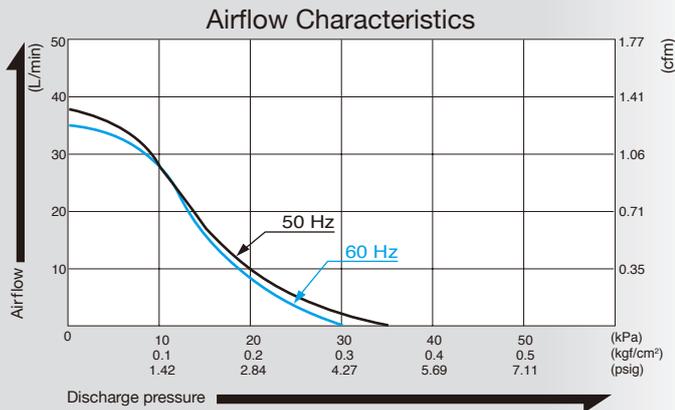

Specifications

| | | |
|-----------------------|---|--------------------|
| Rated Pressure | 10 kPa (0.1 kgf/cm ²) 0.1 bar 1.42 psig | |
| Rated Airflow | 28 L/min 0.99 cfm | |
| Maximum Pressure | 30 kPa (0.3 kgf/cm ²) 0.3 bar 4.27 psig | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz |
| Power Consumption | 25 W | 29 W |
| Rated Performance | 10,000 hours | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | Class E equivalent |
| Mounting Dimensions | 68 (L) x 84 (W) mm 2 - 43/64" (L) x 3 - 5/16" (W) | |
| Weight | 1.9 kg 4.2 Lbs | |
| Leadwire Length | 200 mm 7 - 7/8" | |

Application Examples



Liquid Mixer



Seat Lifter



External Dimensions (Unit: mm)

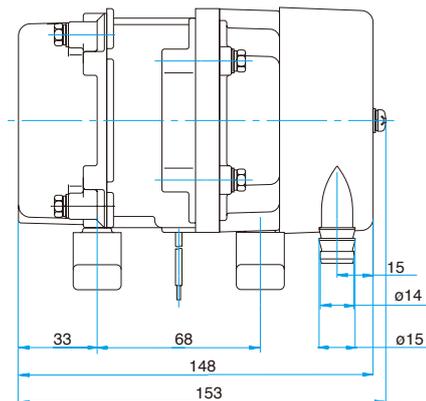
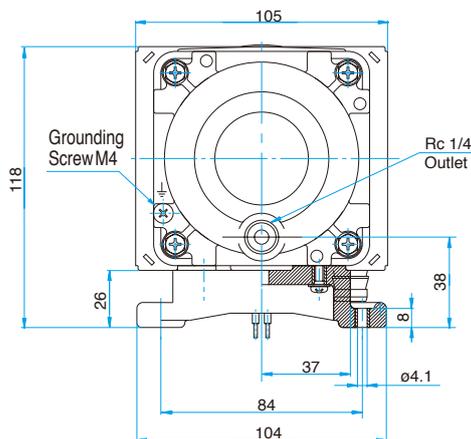


Compressor

Model AC0401A



Airflow & Power Consumption

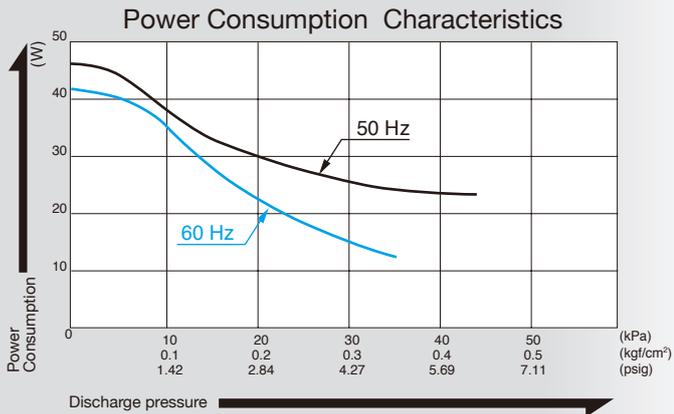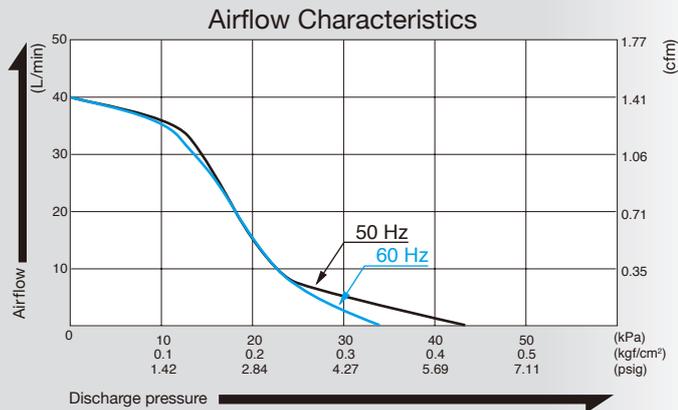

Specifications


| | | |
|-----------------------|---|---|
| Rated Pressure | 10 kPa (0.1 kgf/cm ²) 0.1 bar 1.42 psig | |
| Rated Airflow | 35 L/min 1.24 cfm | |
| Maximum Pressure | 30 kPa (0.3 kgf/cm ²) 0.3 bar 4.27 psig | 35 kPa (0.35 kgf/cm ²) 0.35 bar 4.98 psig |
| Rated Voltage | 120 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz |
| Power Consumption | 35 W | 38 W |
| Rated Performance | 10,000 hours | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A for UL | Class E equivalent |
| Mounting Dimensions | 68 (L) x 84 (W) mm 2 - 43/64" (L) x 3 - 5/16" (W) | |
| Weight | 1.9 kg 4.2 Lbs | |
| Leadwire Length | 200 mm 7 - 7/8" | |

Application Examples



Liquid Mixer



Air Bearing

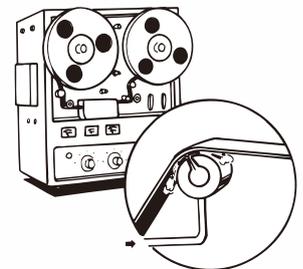


External Dimensions (Unit: mm)

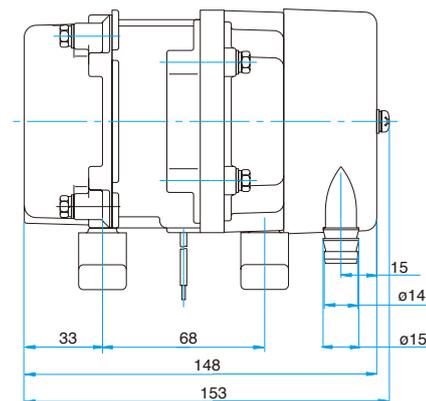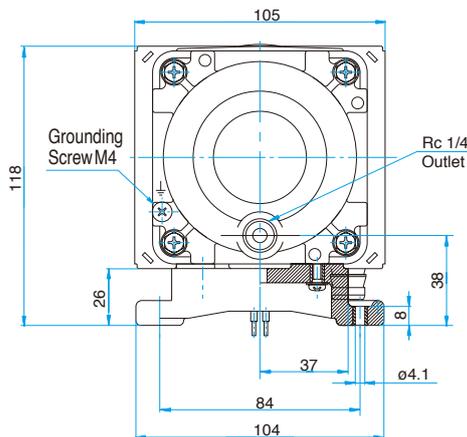

Compressor


Model AC0901

120 V is made to order

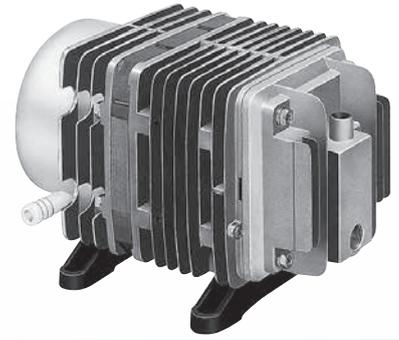


Airflow & Power Consumption

Airflow Characteristics

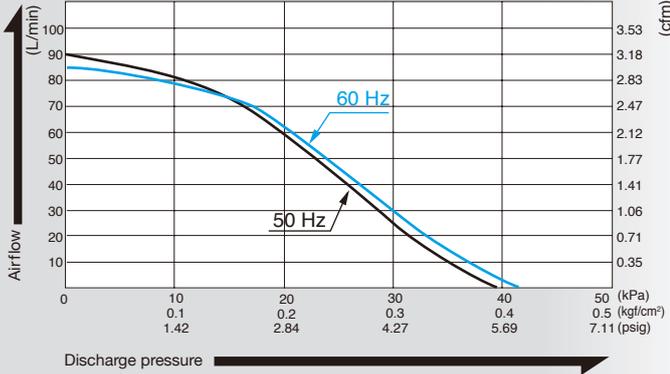

Power Consumption Characteristics

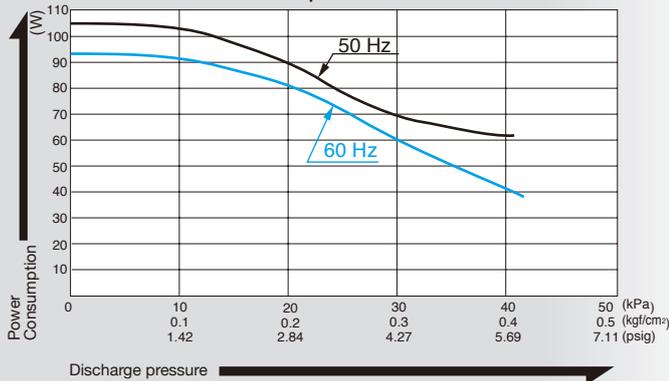


Specifications

| | | |
|-----------------------|---|--------------------|
| Rated Pressure | 10 kPa (0.1 kgf/cm ²) 0.1 bar 1.42 psig | |
| Rated Airflow | 80 L/min 2.83 cfm | |
| Maximum Pressure | 40 kPa (0.4 kgf/cm ²) 0.4 bar 5.69 psig | |
| Rated Voltage | 120 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz |
| Power Consumption | 88 W | 99 W |
| Rated Performance | 10,000 hours | |
| Outlet | ISO Rc 3/8 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | Class E equivalent |
| Mounting Dimensions | 102 (L) x 130 (W) mm 4 - 1/64" (L) x 5 - 1/8" (W) | |
| Weight | 4.9 kg 10.8 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | |

Application Examples



Air Lifter for Bathtub

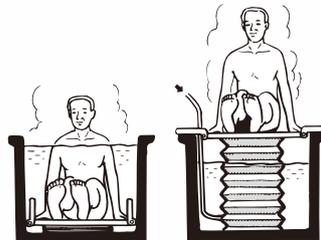

Liquid Dispenser




External Dimensions (Unit: mm)

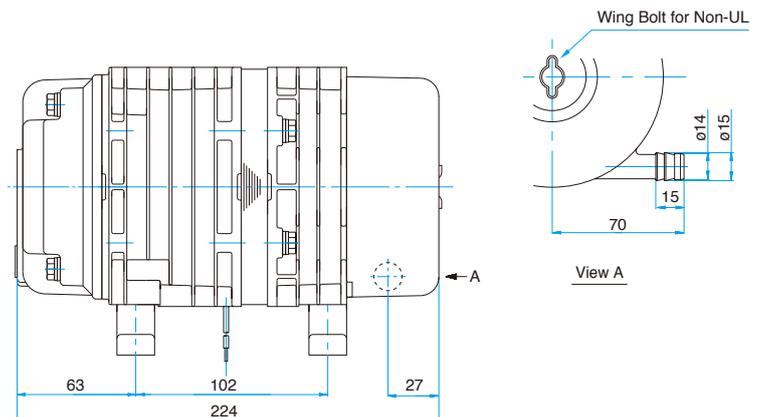
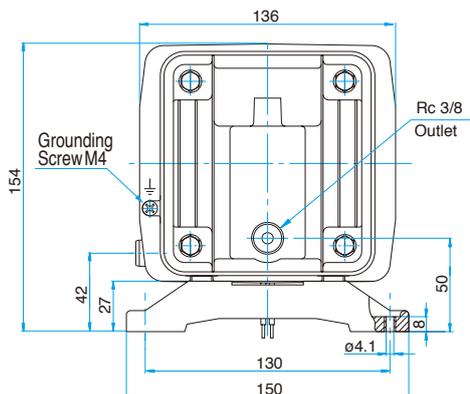


Compressor

Model AC0902

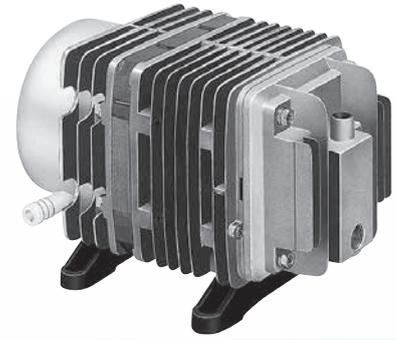

Airflow & Power Consumption

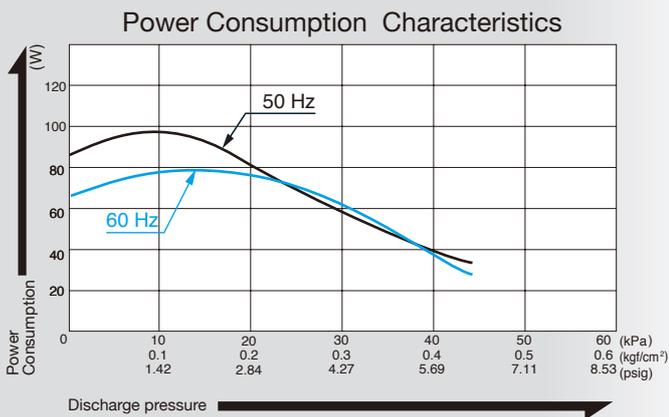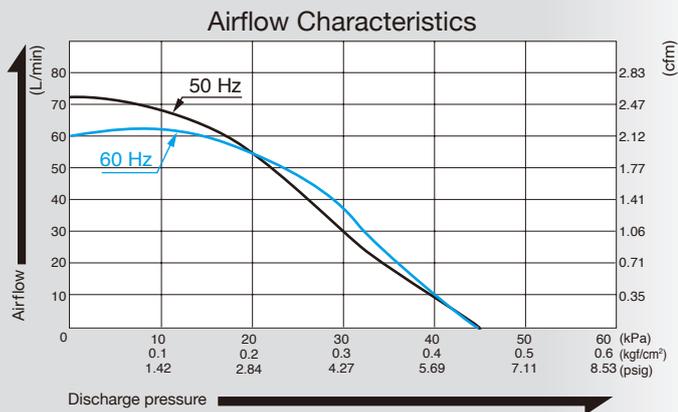


Specifications

| | | |
|-----------------------|---|-----------------------|
| Rated Pressure | 20 kPa (0.2 kgf/cm ²) 0.2 bar 2.84 psig | |
| Rated Airflow | 55 L/min 1.94 cfm | |
| Maximum Pressure | 45 kPa (0.45 kgf/cm ²) 0.45 bar 6.40 psig | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz |
| Power Consumption | 75 W | 85 W |
| Rated Performance | 10,000 hours | |
| Outlet | ISO Rc 3/8 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | Class E equivalent |
| Mounting Dimensions | 102 (L) x 130 (W) mm 4 - 1/64" (L) x 5 - 1/8" (W) | |
| Weight | 4.9 kg 10.8 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | 320 mm 12 - 19/32" |



Application Examples

Air Lifter for Bathtub

Liquid Dispenser

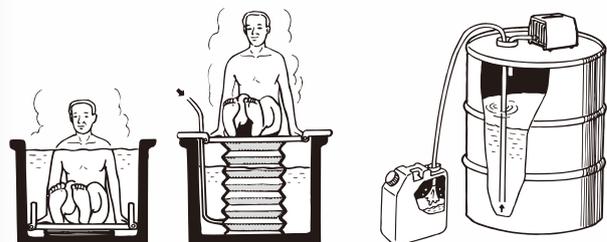


External Dimensions (Unit: mm)

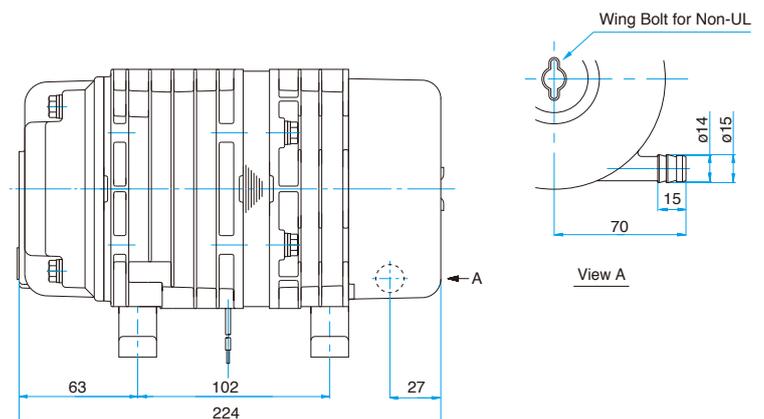
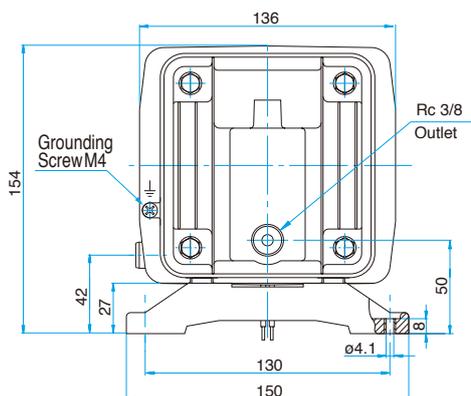


Compressor

Model AC0105

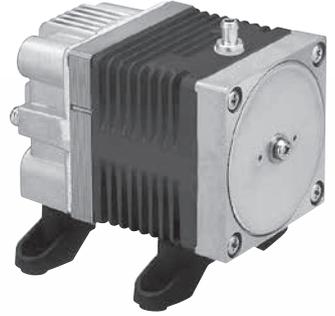

Airflow & Power Consumption

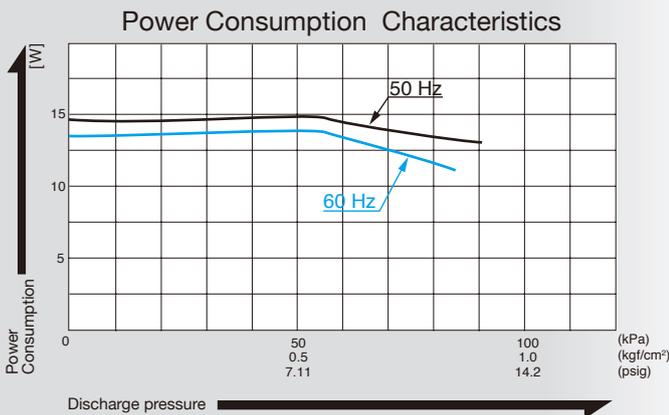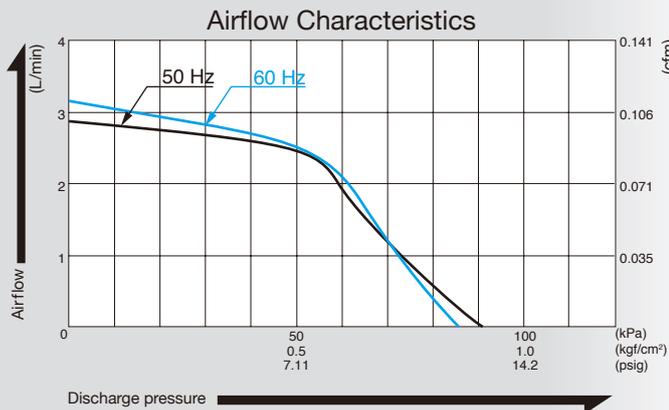


Specifications


| | | |
|--------------------------|---|--------------------|
| Rated Pressure | 50 kPa (0.5 kgf/cm ²) 0.5 bar 7.11 psig | |
| Rated Airflow | 2.5 L/min 0.088 cfm | |
| Maximum Pressure | 80 kPa (0.8 kgf/cm ²) 0.8 bar 11.4 psig | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 15 W / 14 W | |
| Rated Performance (MTTF) | 5,000 hours | |
| Outlet | 6 mm O.D. hose barb | |
| Duty Cycle | 60 minutes | |
| Coil Insulation Class | Class B for UL | Class E equivalent |
| Mounting Dimensions | 48 (L) x 62 (W) mm 1 - 57/64" (L) x 2 - 7/16" (W) | |
| Weight | 0.7 kg 1.54 Lbs | |
| Leadwire Length | 200 mm 7 - 7/8" | |

Application Examples


Saline Water Splasher

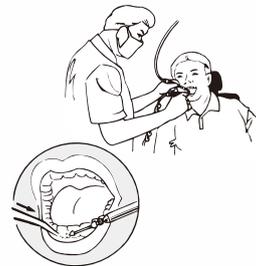

Copy Paper Separator

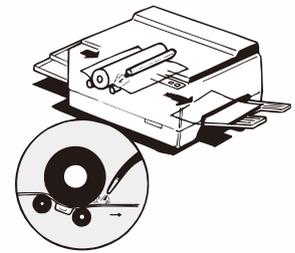


External Dimensions (Unit: mm)

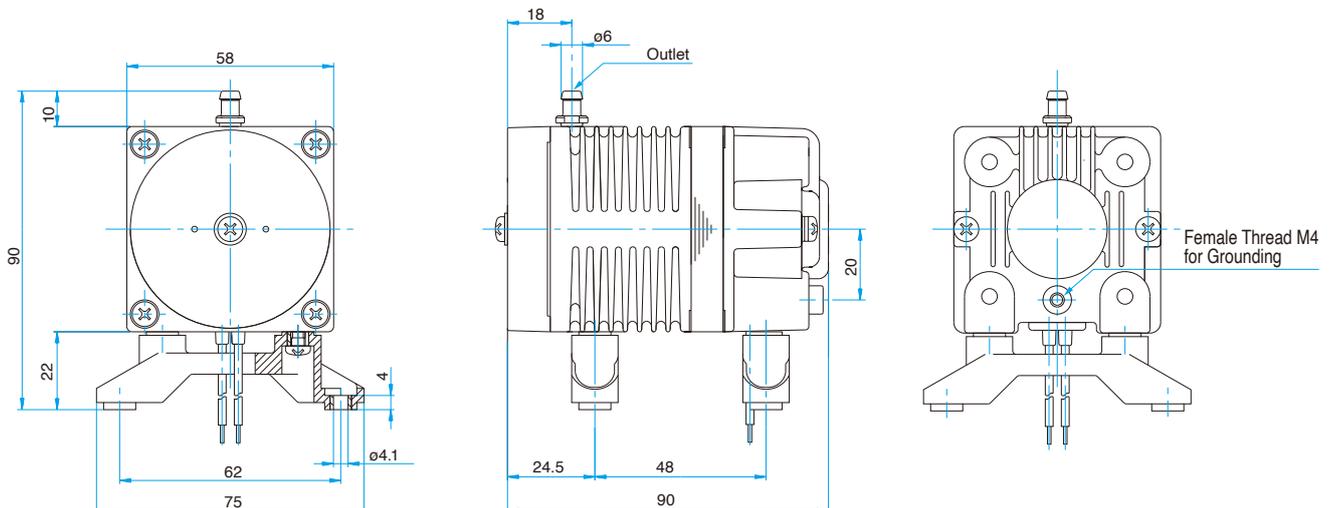


Compressor

Model AC0110

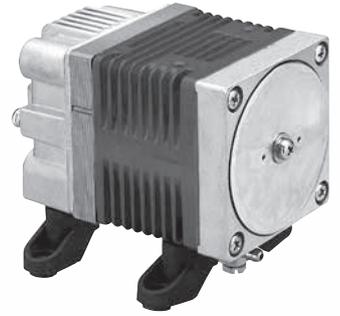


Airflow & Power Consumption

Airflow Characteristics

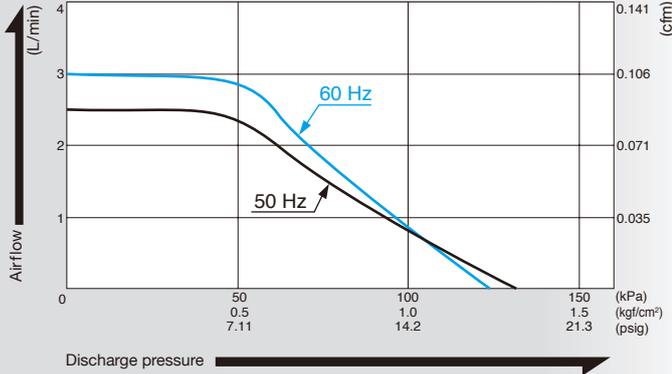

Power Consumption Characteristics

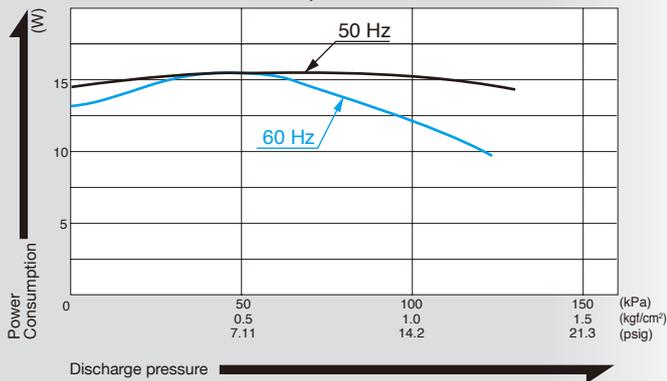


Specifications


| | | |
|--------------------------|--|--|
| Rated Pressure | 100 kPa (1.0 kgf/cm ²) 1.0 bar 14.2 psig | |
| Rated Airflow | 1.0 L/min 0.035 cfm | 0.8 L/min 0.028 cfm |
| Maximum Pressure | 130 kPa (1.3 kgf/cm ²) 1.3 bar 18.5 psig | 120 kPa (1.2 kgf/cm ²) 1.2 bar 17.1 psig |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 15 W / 12 W | |
| Rated Performance (MTTF) | 4,000 hours | |
| Outlet | 6 mm O.D. hose barb | |
| Duty Cycle | 30 minutes | |
| Coil Insulation Class | Class B for UL | Class E equivalent |
| Mounting Dimensions | 48.5 (L) x 62 (W) mm 1 - 29/32" (L) x 2 - 7/16" (W) | 48 (L) x 62 (W) mm 1 - 57/64" (L) x 2 - 7/16" (W) |
| Weight | 0.7 kg 1.54 Lbs | |
| Leadwire Length | 200 mm 7 - 7/8" | |

Application Examples

Automatic Dispenser

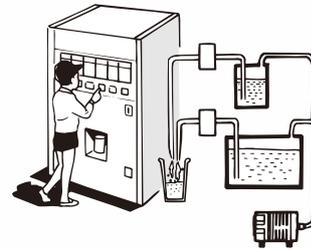

External Dimensions (Unit: mm)

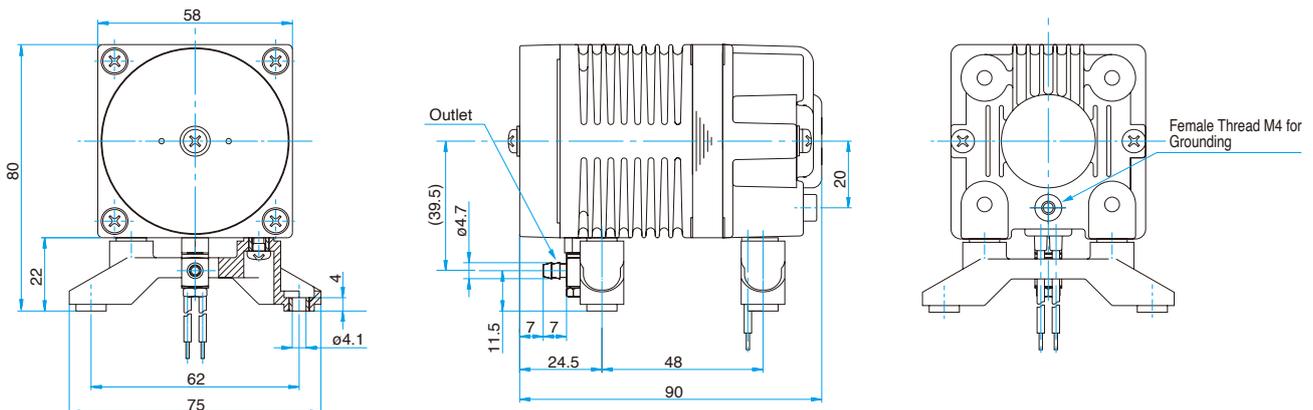





Compressor

Model AC0207 AC0210

Made to order



Airflow & Power Consumption

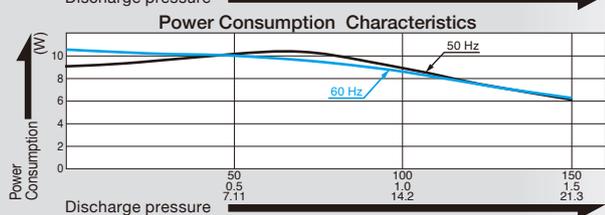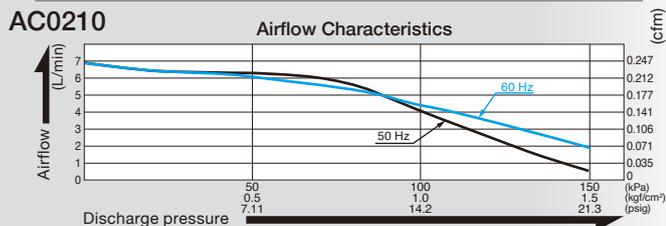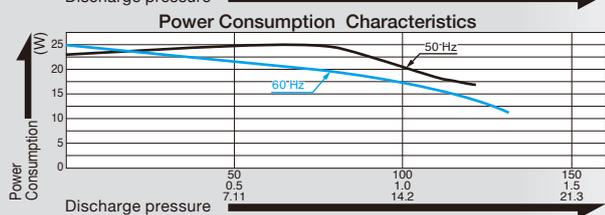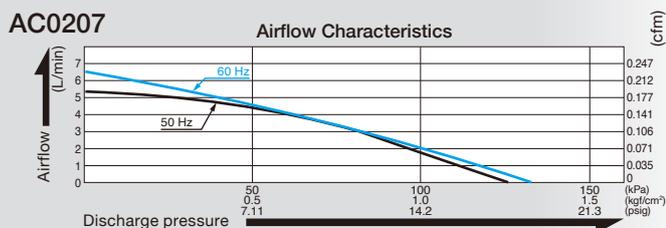


Specifications

| Model | AC0207 | | AC0210 | |
|-----------------------|--|--------------------|--|--------------------|
| Rated Pressure | 70 kPa (0.7 kgf/cm ²) 0.7 bar 9.96 psig | | 100 kPa (1.0 kgf/cm ²) 1.0 bar 14.2 psig | |
| Rated Airflow | 3.5 L/min 0.124 cfm | | | |
| Maximum Pressure | 100 kPa (1.0 kgf/cm ²) 1.0 bar 14.2 psig | | 120 kPa (1.2 kgf/cm ²) 1.2 bar 17.1 psig | |
| Rated Voltage | 115 V AC | 230 V AC | 115 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | | 60 Hz | 50 Hz |
| Power Consumption | 25 W / 20 W | | 23 W | 24 W |
| Rated Performance | 3,000 hours | | 5,000 hours | |
| Outlet | 4.7 mm O.D. hose barb | | | |
| Duty Cycle | Continuous | | | |
| Coil Insulation Class | Class B for UL | Class E equivalent | Class B for UL | Class E equivalent |
| Mounting Dimensions | 75 (L) x 88 (W) mm 2 - 61/64" (L) x 3 - 15/32" (W) | | 76 (L) x 88 (W) mm 2 - 63/64" (L) x 3 - 15/32" (W) | |
| Weight | 1.7 kg 3.7 Lbs | | | |
| Leadwire Length | 200 mm 7 - 7/8" | | 300 mm 11 - 13/16" | |

Application Examples




Air Bearing for Precision Machines

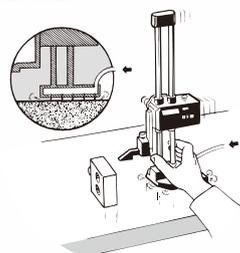

Nebulizer



External Dimensions (Unit: mm)

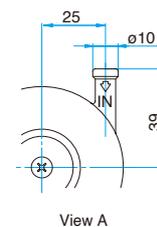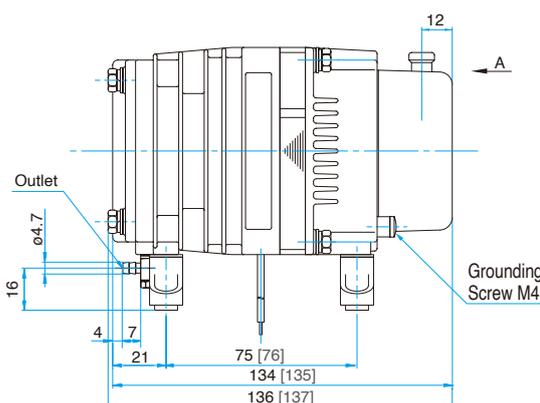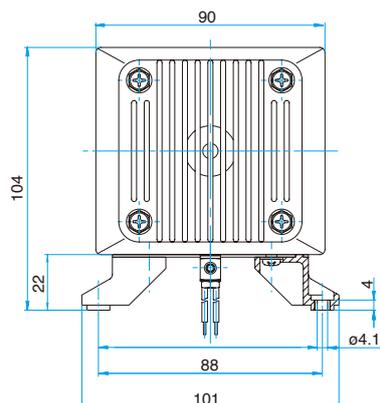



AC0207 [AC0210]

Compressor

Model **AC0410A**



Airflow & Power Consumption

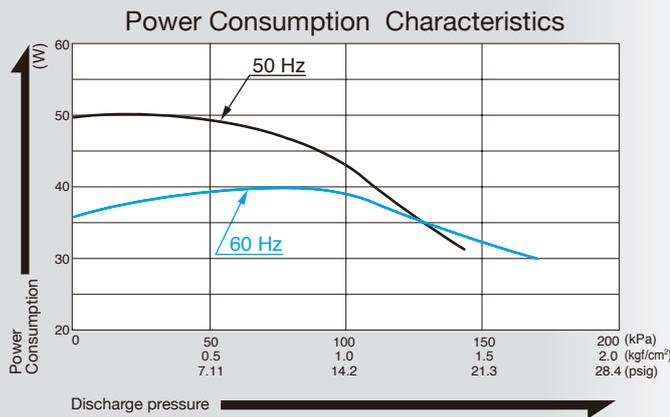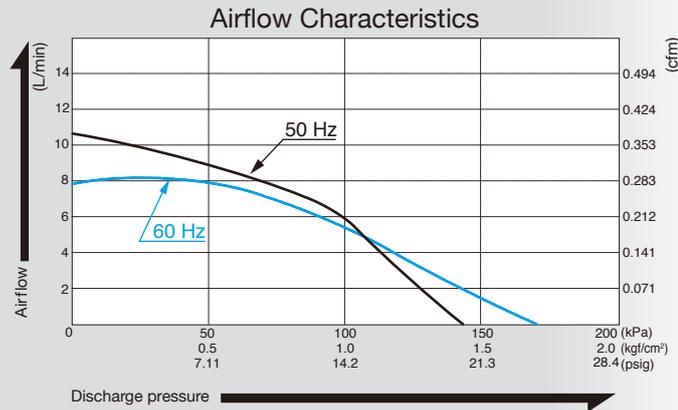


Specifications


| | | |
|-----------------------|--|----------------------|
| Rated Pressure | 100 kPa (1.0 kgf/cm ²) 1.0 bar 14.2 psig | |
| Rated Airflow | 5 L/min 0.177 cfm | |
| Maximum Pressure | 130 kPa (1.3 kgf/cm ²) 1.3 bar 18.5 psig | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz / 60 Hz |
| Power Consumption | 39 W | 43 W / 39 W |
| Rated Performance | 3,000 hours | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B equivalent | |
| Mounting Dimensions | 68 (L) x 98 (W) mm 2 - 43/64" (L) x 3 - 55/64" (W) | |
| Weight | 2.1 kg 4.6 Lbs | |
| Leadwire Length | 220 mm 8 - 21/32" | 170 mm 6 - 11/16" |

Application Examples



Industrial Sewing Machine

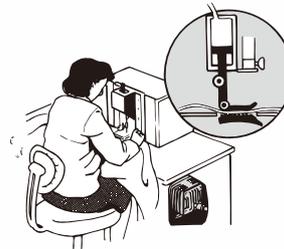

Various Aerosol Sprays

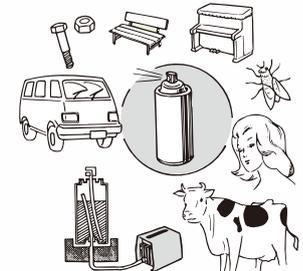


External Dimensions (Unit: mm)

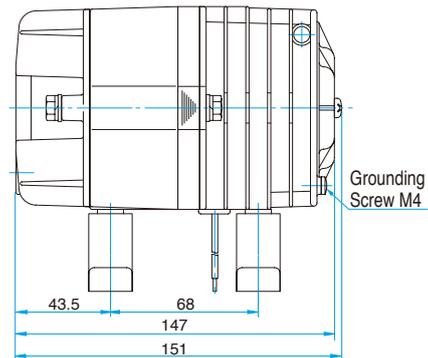
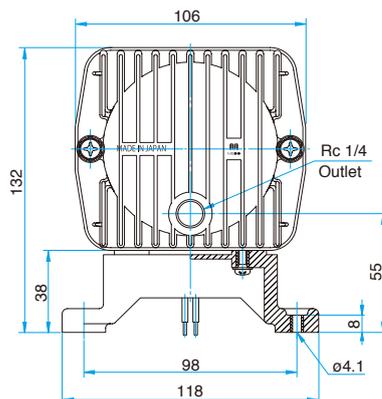


Compressor

Model AC0910

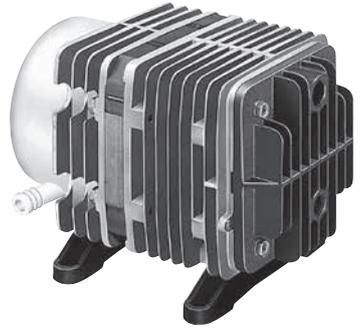


Airflow & Power Consumption

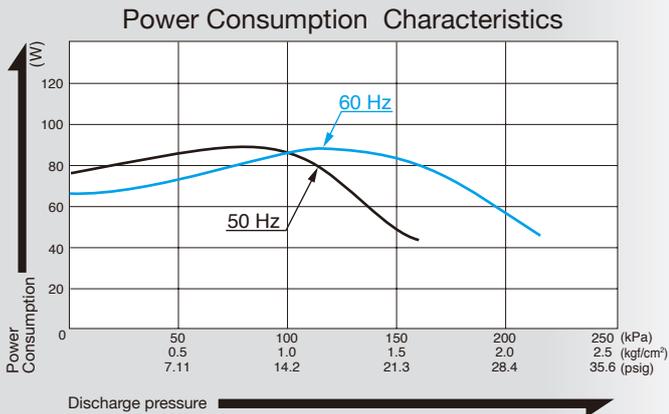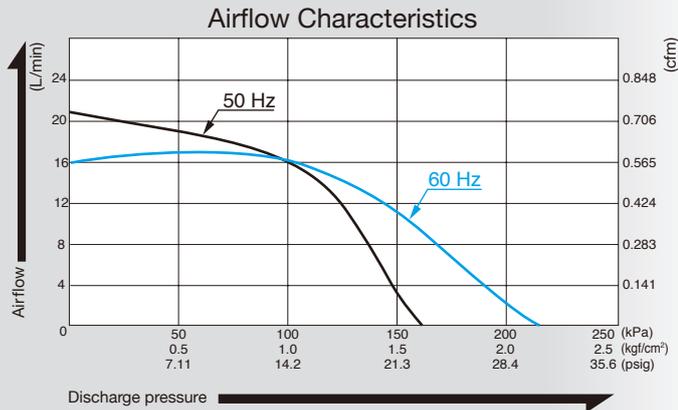


Specifications

| | | |
|-----------------------|--|-----------------------|
| Rated Pressure | 100 kPa (1.0 kgf/cm ²) 1.0 bar 14.2 psig | |
| Rated Airflow | 16 L/min 0.57 cfm | |
| Maximum Pressure | 150 kPa (1.5 kgf/cm ²) 1.5 bar 21.3 psig | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz / 60 Hz |
| Power Consumption | 85 W | 90 W / 85 W |
| Rated Performance | 3,000 hours | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | |
| Mounting Dimensions | 102 (L) x 130 (W) mm 4 - 1/64" (L) x 5 - 1/8" (W) | |
| Weight | 4.9 kg 10.8 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | 320 mm 12 - 19/32" |

Application Examples


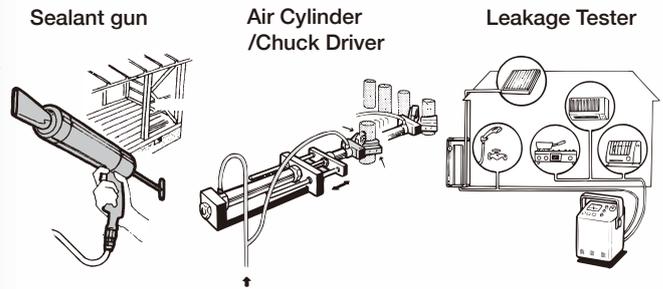


External Dimensions (Unit: mm)

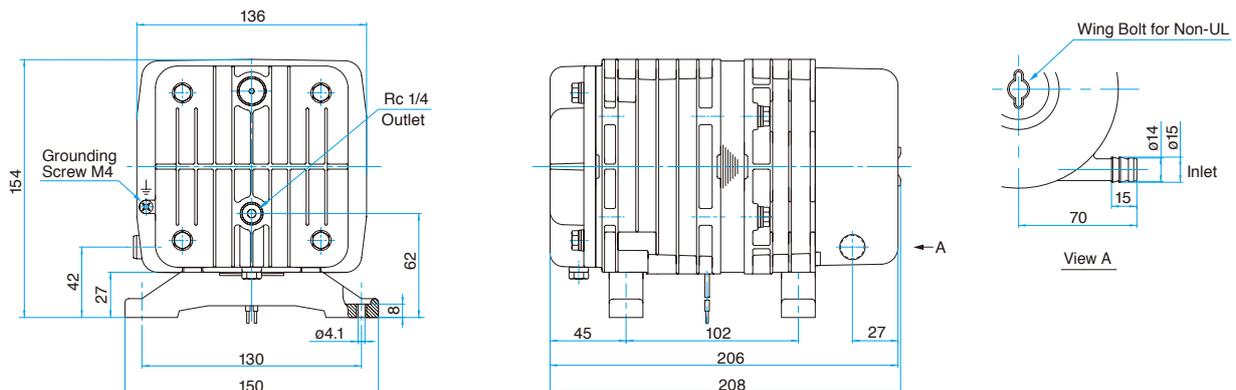


Compressor

Model AC0920

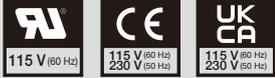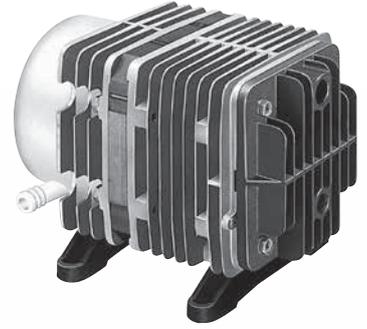

Airflow & Power Consumption

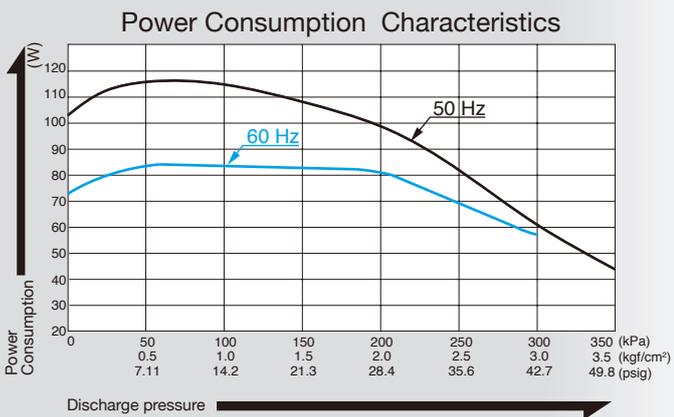


Specifications


| | | |
|-----------------------|--|--|
| Rated Pressure | 200 kPa (2.0 kgf/cm ²) 2.0 bar 28.4 psig | |
| Rated Airflow | 8 L/min 0.283 cfm | |
| Maximum Pressure | 280 kPa (2.8 kgf/cm ²) 2.8 bar 39.8 psig | 350 kPa (3.5 kgf/cm ²) 3.4 bar 49.7 psig |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz |
| Power Consumption | 81 W | 100 W |
| Rated Performance | 3,000 hours | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | 30 minutes | |
| Coil Insulation Class | Class B for UL | Class E equivalent |
| Mounting Dimensions | 102 (L) x 130 (W) mm 4 - 1/64" (L) x 5 - 1/8" (W) | |
| Weight | 4.9 kg 10.8 Lbs | 5 kg 11 Lbs |
| Leadwire Length | 300 mm 11 - 13/16" | 320 mm 12 - 19/32" |

Application Examples




Air Cylinder/Chuck Driver

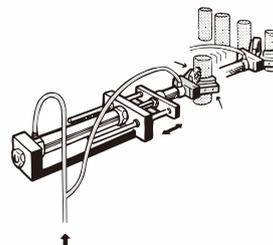

Leakage Tester

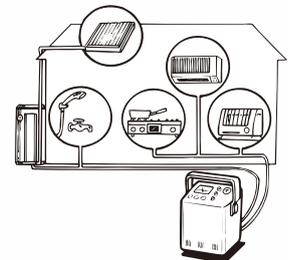


External Dimensions (Unit: mm)

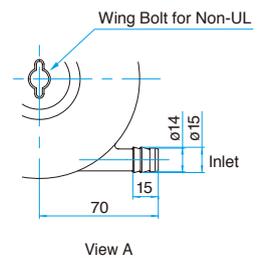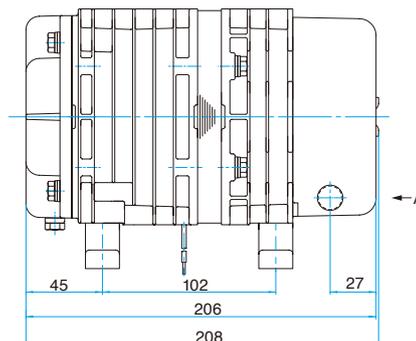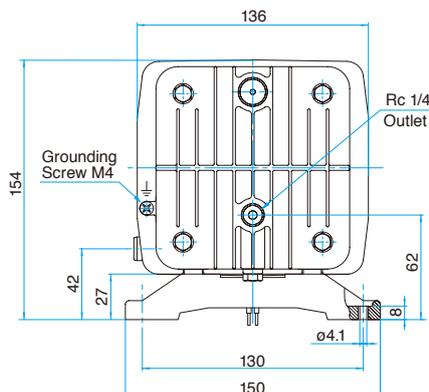

VACUUM PUMP


VP series

| | | |
|---------|---|----|
| VP0125 | — | 29 |
| VP0140 | — | 30 |
| VP0435A | — | 31 |
| VP0450 | — | 32 |
| VP0625 | — | 33 |
| VP0660 | — | 34 |
| VP0940 | — | 35 |
| VP0940T | — | 36 |



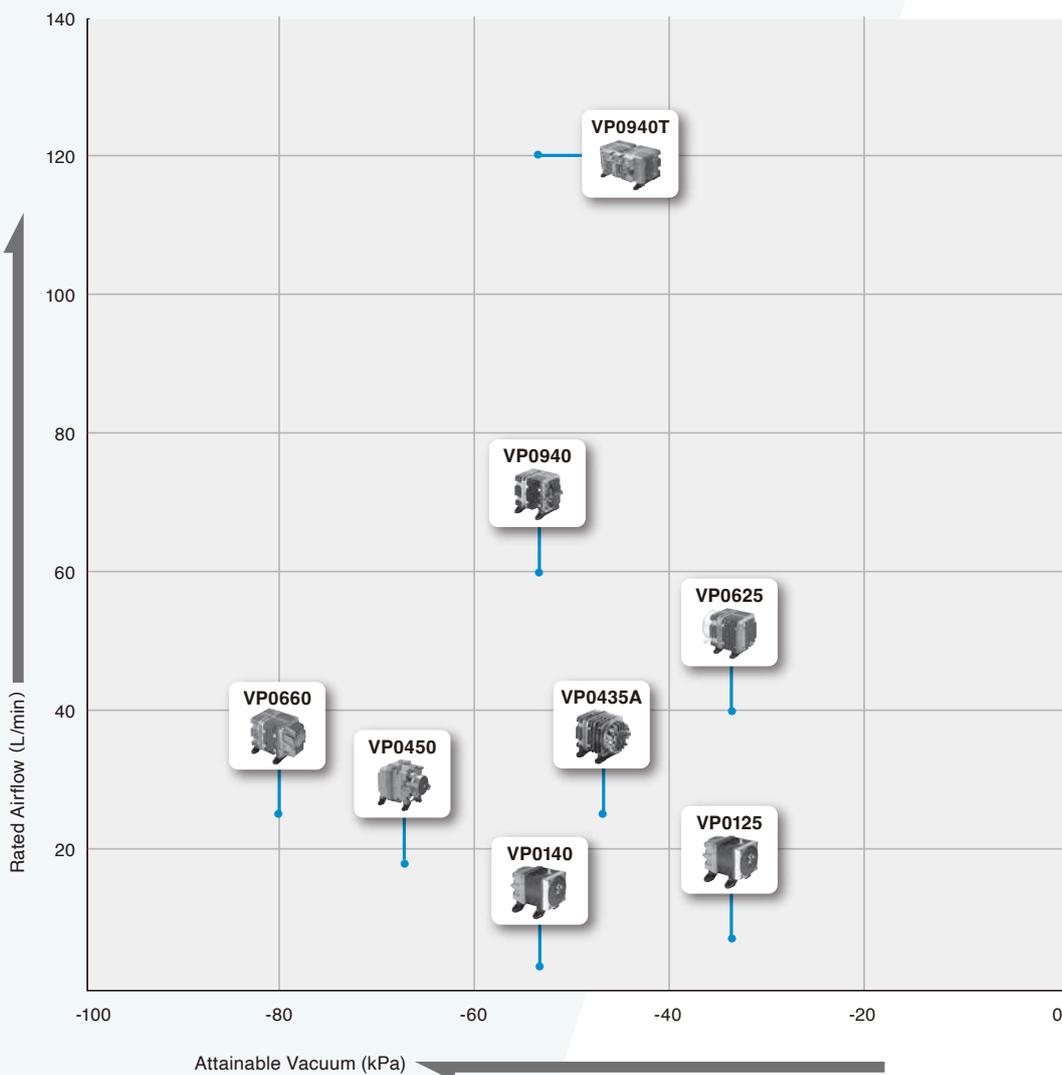


Vacuum Pump

Model VP0125

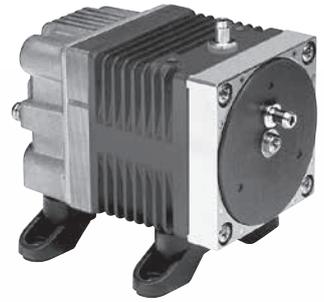

Airflow & Power Consumption

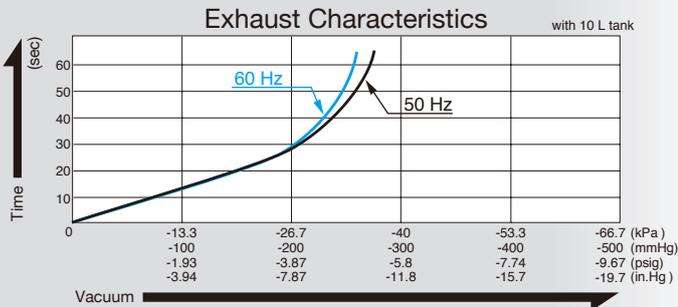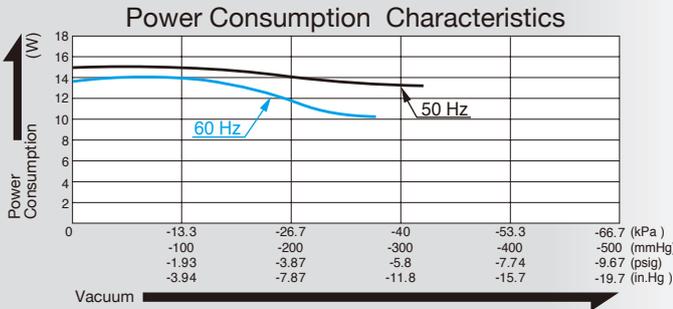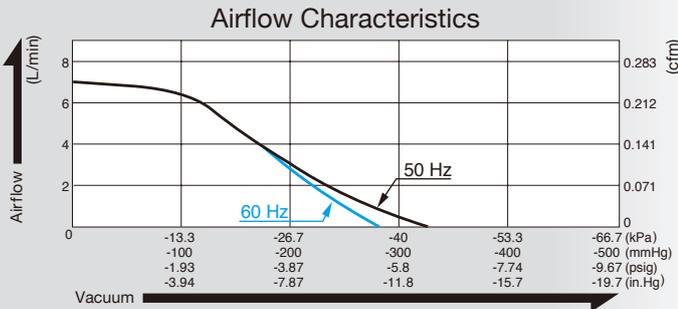

Specifications


| | | |
|--------------------------|--|---------------|
| Attainable Vacuum | -33.3 kPa (-250 mmHg) -333 mbar -9.84 in. Hg | |
| Free Air Displacement | 7 L/min 0.247 cfm | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz / 60 Hz |
| Power Consumption | 14 W | 15 W / 14 W |
| Rated Performance (MTTF) | 10,000 hours | |
| Inlet | 6 mm O.D. hose barb | |
| Outlet | 6 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | |
| Mounting Dimensions | 48 (L) x 62 (W) mm 1 - 57/64" (L) x 2 - 7/16" (W) | |
| Weight | 0.7 kg | 1.54 Lbs |
| Leadwire Length | 200 mm | 7 - 7/8" |

Application Examples


Dripping Machine



Paper Card Dispenser

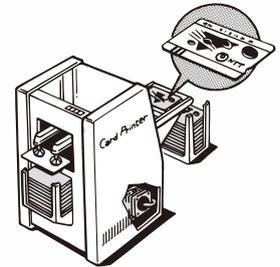


External Dimensions (Unit: mm)



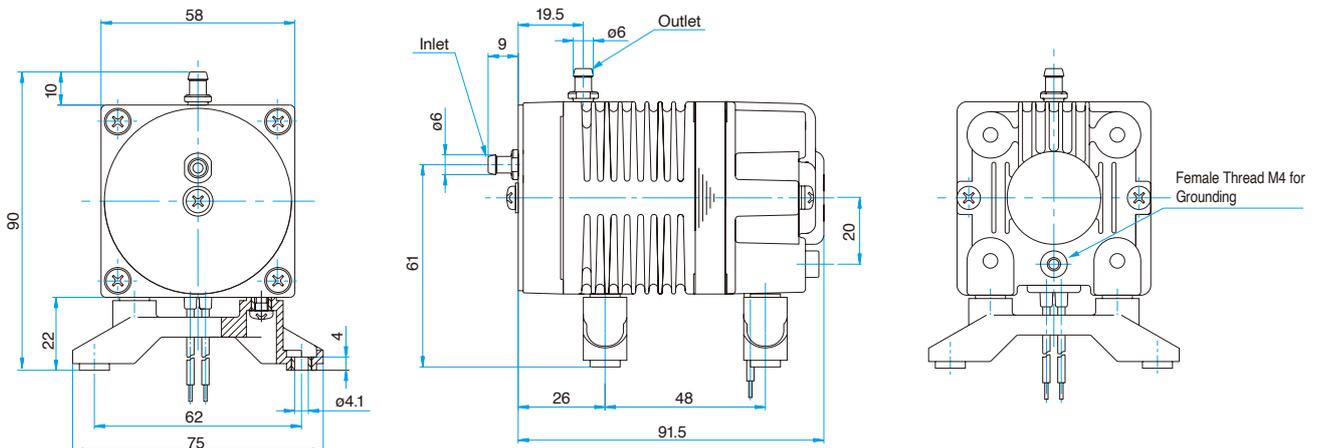


Vacuum Pump

Model VP0140

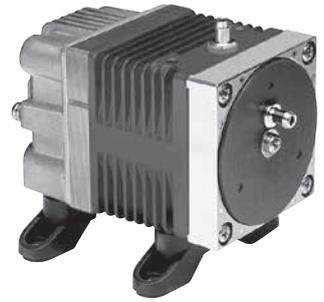

Airflow & Power Consumption

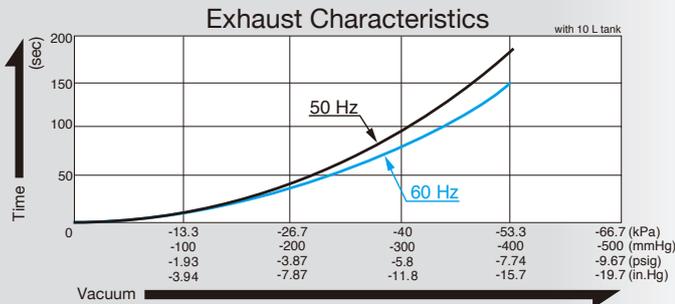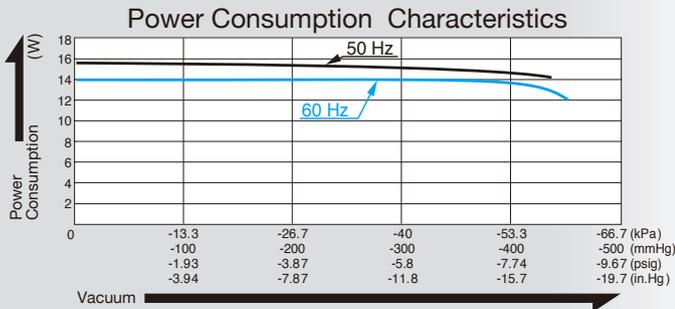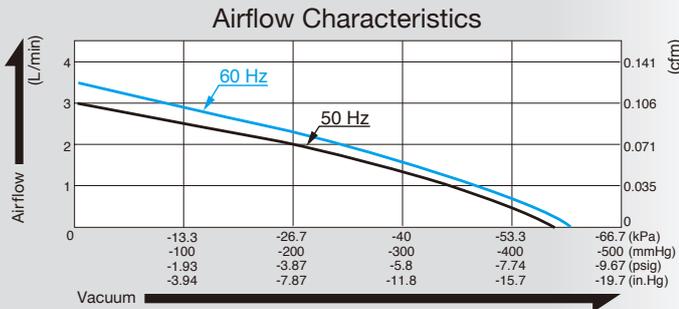

Specifications

| | | |
|--------------------------|--|--------------------|
| Attainable Vacuum* | -53.3 kPa (-400 mmHg) -533 mbar -15.7 in. Hg | |
| Free Air Displacement | 3 L/min 0.106 cfm | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 15 W / 14 W | |
| Rated Performance (MTTF) | 5,000 hours | |
| Inlet | 6 mm O.D. hose barb | |
| Outlet | 6 mm O.D. hose barb | |
| Duty Cycle | 60 minutes | |
| Coil Insulation Class | Class B for UL | Class E equivalent |
| Mounting Dimensions | 48 (L) x 62 (W) mm 1 - 57/64" (L) x 2 - 7/16" (W) | |
| Weight | 0.7 kg 1.54 Lbs | |
| Leadwire Length | 200 mm 7 - 7/8" | |


*Operations at higher than -53.5 kPa need an additional leak valve or relief valve on the inlet piping.

Application Examples


Dripping Machine



Paper Card Dispenser

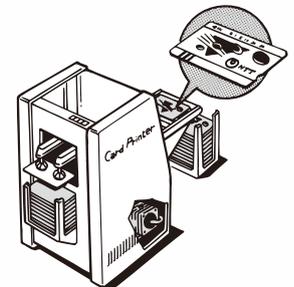

External Dimensions (Unit: mm)



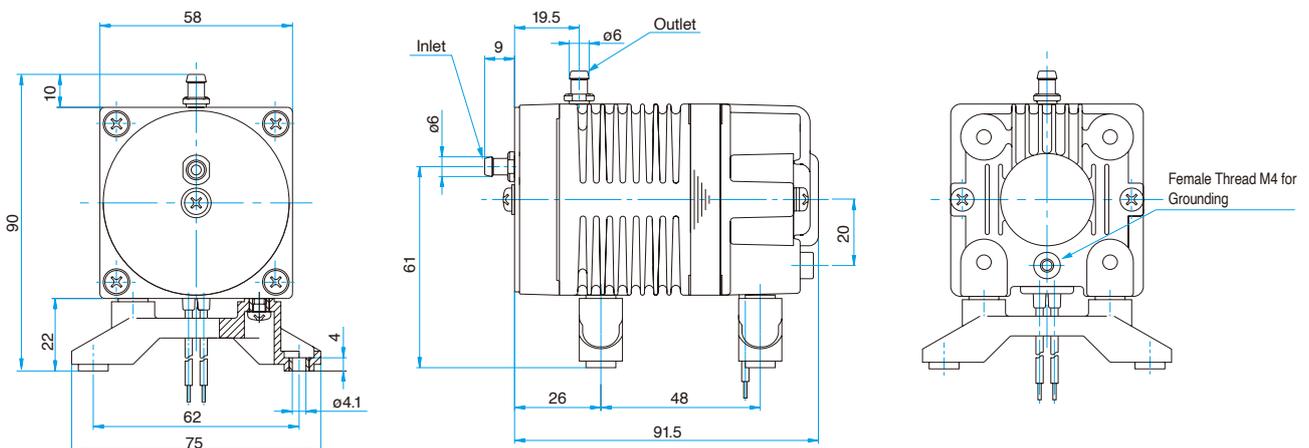


Vacuum Pump

Model VPO435A



Airflow & Power Consumption

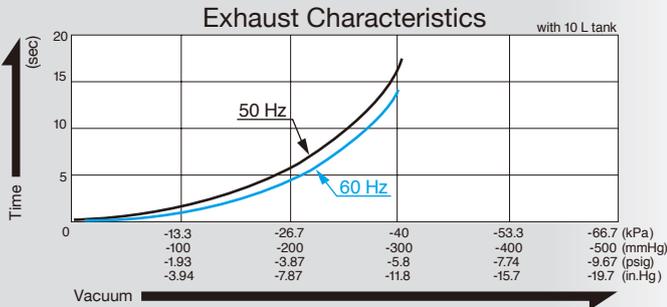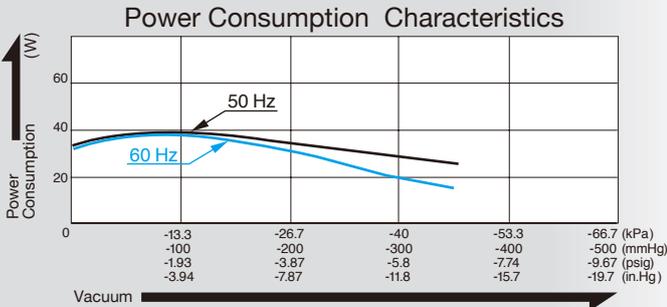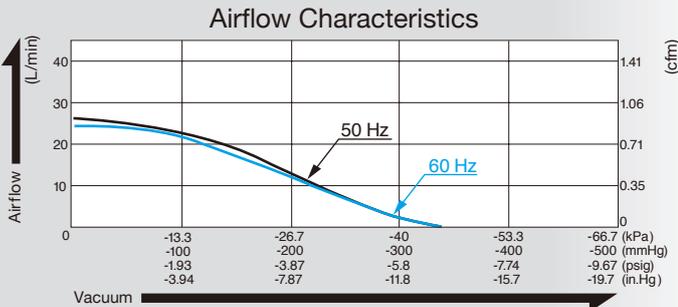

Specifications


| | | |
|-----------------------|--|-----------------------|
| Attainable Vacuum | -46.7 kPa (-350 mmHg) -467 mbar -13.8 in. Hg | |
| Free Air Displacement | 25 L/min 0.88 cfm | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 39 W | |
| Rated Performance | 3,000 hours | |
| Inlet | ISO Rc 1/4 | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | Class B equivalent |
| Mounting Dimensions | 68 (L) x 84 (W) mm 2 - 43/64" (L) x 3 - 5/16" (W) | |
| Weight | 2.3 kg 5.1 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | 550 mm 21 - 21/32" |

Application Examples



Machine Screw Feeder



Air Sampler

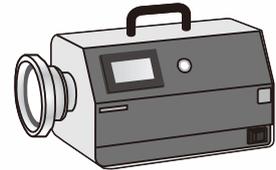


External Dimensions (Unit: mm)


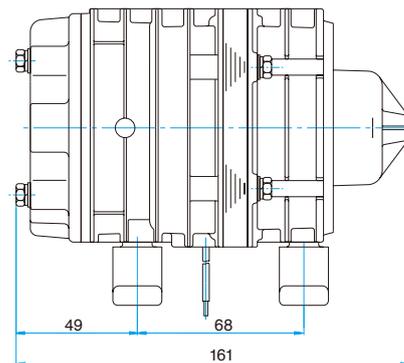
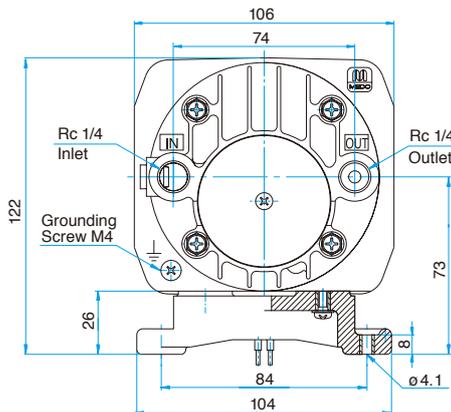


Vacuum Pump

Model VPO450

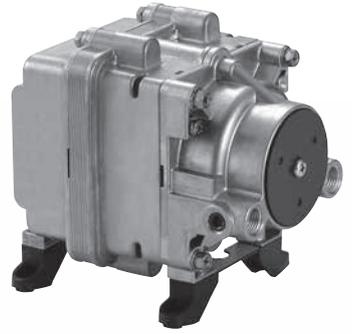

Airflow & Power Consumption

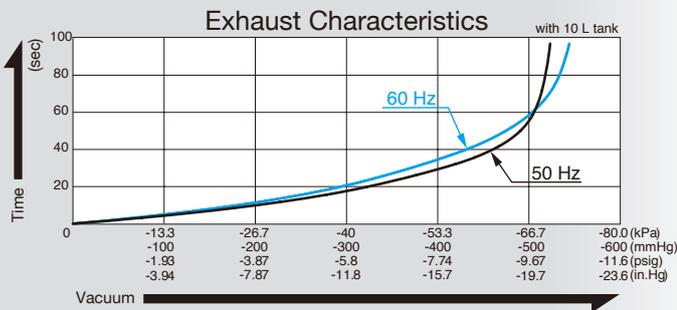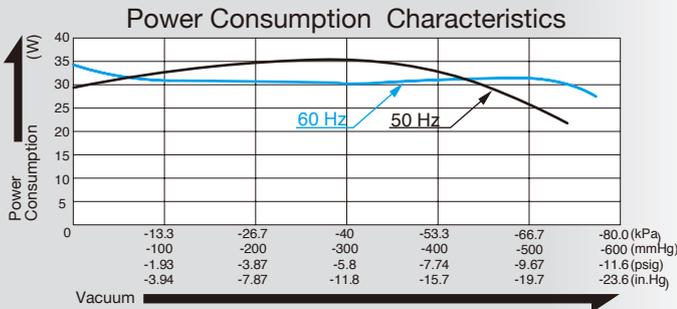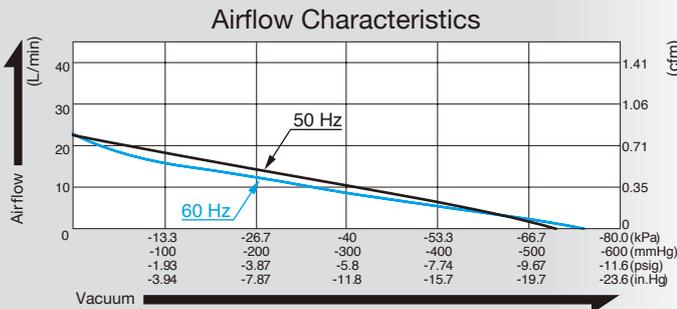

Specifications


| | | |
|-----------------------|---|--------------------|
| Attainable Vacuum | -66.7 kPa (-500 mmHg) -667 mbar -19.7 in. Hg | |
| Free Air Displacement | 18 L/min 0.64 cfm | |
| Rated Voltage | 120 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 35 W / 34 W | |
| Rated Performance | 10,000 hours | |
| Inlet | ISO Rc 1/4 | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A for UL | Class E equivalent |
| Mounting Dimensions | 85 (L) x 88 (W) mm 3 - 11/32" (L) x 3 - 15/32" (W) | |
| Weight | 2.2 kg 4.9 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | |

Application Examples



Machine Screw Feeder



Air Sampler

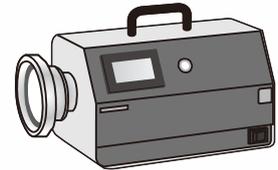


External Dimensions (Unit: mm)


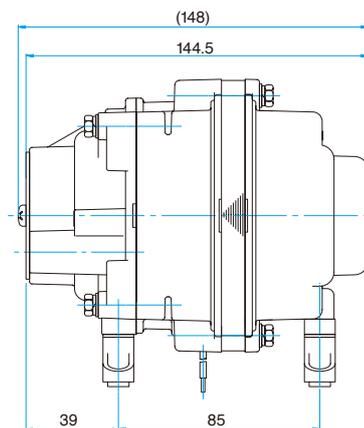
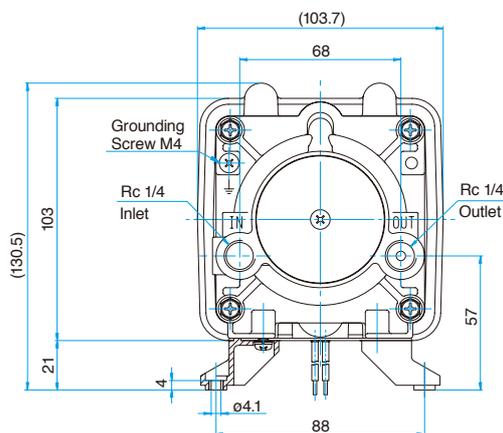


Vacuum Pump

Model VP0625

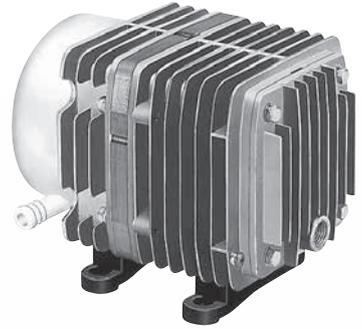

Airflow & Power Consumption

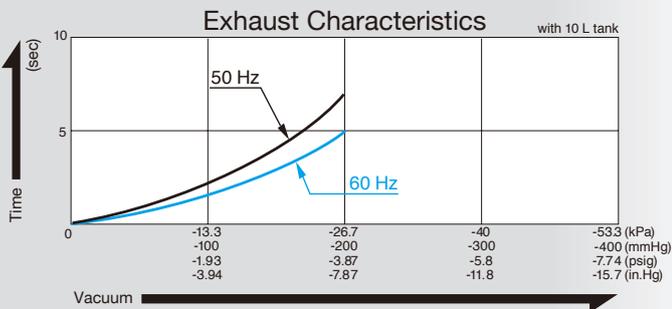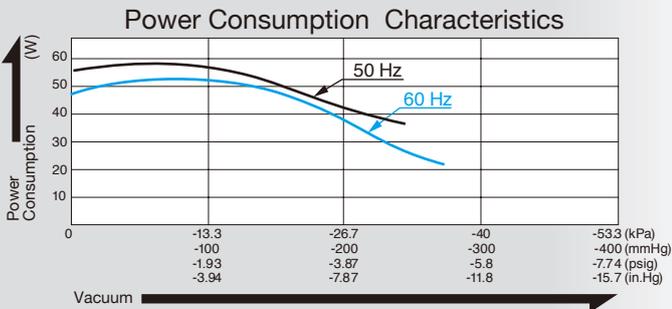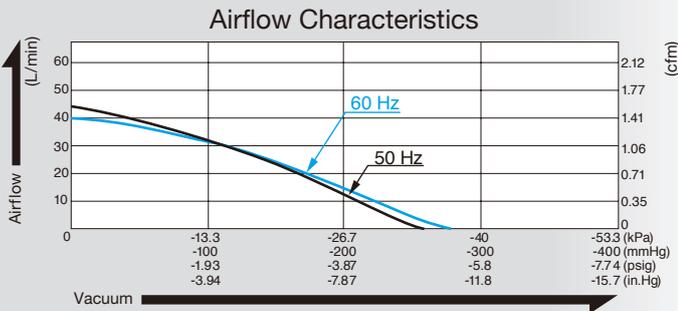


Specifications


| | | |
|-----------------------|--|-----------------------|
| Attainable Vacuum | -33.3 kPa (-250 mmHg) -333 mbar -9.84 in. Hg | |
| Free Air Displacement | 40 L/min 1.41 cfm | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz / 60 Hz |
| Power Consumption | 60 W | 60 W / 50 W |
| Rated Performance | 10,000 hours | |
| Inlet | 15mm O.D. hose barb | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | |
| Mounting Dimensions | 68 (L) x 84 (W) mm 2 - 43/64" (L) x 3 - 5/16" (W) | |
| Weight | 3 kg 6.6 Lbs | |
| Leadwire Length | 235 mm 9 - 1/4" | 320 mm 12 - 19/32" |

Application Examples




Microfiche Camera

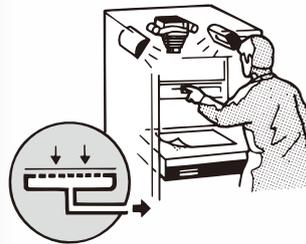

Solar Collection Screen

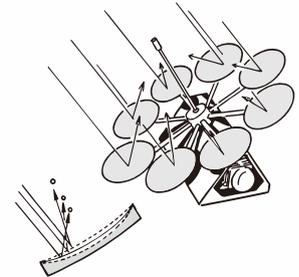

External Dimensions (Unit: mm)

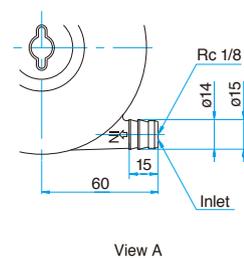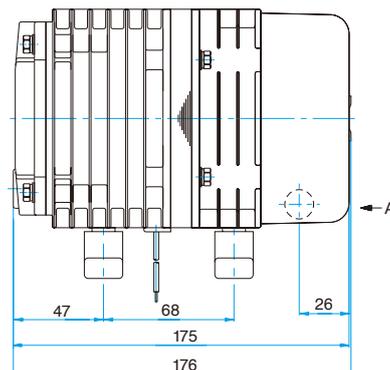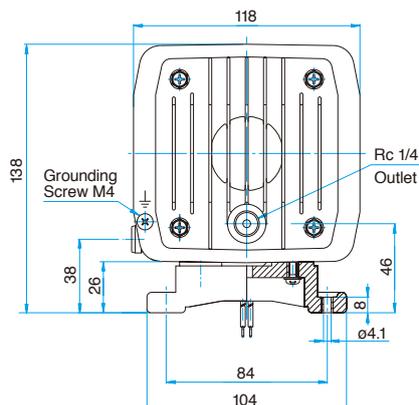


Vacuum Pump

Model VPO660



Airflow & Power Consumption

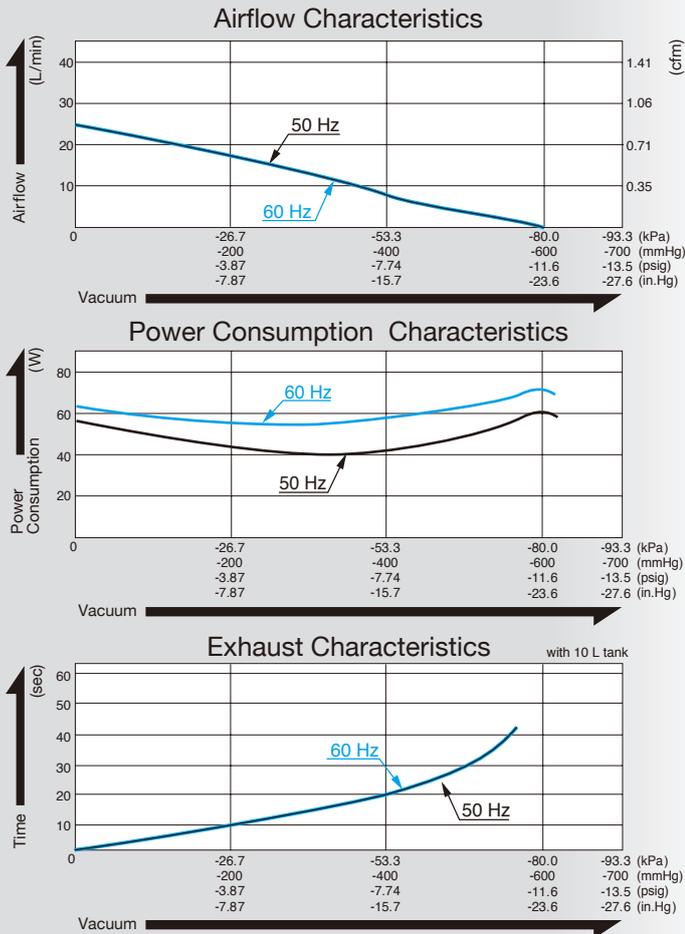


Specifications

| | | |
|-----------------------|--|---------------------|
| Attainable Vacuum *1 | -80 kPa (-600 mmHg) -800 mbar -23.6 in. Hg | |
| Free Air Displacement | 25 L/min 0.88 cfm | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz |
| Power Consumption | 70 W | 60 W |
| Rated Performance | 6,000 hours | |
| Inlet | ISO Rc 1/4 | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | Class E equivalent |
| Mounting Dimensions | 102 (L) x 130 (W) mm 4 - 1/64" (L) x 5 - 1/8" (W) | |
| Weight | 5 kg 11 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | 600 mm 23 - 5/8" |


*1: Operations at higher than -80 kPa need an additional leak valve or relief valve on the inlet piping.

Application Examples



Vacuum Material Handling Equipment

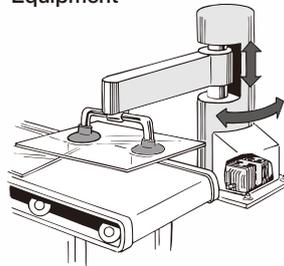

Vacuum Chucking

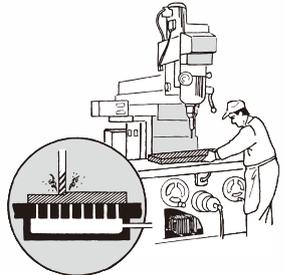

External Dimensions (Unit: mm)


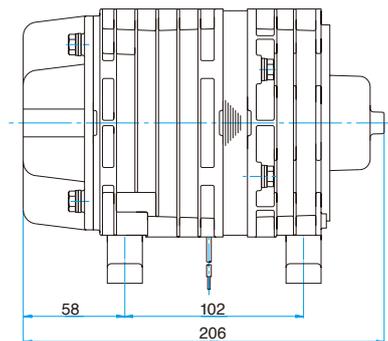
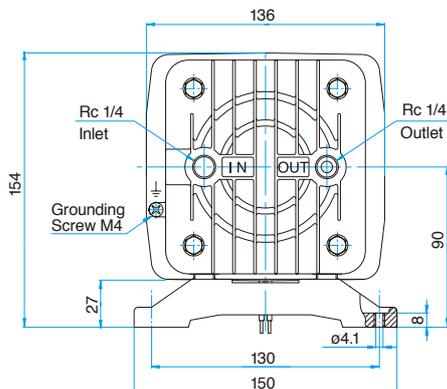


Vacuum Pump

Model VP0940



Airflow & Power Consumption

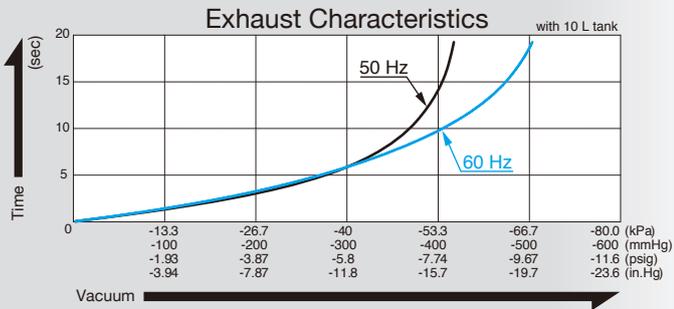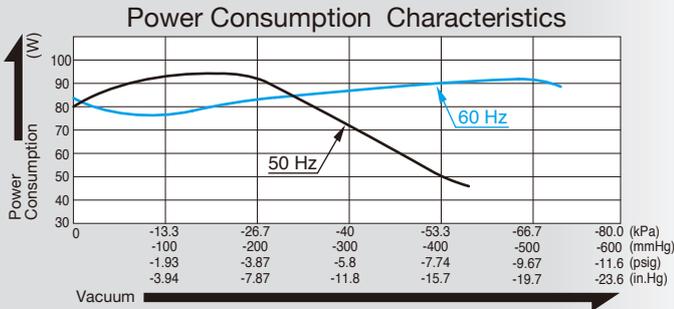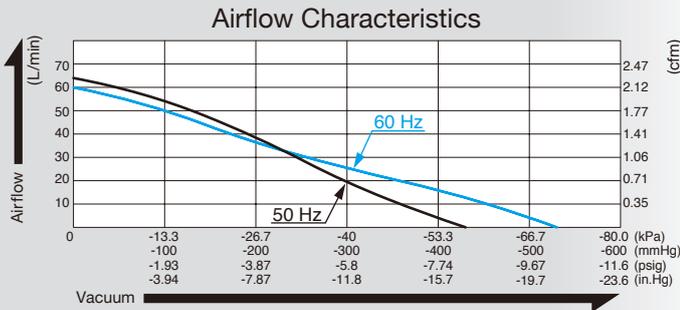


Specifications

| | | |
|-----------------------|--|-----------------------|
| Attainable Vacuum *1 | -53.3 kPa (-400 mmHg) -533 mbar -15.7 in. Hg | |
| Free Air Displacement | 60 L/min 2.12 cfm | |
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 95 W | |
| Rated Performance | 10,000 hours | |
| Inlet | ISO Rc 1/4 | |
| Outlet | ISO Rc 1/4 | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | Class B equivalent |
| Mounting Dimensions | 102 (L) x 130 (W) mm 4 - 1/64" (L) x 5 - 1/8" (W) | |
| Weight | 4.55 kg 10.0 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | 320 mm 12 - 19/32" |



*1: Operations at higher than -53.3 kPa need an additional leak valve or relief valve on the inlet piping.

Application Examples

Label Sticking Machine

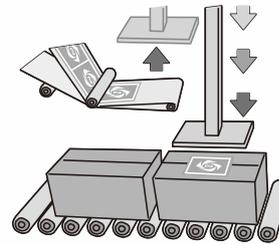

External Dimensions (Unit: mm)

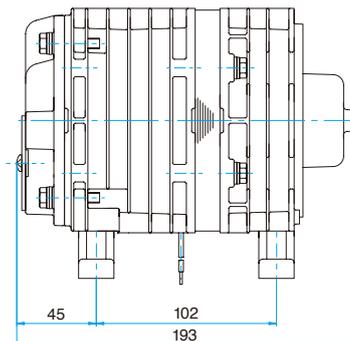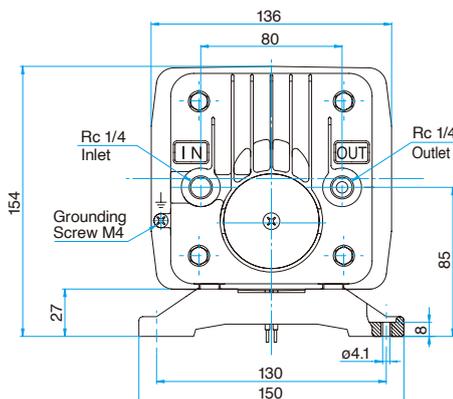


Vacuum Pump

Model VP0940T




Airflow & Power Consumption

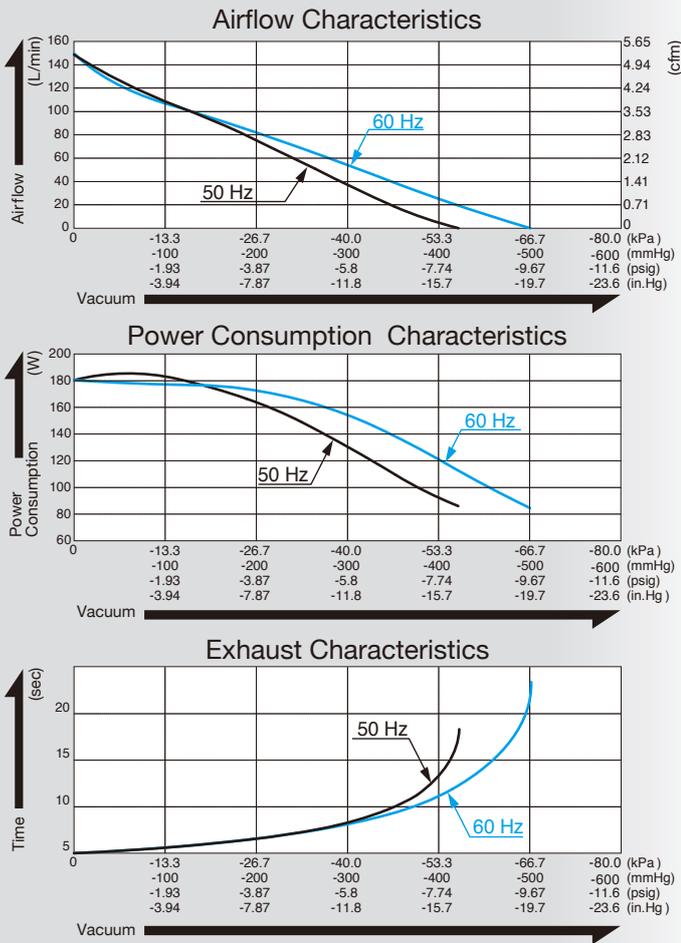

Specifications


| | |
|-----------------------|--|
| Attainable Vacuum *1 | -53.3 kPa (-400 mmHg) -533 mbar -15.7 in. Hg |
| Free Air Displacement | 120 L/min 4.24 cfm |
| Rated Voltage | 230 V AC *2 |
| Rated Frequency | 50 Hz / 60 Hz |
| Power Consumption | 185 W |
| Rated Performance | 10,000 hours |
| Inlet | ISO Rc 3/8 |
| Outlet | ISO Rc 3/8 |
| Duty Cycle | Continuous |
| Coil Insulation Class | Class B equivalent |
| Mounting Dimensions | 172 (L) x 211 (W) mm 6 - 49/64" (L) x 8 - 5/16" (W) |
| Weight | 10 kg 22 Lbs |
| Leadwire Length | 320 mm 12 - 19/32" |

*1: Operations at higher than -53.3 kPa need an additional leak valve or relief valve on the inlet piping.
*2: Please contact us for 115 V AC model.

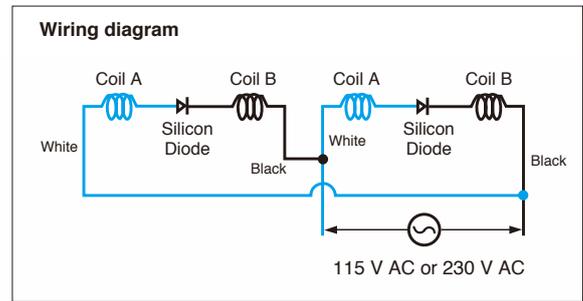

*The silencer, air filter, and pipe are not included with the product.
*Piping and wiring need to be done by the user.

External Dimensions (Unit: mm)

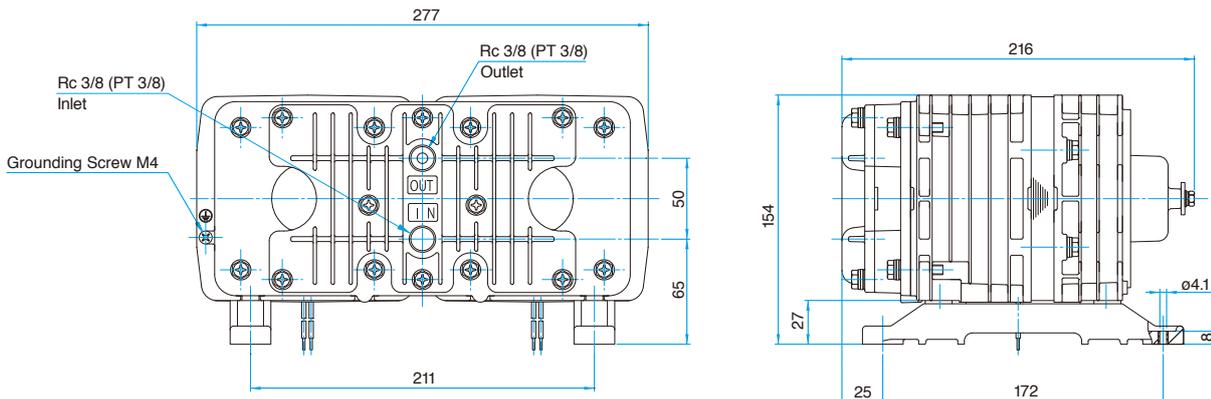


DC LINEAR

Free Piston Compressor
Free Piston Vacuum Pump

AIR COMPRESSOR VACUUM PUMP

DVH series

DAH series

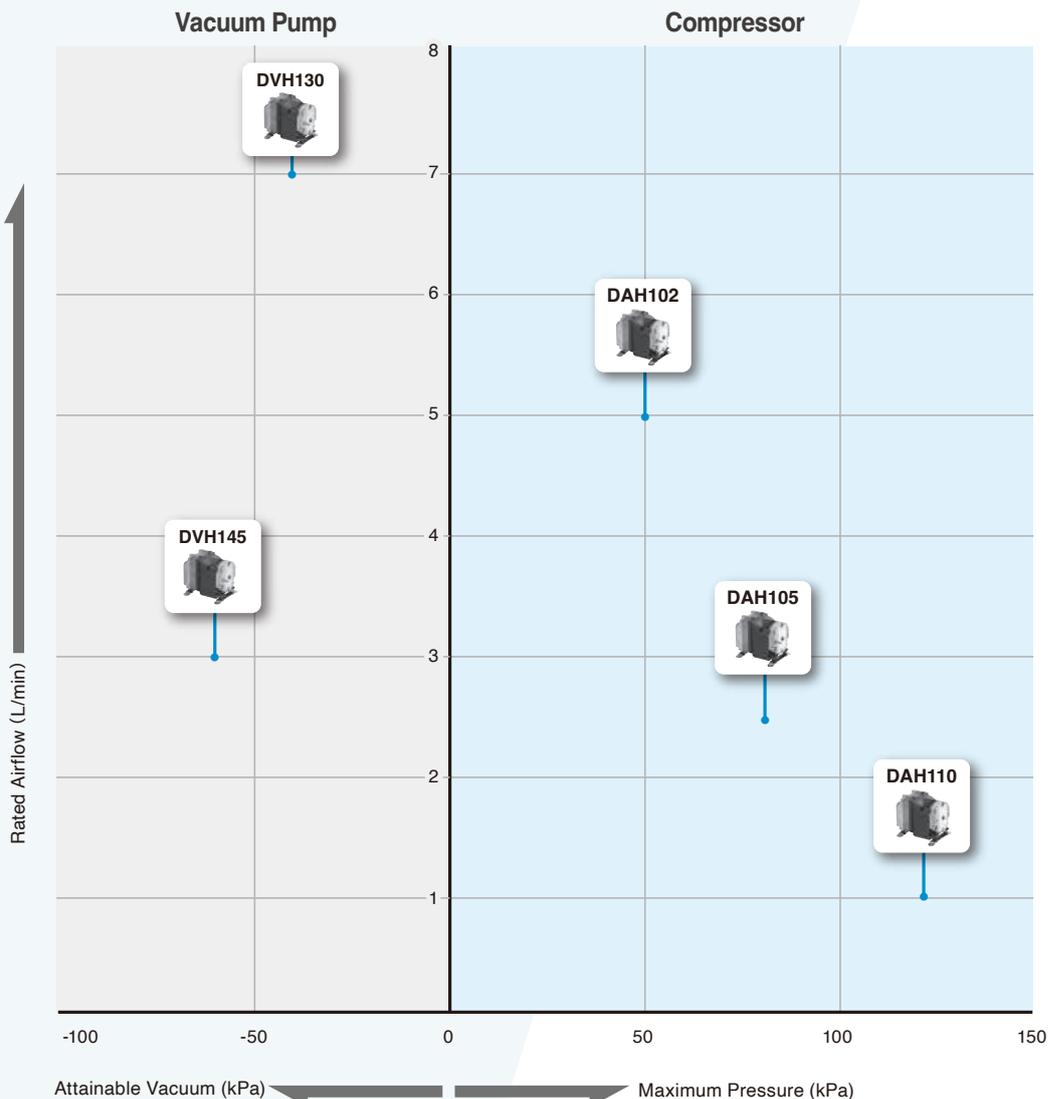

Page

DAH series

- DAH102-X1 — 39
- DAH102-Y1 — 39
- DAH105-X1 — 40
- DAH105-Y1 — 40
- DAH110-X1 — 41
- DAH110-Y1 — 41

DVH series

- DVH130-X1 — 42
- DVH130-Y1 — 42
- DVH145-X1 — 43
- DVH145-Y1 — 43


Compressor

Model **DAH102-X1** 12 V DC
DAH102-Y1 24 V DC




Airflow & Electric Current

Airflow Characteristics

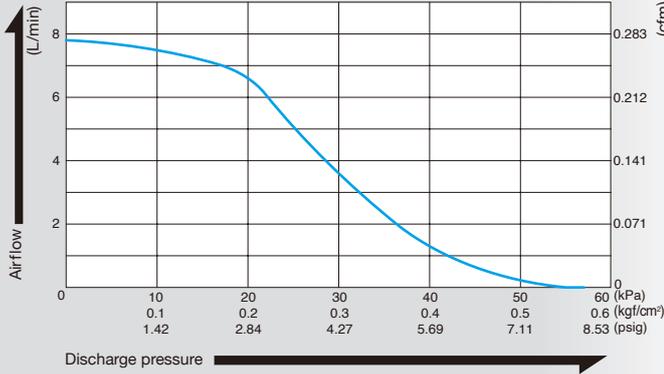

Current Characteristics

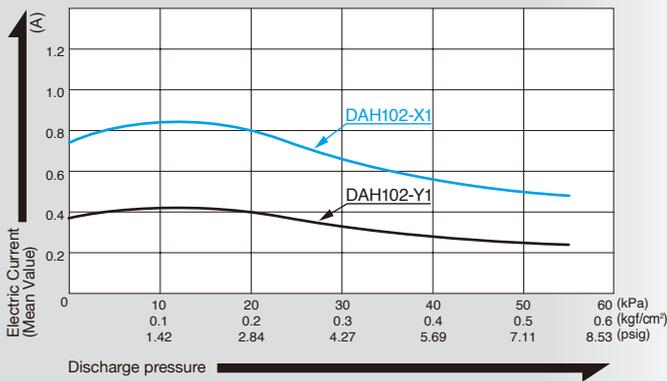


Specifications

| Model | DAH102-X1 | DAH102-Y1 |
|--------------------------|---|-----------|
| Rated Pressure | 20 kPa (0.2 kgf/cm ²) 0.2 bar 2.84 psig | |
| Rated Airflow | 5 L/min *1 0.177 cfm | |
| Maximum Pressure | 50 kPa (0.5 kgf/cm ²) 0.5 bar 7.11 psig | |
| Rated Voltage | 12 V DC | 24 V DC |
| Current (Mean Value) | 0.81 A | 0.40 A |
| Power Consumption | 9.8 W | 9.5 W |
| Rated Performance (MTTF) | 10,000 hours | |
| Outlet | 6 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A equivalent | |
| Mounting Dimensions | 76 (L) x 70 (W) mm 2 - 63/64" (L) x 2 - 3/4" (W) | |
| Weight | 0.91 kg 2.01 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | |

*1: Airflow at rated pressure.

Optional Accessory (LB07793)


Heavy duty rubber feet available on request.

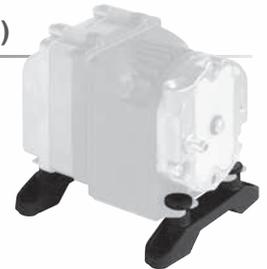

Application Examples

Medical equipment, analyzers, etc.

External Dimensions (Unit: mm)

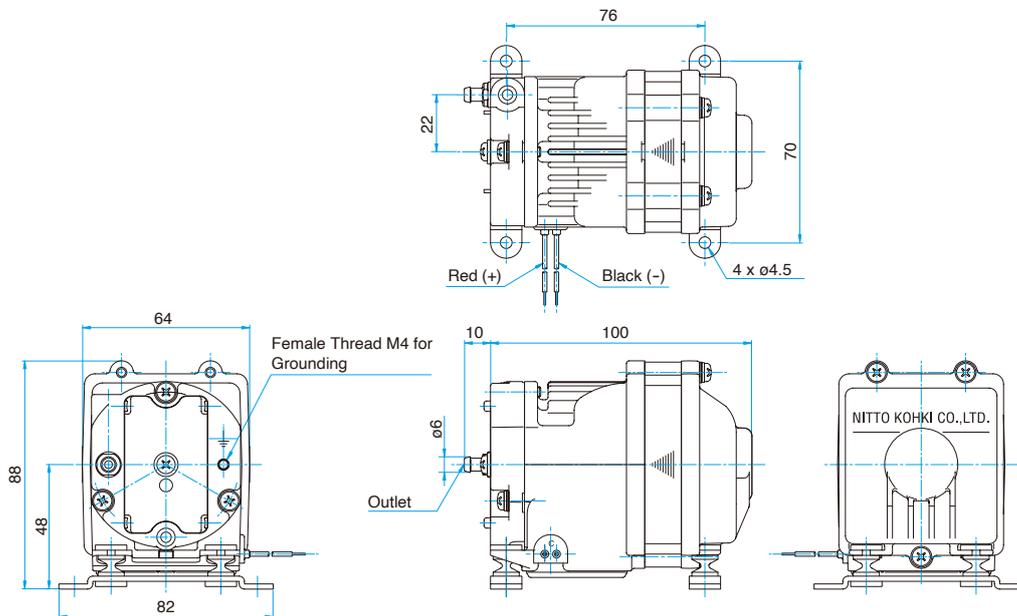


Compressor

Model DAH105-X1 12 V DC
Model DAH105-Y1 24 V DC



Airflow & Electric Current

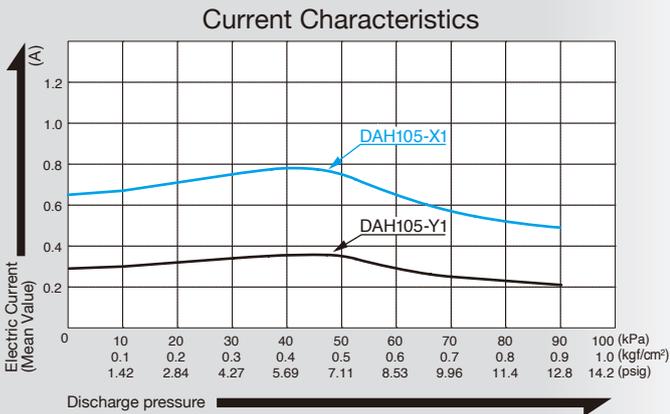

Specifications

| Model | DAH105-X1 | DAH105-Y1 |
|--------------------------|---|-----------|
| Rated Pressure | 50 kPa (0.5 kgf/cm ²) 0.5 bar 7.11 psig | |
| Rated Airflow | 2.5 L/min *1 0.088 cfm | |
| Maximum Pressure | 80 kPa (0.8 kgf/cm ²) 0.8 bar 11.4 psig | |
| Rated Voltage | 12 V DC | 24 V DC |
| Current (Mean Value) | 0.74 A | 0.35 A |
| Power Consumption | 9.2 W | 8.5 W |
| Rated Performance (MTTF) | 10,000 hours | |
| Outlet | 6 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A equivalent | |
| Mounting Dimensions | 76 (L) x 70 (W) mm 2 - 63/64" (L) x 2 - 3/4" (W) | |
| Weight | 0.91 kg 2.01 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | |

*1: Airflow at rated pressure.

Optional Accessory (LB07793)


Heavy duty rubber feet available on request.



Application Examples

Medical equipment, analyzers, etc.

External Dimensions (Unit: mm)


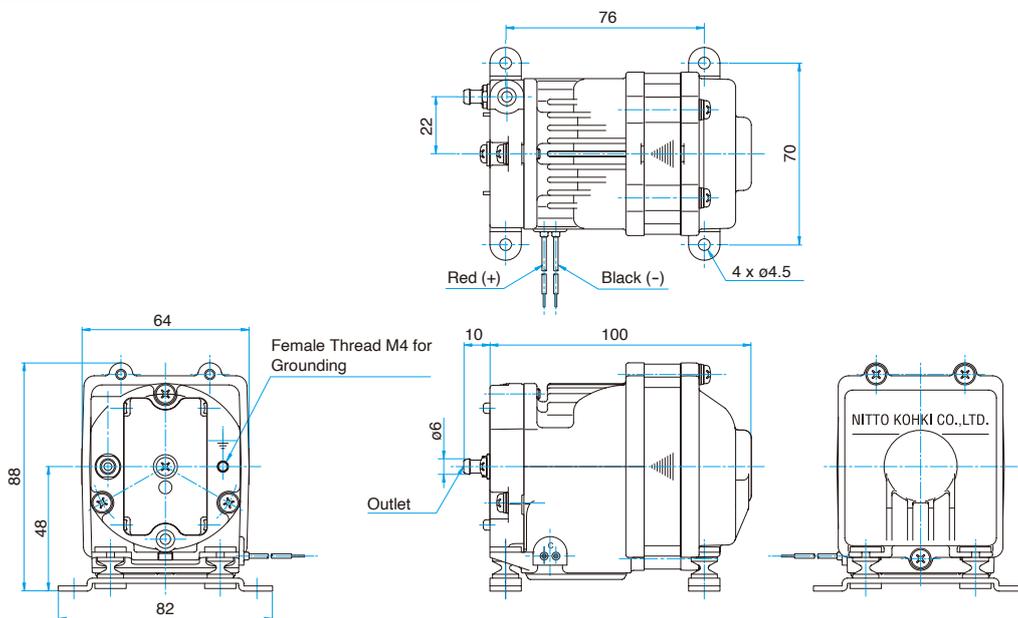


Compressor

Model **DAH110-X1** 12 V DC
DAH110-Y1 24 V DC



Airflow & Electric Current

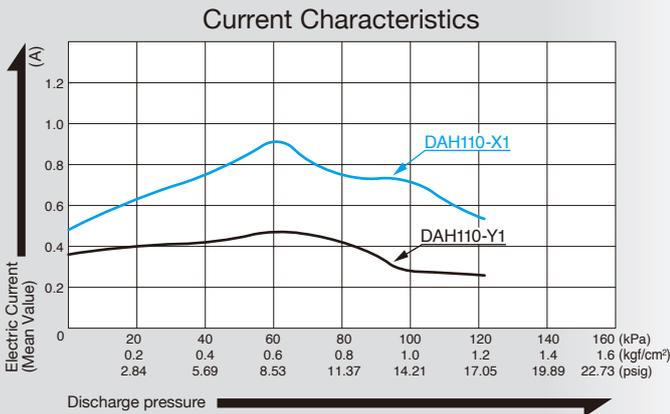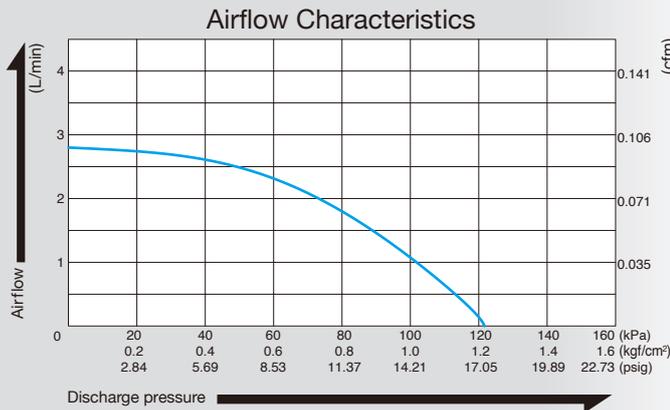


Specifications

| Model | DAH110-X1 | DAH110-Y1 |
|--------------------------|--|-----------|
| Rated Pressure | 100 kPa (1.0 kgf/cm ²) 1.0 bar 14.2 psig | |
| Rated Airflow | 1.0 L/min *1 0.035 cfm | |
| Maximum Pressure | 120 kPa (1.2 kgf/cm ²) 1.2 bar 17.1 psig | |
| Rated Voltage | 12 V DC | 24 V DC |
| Current (Mean Value) | 0.74 A | 0.27 A |
| Power Consumption | 8.5 W | 8.0 W |
| Rated Performance (MTTF) | 10,000 hours | |
| Outlet | 4.7 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A equivalent | |
| Mounting Dimensions | 76 (L) x 70 (W) mm 2 - 63/64" (L) x 2 - 3/4" (W) | |
| Weight | 0.91 kg 2.01 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | |

*1: Airflow at rated pressure.

Optional Accessory (LB07793)


Heavy duty rubber feet available on request.

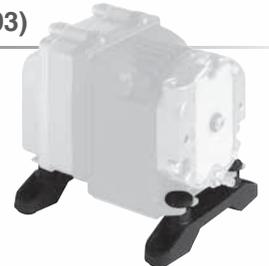

Application Examples

Medical equipment, analyzers, etc.

External Dimensions (Unit: mm)


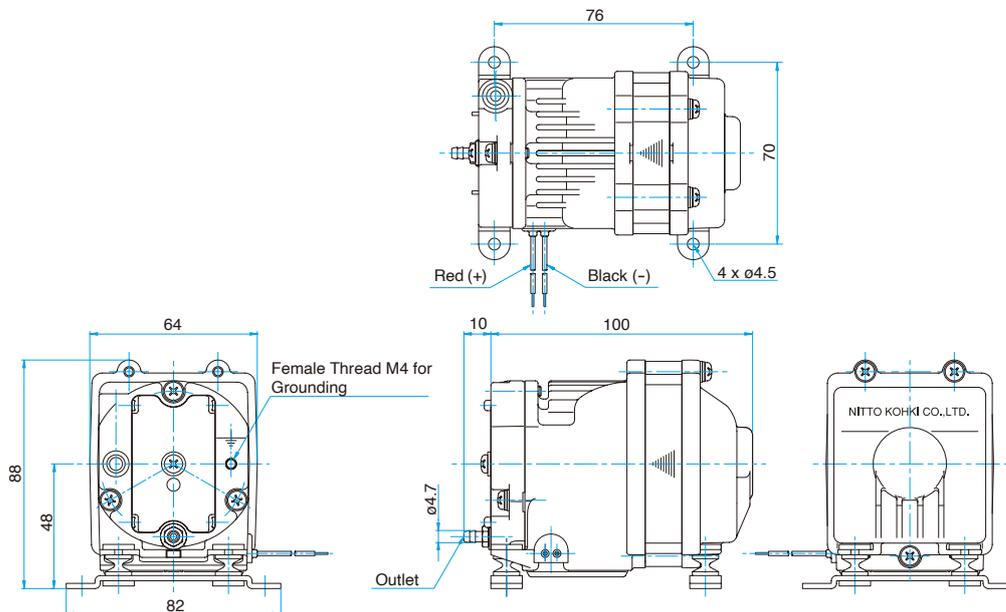


Vacuum Pump

Model DVH130-X1 12 V DC
Model DVH130-Y1 24 V DC



Airflow & Electric Current

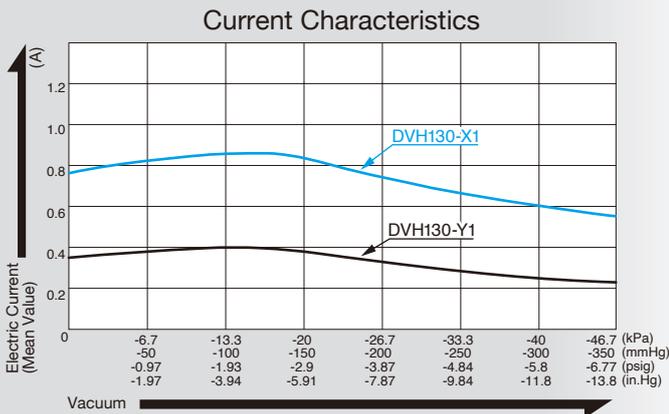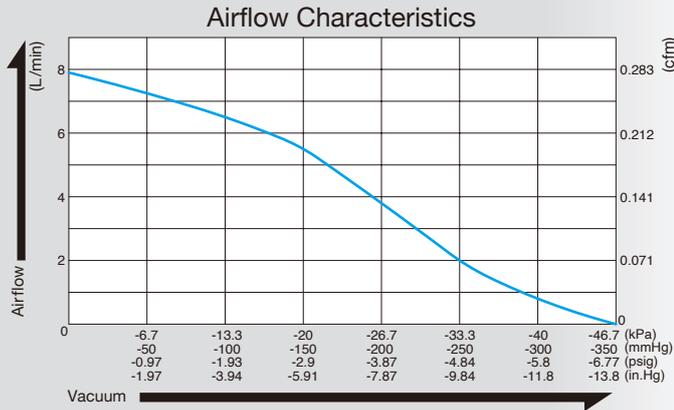


Specifications

| Model | DVH130-X1 | DVH130-Y1 |
|--------------------------|---|-----------|
| Attainable Vacuum | -40 kPa (-300 mmHg) -400 mbar -11.8 in. Hg | |
| Free Air Displacement | 7 L/min *1 0.247 cfm | |
| Rated Voltage | 12 V DC | 24 V DC |
| Current (Mean Value) | 0.86 A | 0.41 A |
| Power Consumption | 10.3 W | 10.0 W |
| Rated Performance (MTTF) | 10,000 hours | |
| Inlet | 6 mm O.D. hose barb | |
| Outlet | 6 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A equivalent | |
| Mounting Dimensions | 76 (L) x 70 (W) mm 2 - 63/64" (L) x 2 - 3/4" (W) | |
| Weight | 0.91 kg 2.01 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | |

*1: Free air displacement at no-load operation.

Optional Accessory (LB07793)


Heavy duty rubber feet available on request.

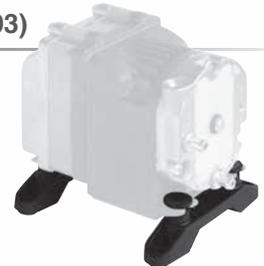

Application Examples

Medical equipment, analyzers, etc.

External Dimensions (Unit: mm)


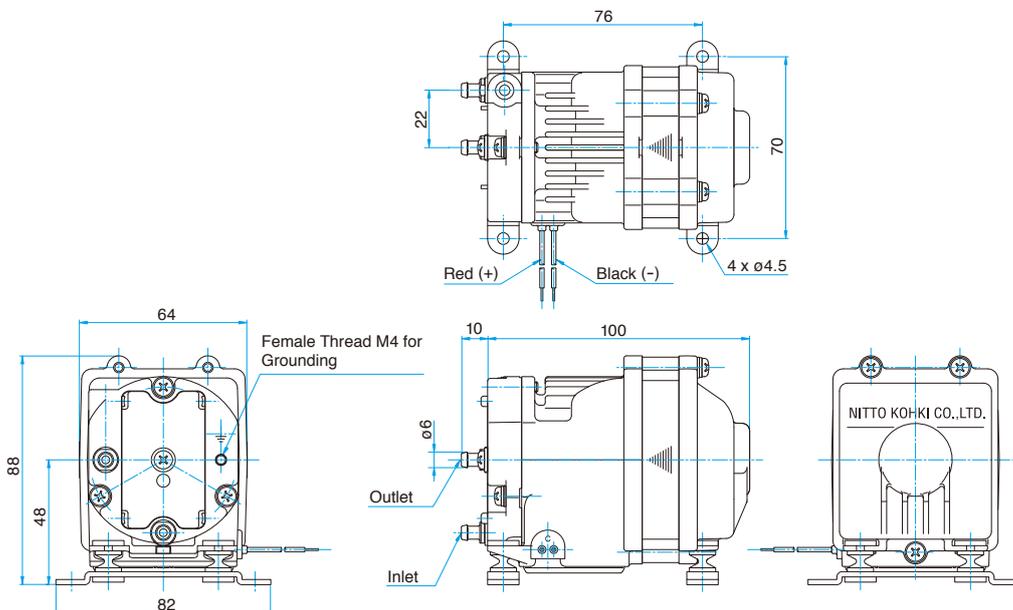


Vacuum Pump

Model DVH145-X1 12 V DC
Model DVH145-Y1 24 V DC



Airflow & Electric Current

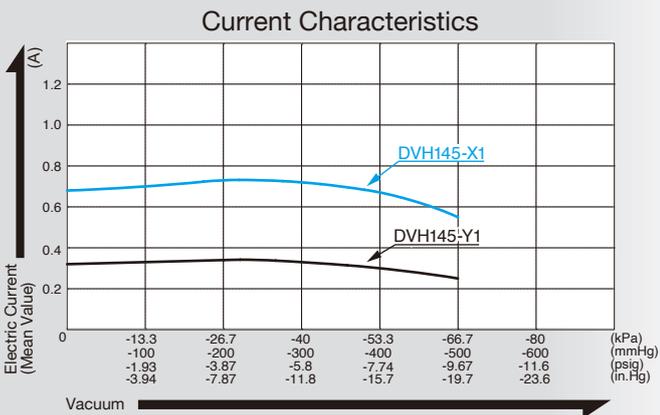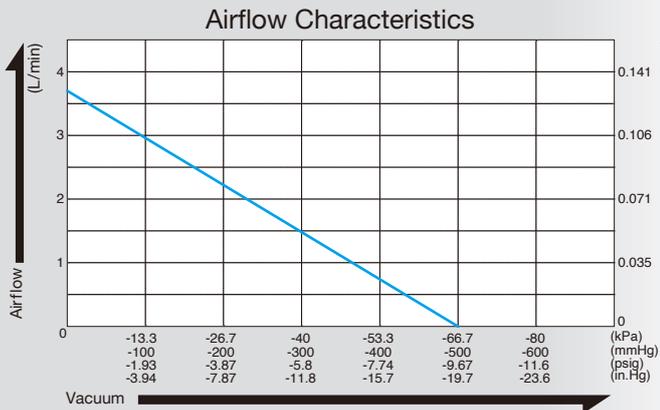

Specifications

| Model | DVH145-X1 | DVH145-Y1 |
|--------------------------|---|-----------|
| Attainable Vacuum | -60 kPa (-450 mmHg) -600 mbar -17.7 in. Hg | |
| Free Air Displacement | 3 L/min *1 0.106 cfm | |
| Rated Voltage | 12 V DC | 24 V DC |
| Current (Mean Value) | 0.73 A | 0.34 A |
| Power Consumption | 8.9 W | 8.6 W |
| Rated Performance (MTTF) | 10,000 hours | |
| Inlet | 6 mm O.D. hose barb | |
| Outlet | 6 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A equivalent | |
| Mounting Dimensions | 76 (L) x 70 (W) mm 2 - 63/64" (L) x 2 - 3/4" (W) | |
| Weight | 0.91 kg 2.01 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | |

*1: Free air displacement at no-load operation.

Optional Accessory (LB07793)


Heavy duty rubber feet available on request.



Application Examples

Medical equipment, analyzers, etc.


External Dimensions (Unit: mm)

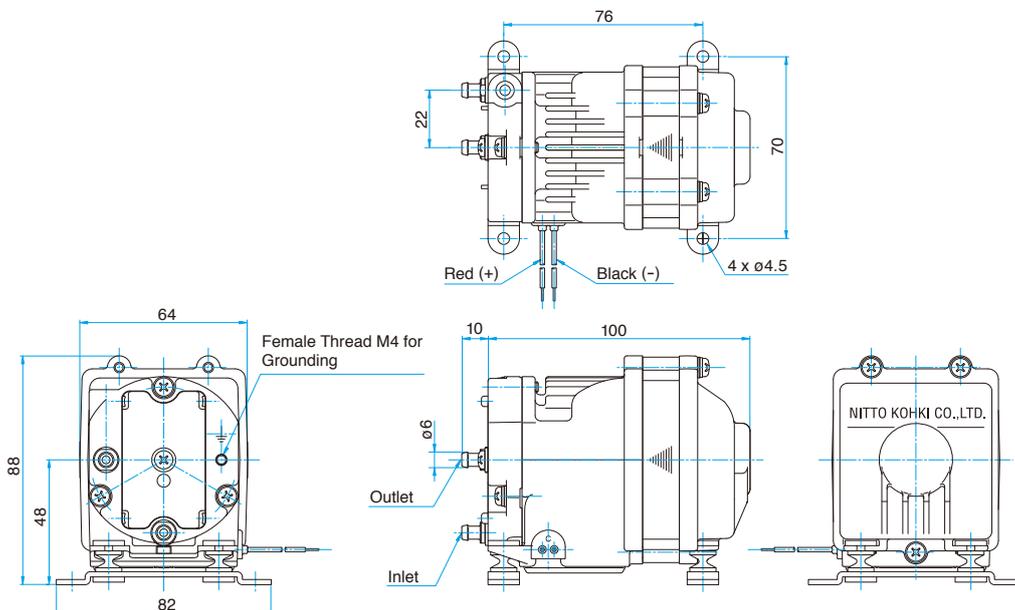

DIAPHRAGM PUMP

VC series

| | | | |
|---------|-------------|---|----|
| VC0100 | Dual Type | — | 45 |
| VC0100 | Blower Type | — | 46 |
| VC0101 | Dual Type | — | 47 |
| VC0101 | Blower Type | — | 48 |
| VC0101S | Blower Type | — | 49 |
| VC0201B | Dual Type | — | 50 |
| VC0201B | Blower Type | — | 51 |
| VC0301B | Dual Type | — | 52 |
| VC0301B | Blower Type | — | 53 |

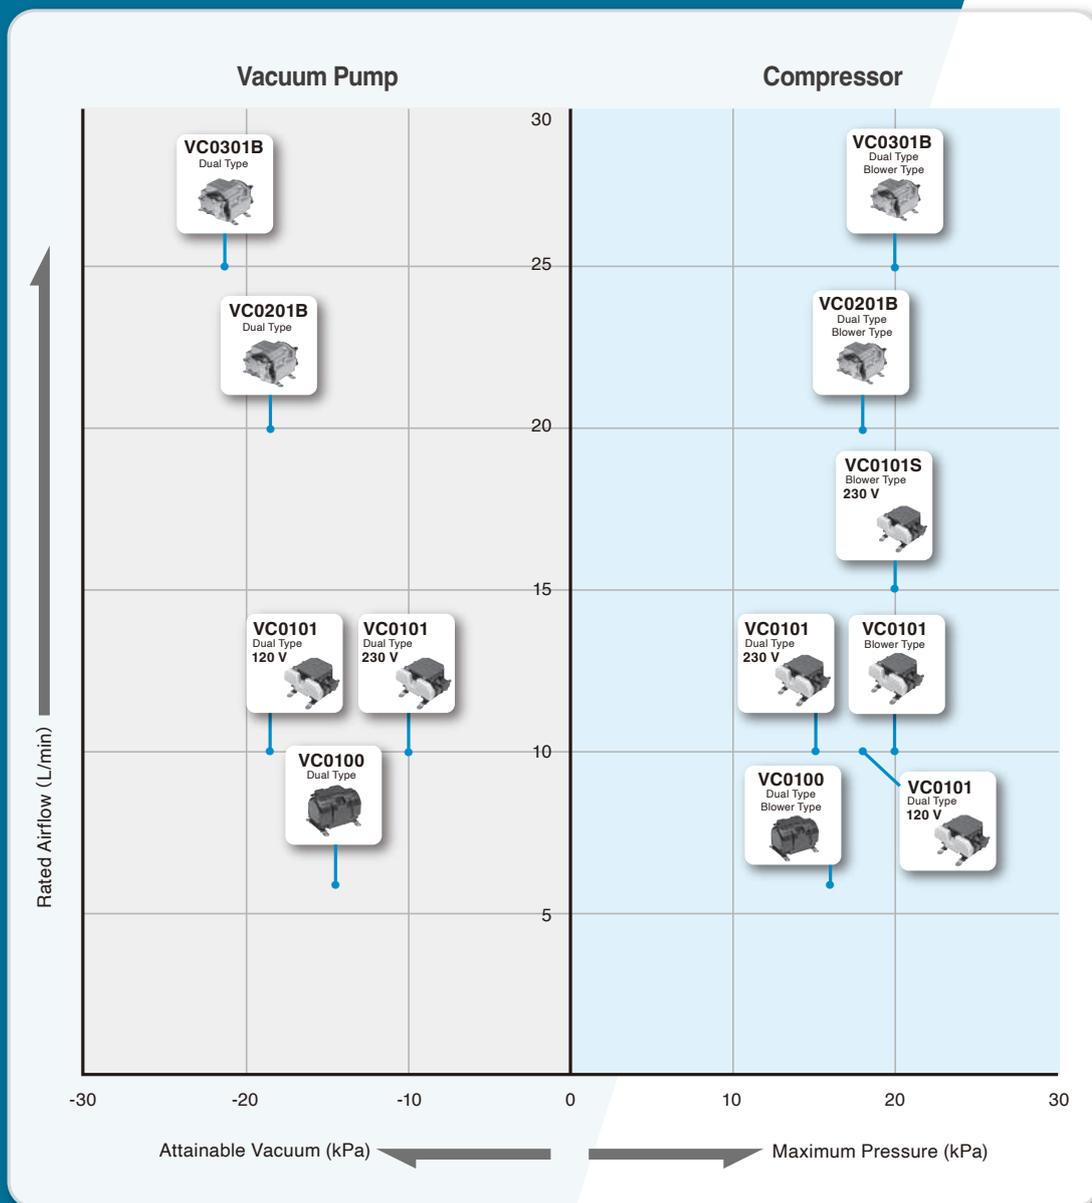



Compressor and Vacuum Pump

Model VC0100

Dual Type



Airflow & Power Consumption

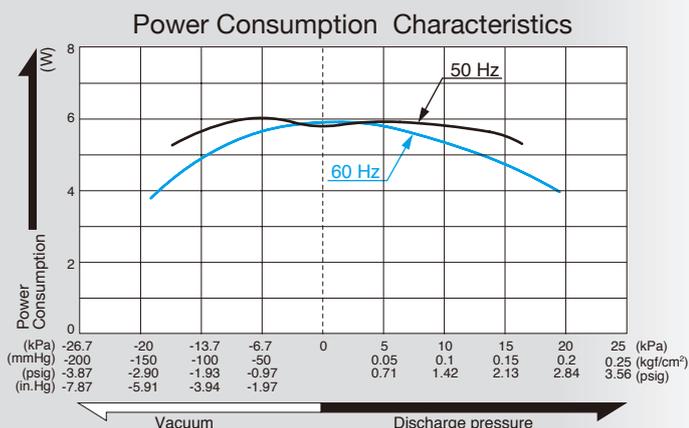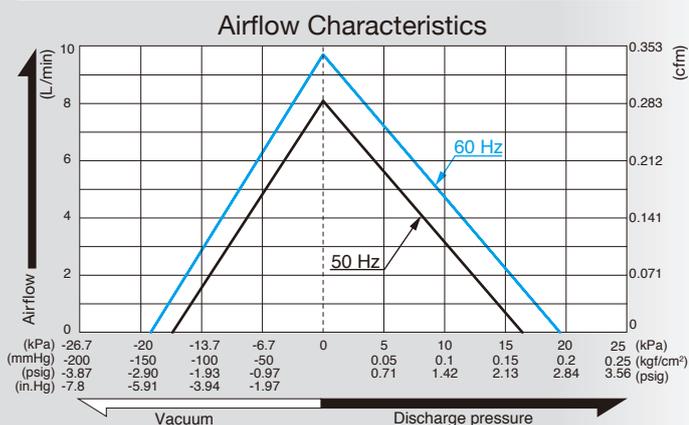


Specifications

| | | |
|------------------------|--|--------------------|
| Rated Pressure | 4 kPa (0.04 kgf/cm ²) 0.04 bar 0.57 psig | |
| Rated Airflow | 6 L/min 0.212 cfm | |
| Maximum Pressure | 16 kPa (0.16 kgf/cm ²) 0.16 bar 2.28 psig | |
| Attainable Vacuum | -14.7 kPa (-110 mmHg) -147 mbar -4.33 in.Hg | |
| Rated Voltage | 120 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 6 W | |
| Rated Performance | 5,000 hours | |
| Working Pressure Range | -14.7 kPa to 16 kPa (-110 mmHg to 0.16 kgf/cm ²) -147 mbar to 0.16 bar -4.33 in.Hg to 2.28 psig | |
| Inlet | 6 mm O.D. hose barb | |
| Outlet | 6 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A equivalent | Class E equivalent |
| Mounting Dimensions | 70 (L) x 72 (W) mm 2 - 3/4" (L) x 2 - 53/64" (W) | |
| Weight | 0.45 kg 0.99 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | |

Application Examples


Massage Devices

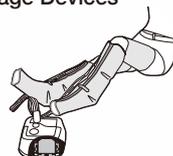

Bedsore Prevention Mattress



External Dimensions (Unit: mm)

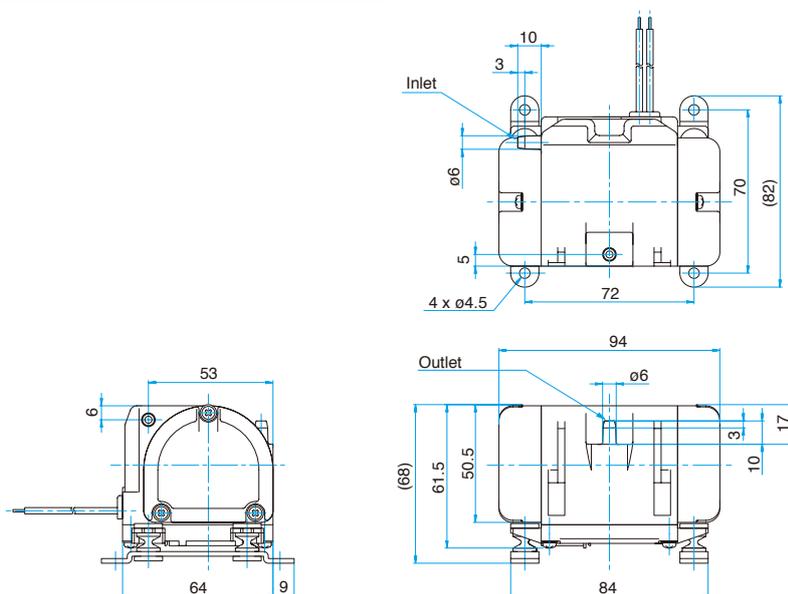



Compressor

Model VC0100

Blower Type



Airflow & Power Consumption

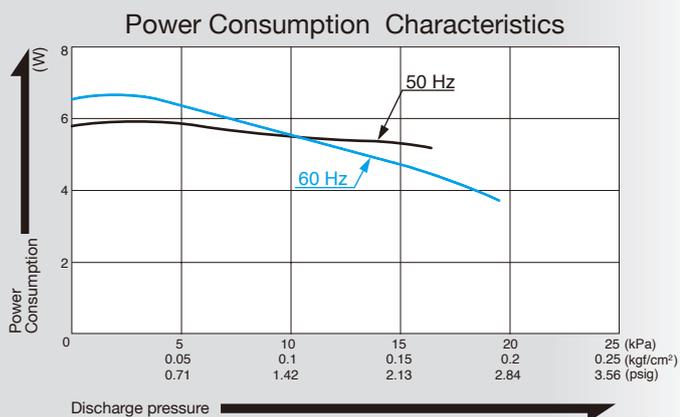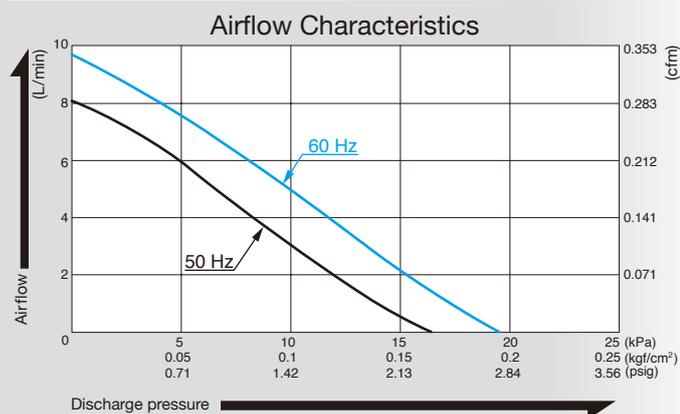


Specifications

| | | |
|------------------------|--|-----------------------|
| Rated Pressure | 4 kPa (0.04 kgf/cm ²) 0.04 bar 0.57 psig | |
| Rated Airflow | 6 L/min 0.212 cfm | |
| Maximum Pressure | 16 kPa (0.16 kgf/cm ²) 0.16 bar 2.28 psig | |
| Rated Voltage | 120 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 6 W | |
| Rated Performance | 10,000 hours | |
| Working Pressure Range | 0 to 16 kPa (0 to 0.16 kgf/cm ²) 0 to 0.16 bar 0 to 2.28 psig | |
| Outlet | 6 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A equivalent | Class E equivalent |
| Mounting Dimensions | 70 (L) x 72 (W) mm 2 - 3/4" (L) x 2 - 53/64" (W) | |
| Weight | 0.45 kg 0.99 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | 320 mm 12 - 19/32" |

Application Examples


Massage Devices

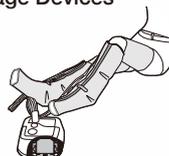

Bedsore Prevention Mattress




External Dimensions (Unit: mm)

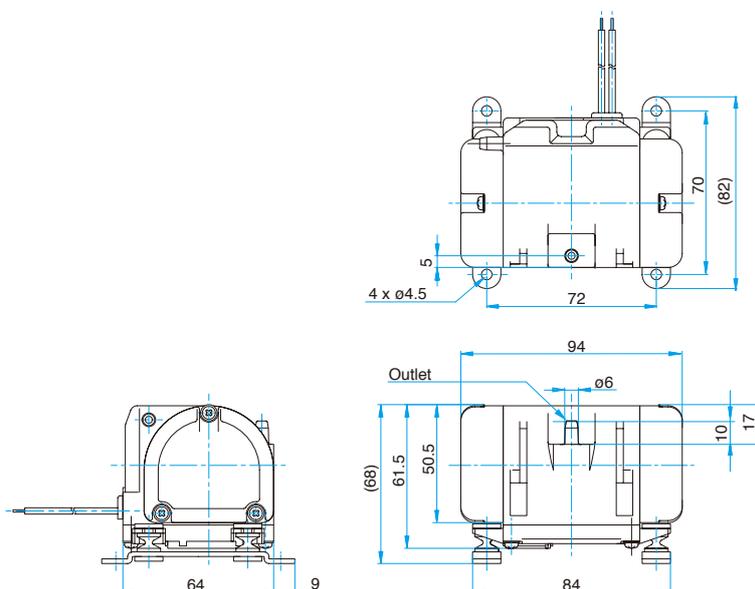



Compressor and Vacuum Pump

Model VC0101

Dual Type

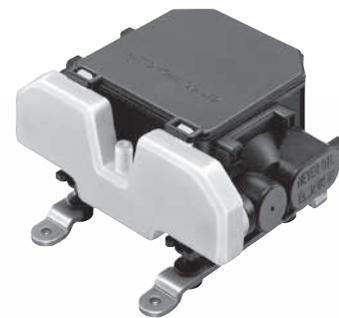

Airflow & Power Consumption

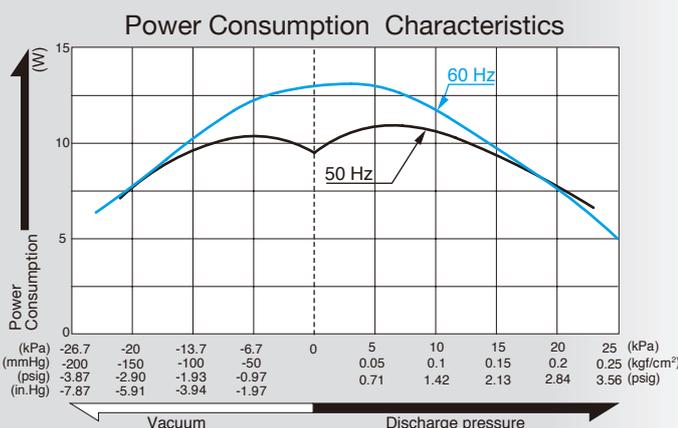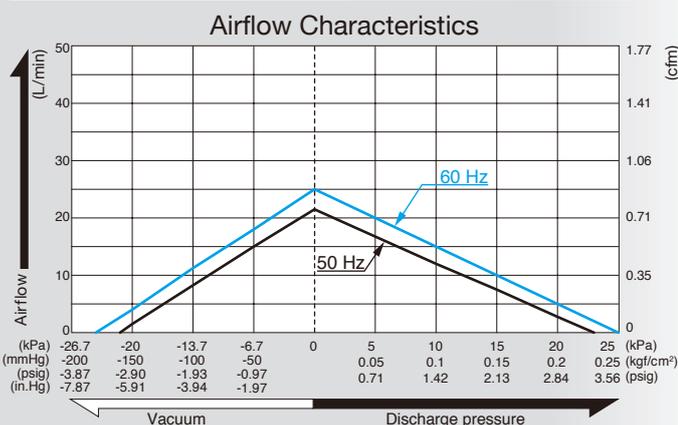

Specifications

| | | |
|------------------------|--|---|
| Rated Pressure | 10 kPa (0.1 kgf/cm ²) 0.1 bar 1.42 psig | |
| Rated Airflow | 10 L/min 0.35 cfm | |
| Rated Voltage | 120 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz |
| Power Consumption | 11 W | |
| Maximum Pressure | 18 kPa (0.18 kgf/cm ²) 0.18 bar 2.56 psig | 15 kPa (0.15 kgf/cm ²) 0.15 bar 2.13 psig |
| Attainable Vacuum | -18.7 kPa (-140 mmHg) -187 mbar -5.51 in.Hg | -10 kPa (-76 mmHg) -100 mbar -2.95 in.Hg |
| Working Pressure Range | -18.7 kPa to 18 kPa (-140 mmHg to 0.18 kgf/cm ²) -187 mbar to 0.18 bar -5.51 in.Hg to 2.56 psig | -10 kPa to 15 kPa (-76 mmHg to 0.15 kgf/cm ²) -100 mbar to 0.15 bar -2.95 in.Hg to 2.13 psig |
| Rated Performance | 5,000 hours | |
| Inlet | 7.5 mm O.D. hose barb | |
| Outlet | 7.5 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | Class B equivalent |
| Mounting Dimensions | 66 (L) x 100 (W) mm 2 - 19/32" (L) x 3 - 15/16" (W) | |
| Weight | 0.82 kg 1.81 Lbs | 0.84 kg 1.85 Lbs |
| Leadwire Length | 300 mm 11 - 13/16" | 200 mm 7 - 7/8" |

Application Examples


Massage Devices



Bedsore Prevention Mattress




External Dimensions (Unit: mm)

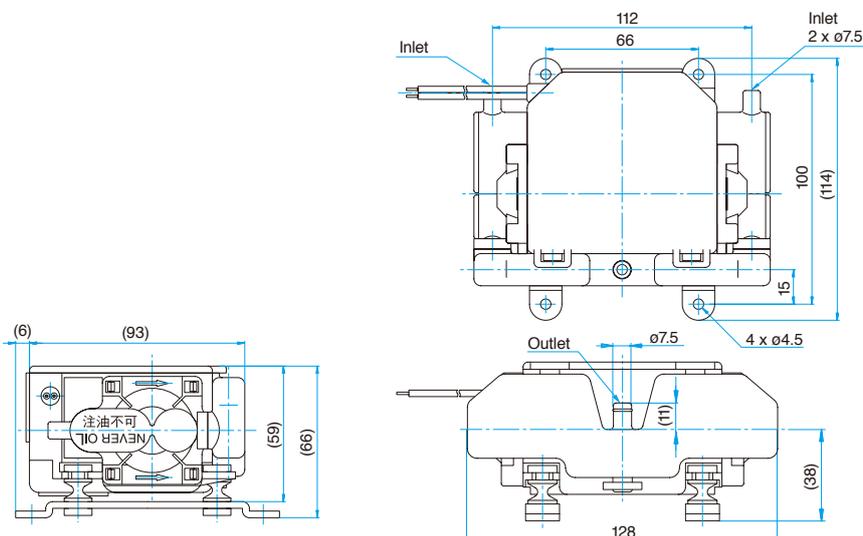



Compressor

Model VC0101

Blower Type

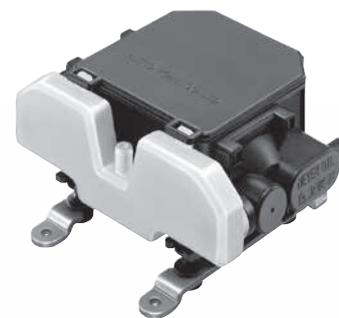

Airflow & Power Consumption

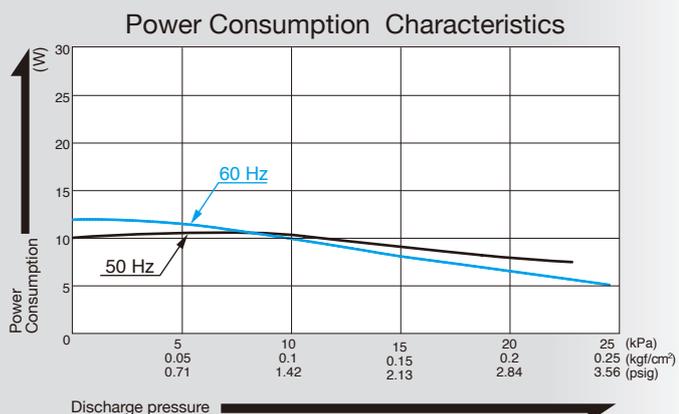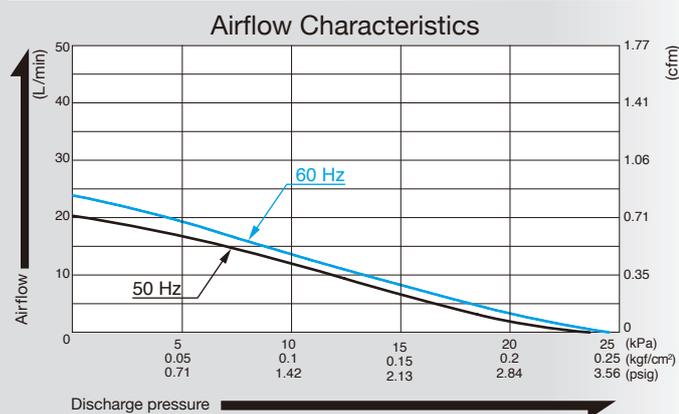


Specifications

| | | |
|------------------------|---|---------------------|
| Rated Pressure | 10 kPa (0.1 kgf/cm ²) 0.1 bar 1.42 psig | |
| Rated Airflow | 10 L/min 0.35 cfm | |
| Maximum Pressure | 20 kPa (0.2 kgf/cm ²) 0.2 bar 2.84 psig | |
| Rated Voltage | 120 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 11 W | |
| Rated Performance | 10,000 hours | |
| Working Pressure Range | 0 to 20 kPa (0 to 0.2 kgf/cm ²) 0 to 0.2 bar 0 to 2.84 psig | |
| Outlet | 7.5 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A | Class B equivalent |
| Mounting Dimensions | 66 (L) x 100 (W) mm 2 - 19/32" (L) x 3 - 15/16" (W) | |
| Weight | 0.82 kg 1.81 Lbs | 0.84 kg 1.85 Lbs |
| Leadwire Length | 300 mm 11 - 13/16" | |

Application Examples


Massage Devices

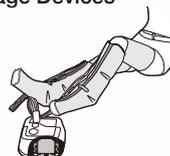

Bedsore Prevention Mattress




External Dimensions (Unit: mm)

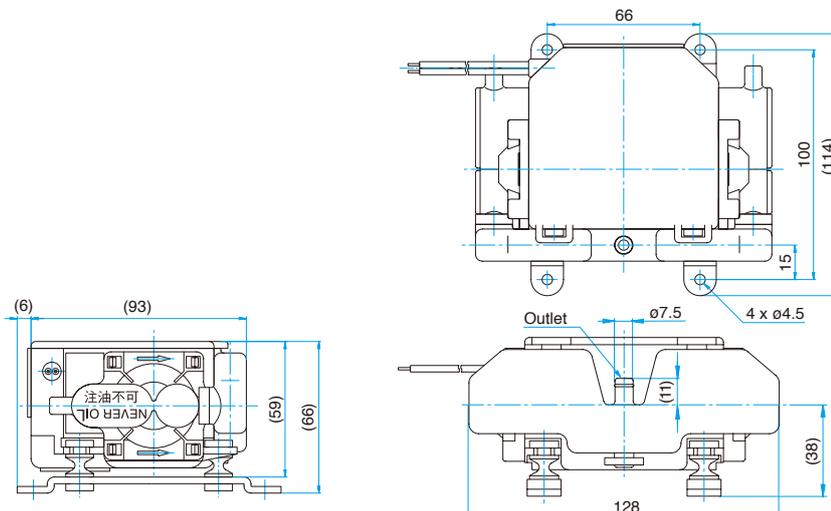



Compressor

Model VC0101S

Blower Type

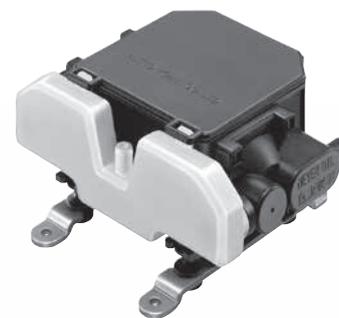

Airflow & Power Consumption

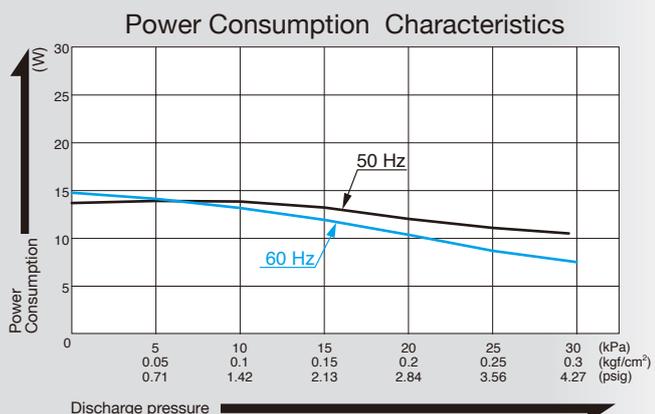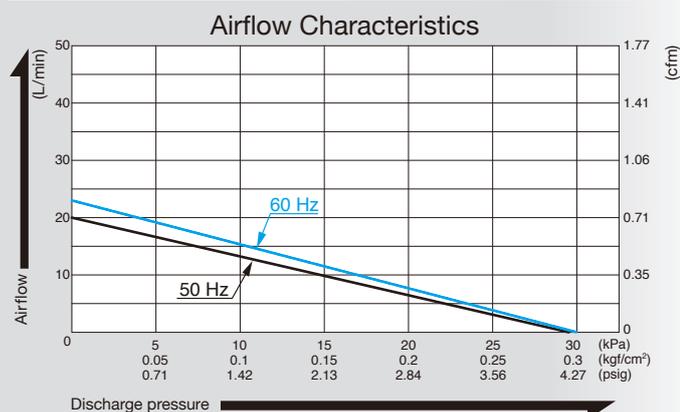

Specifications

| | |
|------------------------|--|
| Rated Pressure | 5 kPa (0.05 kgf/cm ²) 0.05 bar 0.71 psig |
| Rated Airflow | 15 L/min 0.53 cfm |
| Maximum Pressure | 26 kPa (0.26 kgf/cm ²) 0.26 bar 3.70 psig |
| Rated Voltage | 230 V AC ⁻¹ |
| Rated Frequency | 50 Hz / 60 Hz |
| Power Consumption | 14 W |
| Rated Performance | 5,000 hours |
| Working Pressure Range | 0 to 26 kPa (0 to 0.26 kgf/cm ²) 0 to 0.26 bar 0 to 3.70 psig |
| Outlet | 7.5 mm O.D. hose barb |
| Duty Cycle | 60 minutes |
| Coil Insulation Class | Class B equivalent |
| Mounting Dimensions | 66 (L) x 100 (W) mm 2 - 19/32" (L) x 3 - 15/16" (W) |
| Weight | 0.83 kg 1.81 Lbs |
| Leadwire Length | 300 mm 11 - 13/16" |

*1: Please contact us for 120 V AC model.

Application Examples


Massage Devices



Bedsore Prevention Mattress




External Dimensions (Unit: mm)

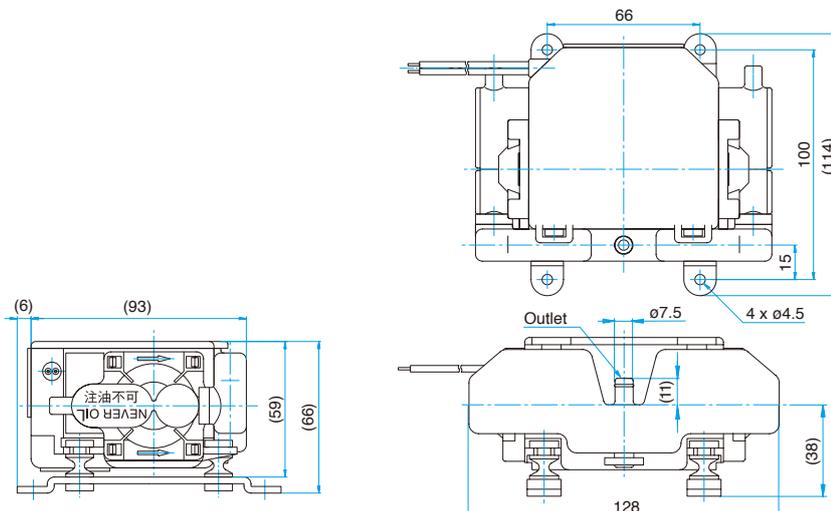



Compressor and Vacuum Pump

Model VC0201B

Dual Type

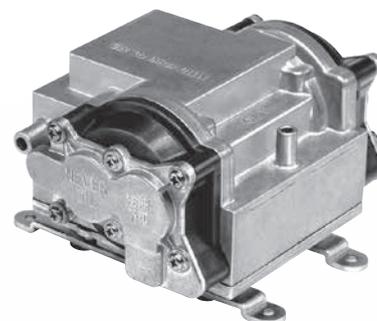

Airflow & Power Consumption

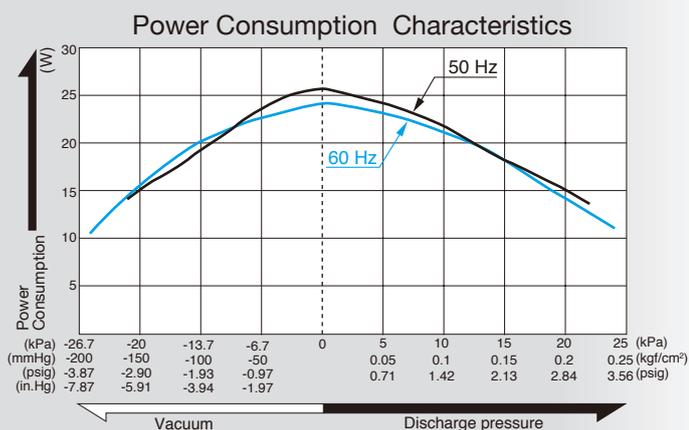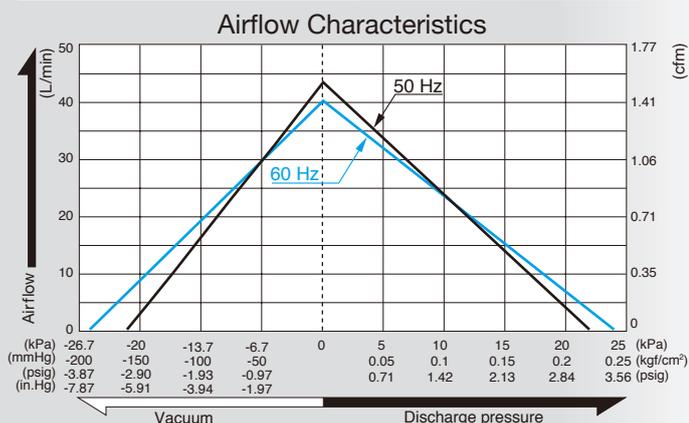


Specifications


| | | |
|------------------------|--|----------|
| Rated Pressure | 10 kPa (0.1 kgf/cm ²) 0.1 bar 1.42 psig | |
| Rated Airflow | 20 L/min 0.71 cfm | |
| Maximum Pressure | 18 kPa (0.18 kgf/cm ²) 0.18 bar 2.56 psig | |
| Attainable Vacuum | -18.7 kPa (-140 mmHg) -187 mbar -5.51 in.Hg | |
| Rated Voltage | 120 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 21 W | |
| Rated Performance | 10,000 hours | |
| Working Pressure Range | -18.7 kPa to 18 kPa (-140 mmHg to 0.18 kgf/cm ²) -187 mbar to 0.18 bar -5.51 in.Hg to 2.56 psig | |
| Inlet | 10.5 mm O.D. hose barb | |
| Outlet | 8.5 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A for UL | |
| Mounting Dimensions | 125 (L) x 56 (W) mm 4 - 59/64" (L) x 2 - 13/64" (W) | |
| Weight | 1.7 kg 3.7 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | |

Application Examples


Bedsore Prevention
Mattress

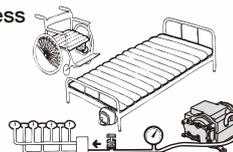

Solder Fume Suction

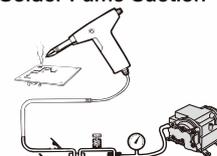


External Dimensions (Unit: mm)

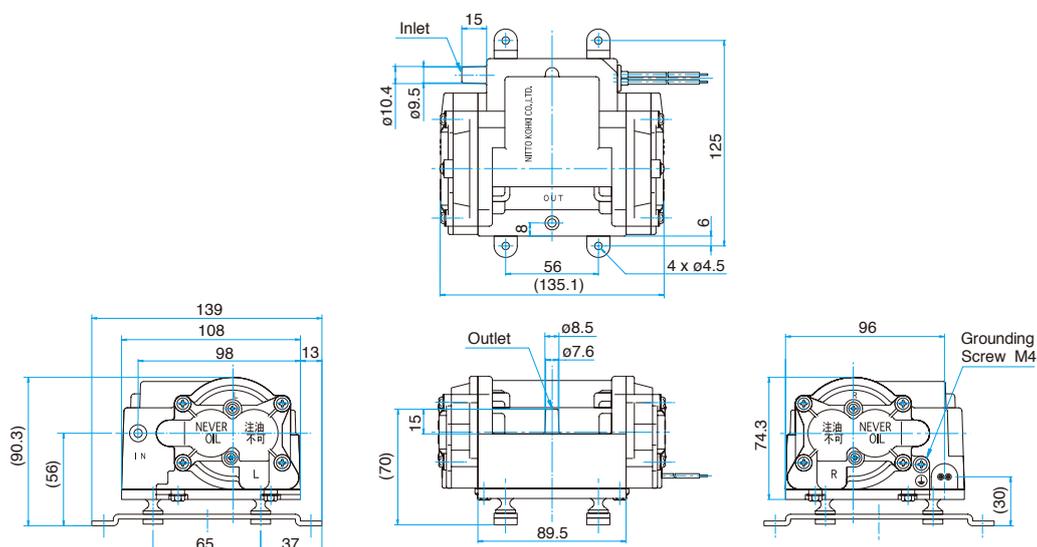



Compressor

Model VC0201B

Blower Type

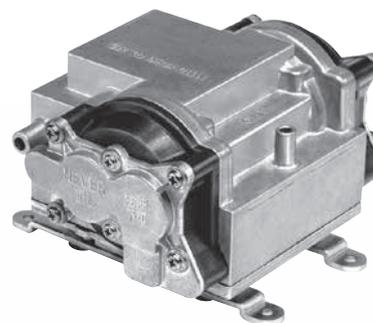

Airflow & Power Consumption

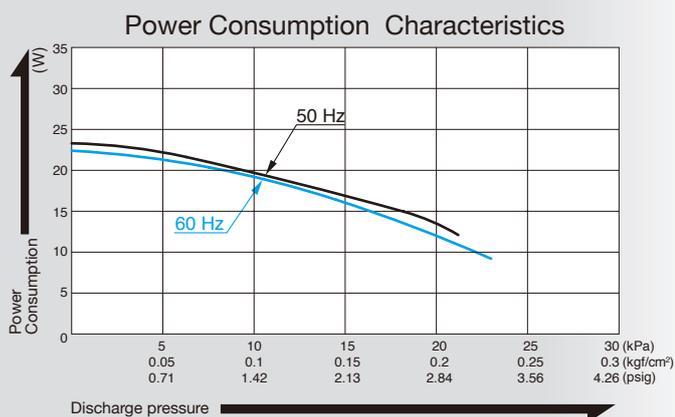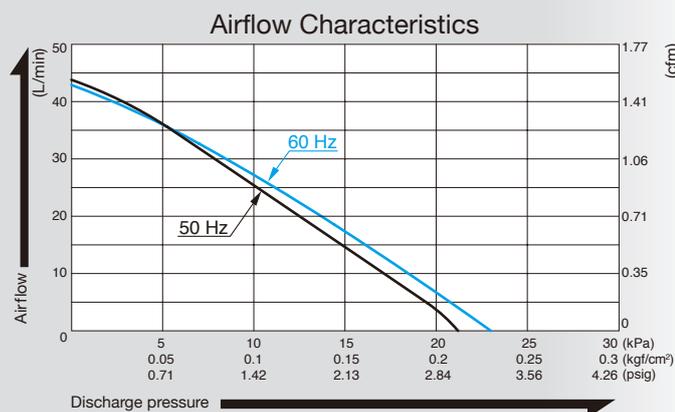


Specifications

| | |
|------------------------|--|
| Rated Pressure | 10 kPa (0.1 kgf/cm ²) 0.1 bar 1.42 psig |
| Rated Airflow | 20 L/min 0.71 cfm |
| Maximum Pressure | 18 kPa (0.18 kgf/cm ²) 0.18 bar 2.56 psig |
| Rated Voltage | 230 V AC*1 |
| Rated Frequency | 50 Hz / 60 Hz |
| Power Consumption | 21 W |
| Rated Performance | 10,000 hours |
| Working Pressure Range | 0 to 18 kPa (0 to 0.18 kgf/cm ²) 0 to 0.18 bar 0 to 2.56 psig |
| Outlet | 8.5 mm O.D. hose barb |
| Duty Cycle | Continuous |
| Coil Insulation Class | Class E equivalent |
| Mounting Dimensions | 125 (L) x 56 (W) mm 4 - 59/64" (L) x 2 - 13/64" (W) |
| Weight | 1.7 kg 3.7 Lbs |
| Leadwire Length | 300 mm 11 - 13/16" |


*1: Please contact us for 120 V AC model.

Application Examples

Bedsore Prevention
Mattress

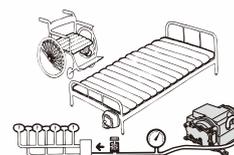


External Dimensions (Unit: mm)

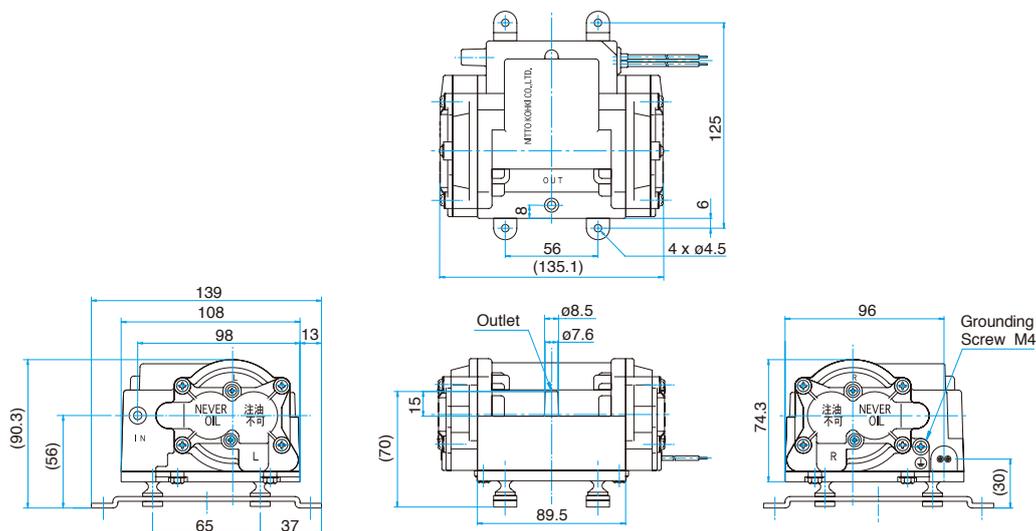



Compressor and Vacuum Pump

Model VC0301B

Dual Type

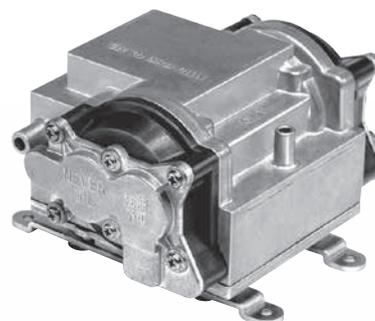

Airflow & Power Consumption

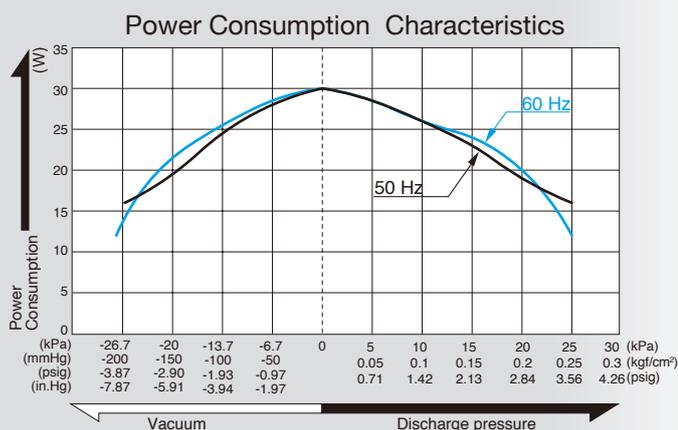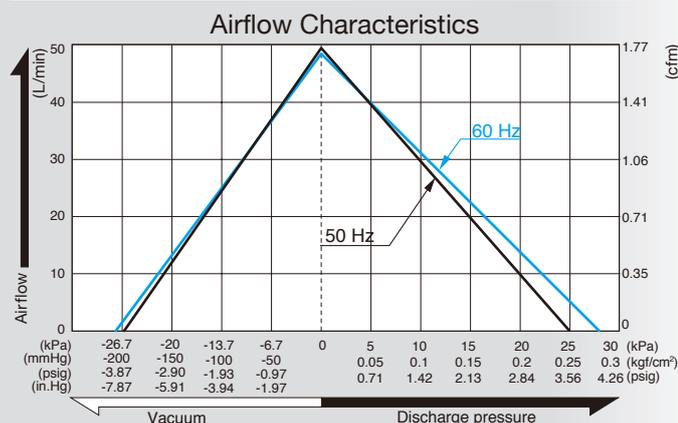


Specifications


| | | |
|------------------------|---|--------------------|
| Rated Pressure | 10 kPa (0.1 kgf/cm ²) 0.1 bar 1.42 psig | |
| Rated Airflow | 25 L/min 0.88 cfm | |
| Maximum Pressure | 20 kPa (0.2 kgf/cm ²) 0.2 bar 2.84 psig | |
| Attainable Vacuum | -21.3 kPa (-160 mmHg) -213 mbar -6.3 in.Hg | |
| Rated Voltage | 120 V AC | 230 V AC |
| Rated Frequency | 50 Hz / 60 Hz | |
| Power Consumption | 27 W | |
| Rated Performance | 10,000 hours | |
| Working Pressure Range | -21.3 kPa to 20 kPa (-160 mmHg to 0.2 kgf/cm ²) -213 mbar to 0.2 bar -6.3 in.Hg to 2.84 psig | |
| Inlet | 10.5 mm O.D. hose barb | |
| Outlet | 8.5 mm O.D. hose barb | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class B for UL | Class B equivalent |
| Mounting Dimensions | 125 (L) x 56 (W) mm 4 - 59/64" (L) x 2 - 13/64" (W) | |
| Weight | 1.7 kg 3.7 Lbs | |
| Leadwire Length | 300 mm 11 - 13/16" | |

Application Examples


Bedsore Prevention
Mattress

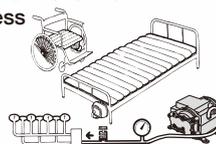

Solder Fume Suction

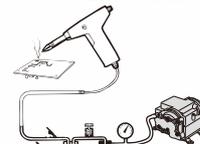


External Dimensions (Unit: mm)

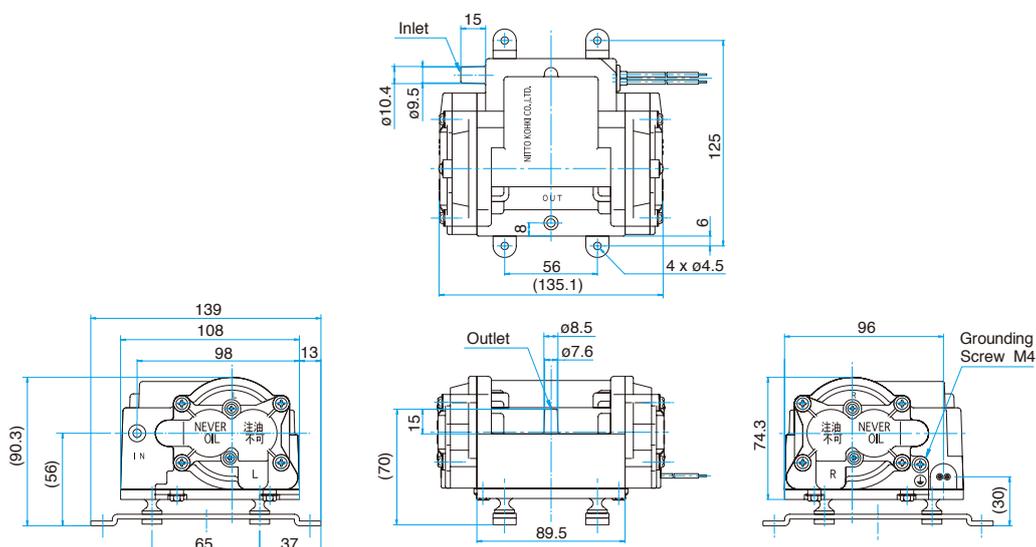



Compressor

Model VC0301B

Blower Type

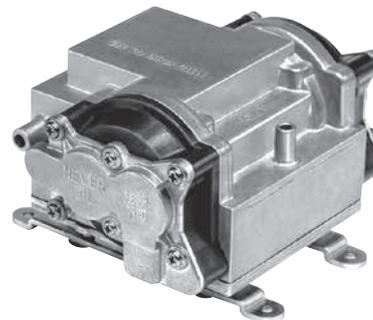

Airflow & Power Consumption

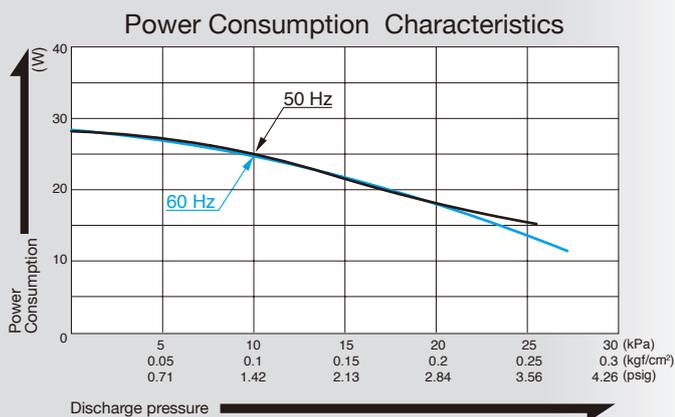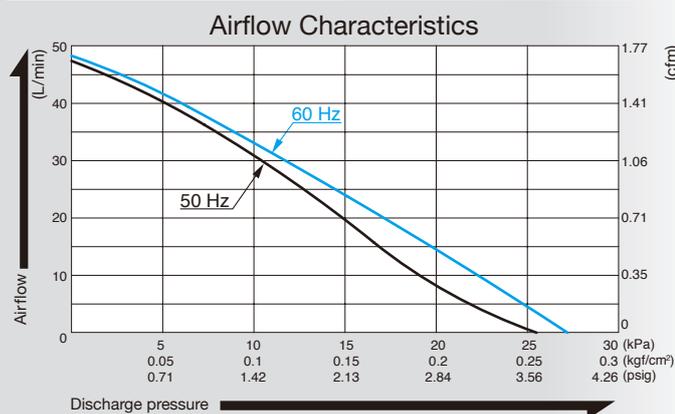


Specifications

| | |
|------------------------|--|
| Rated Pressure | 10 kPa (0.1 kgf/cm ²) 0.1 bar 1.42 psig |
| Rated Airflow | 25 L/min 0.88 cfm |
| Maximum Pressure | 20 kPa (0.2 kgf/cm ²) 0.2 bar 2.84 psig |
| Rated Voltage | 230 V AC*1 |
| Rated Frequency | 50 Hz / 60 Hz |
| Power Consumption | 27 W |
| Rated Performance | 10,000 hours |
| Working Pressure Range | 0 to 20 kPa (0 to 0.2 kgf/cm ²) 0 to 0.2 bar 0 to 2.84 psig |
| Outlet | 8.5 mm O.D. hose barb |
| Duty Cycle | Continuous |
| Coil Insulation Class | Class B equivalent |
| Mounting Dimensions | 125 (L) x 56 (W) mm 4 - 59/64" (L) x 2 - 13/64" (W) |
| Weight | 1.7 kg 3.7 Lbs |
| Leadwire Length | 300 mm 11 - 13/16" |


*1: Please contact us for 120 V AC model.

Application Examples

Bedsore Prevention
Mattress

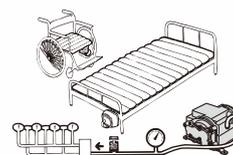

External Dimensions (Unit: mm)

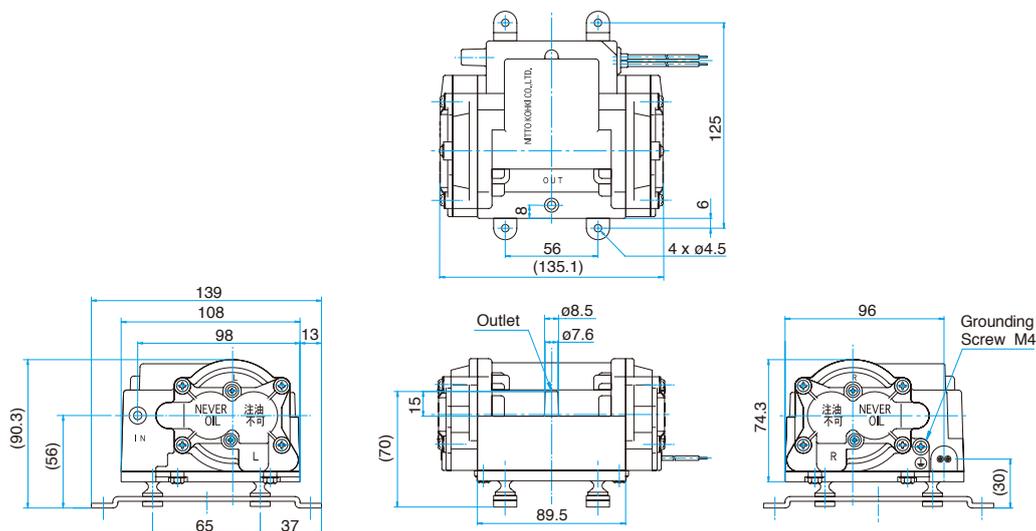

DC Motor Driven

Piston Pump
Diaphragm Pump

PISTON PUMP DIAPHRAGM PUMP

DP series


Page

Piston Pump

- DP0105-X1 — 55
- DP0105-Y1 — 55
- DPA0105-X1 — 56
- DPA0105-Y1 — 56
- DP0410-X1 — 57
- DP0410-Y1 — 57
- DP0410-X2 — 58
- DP0410-Y2 — 58
- DP0410T-Y1 — 59
- DP0410T-Y2 — 60

Diaphragm Pump

- DP0125A — 61
- DP0140 — 62
- DP0102 — 63
- DP0102S — 63
- DP0102H-X1 — 64
- DP0102H-X2 — 65
- DP0110-X1 — 66
- DP0110-Y1 — 66
- DP0110-X3 — 67
- DP0110T-X1 — 68
- DP0110T-Y1 — 68
- DP0210TA-Y1 — 69

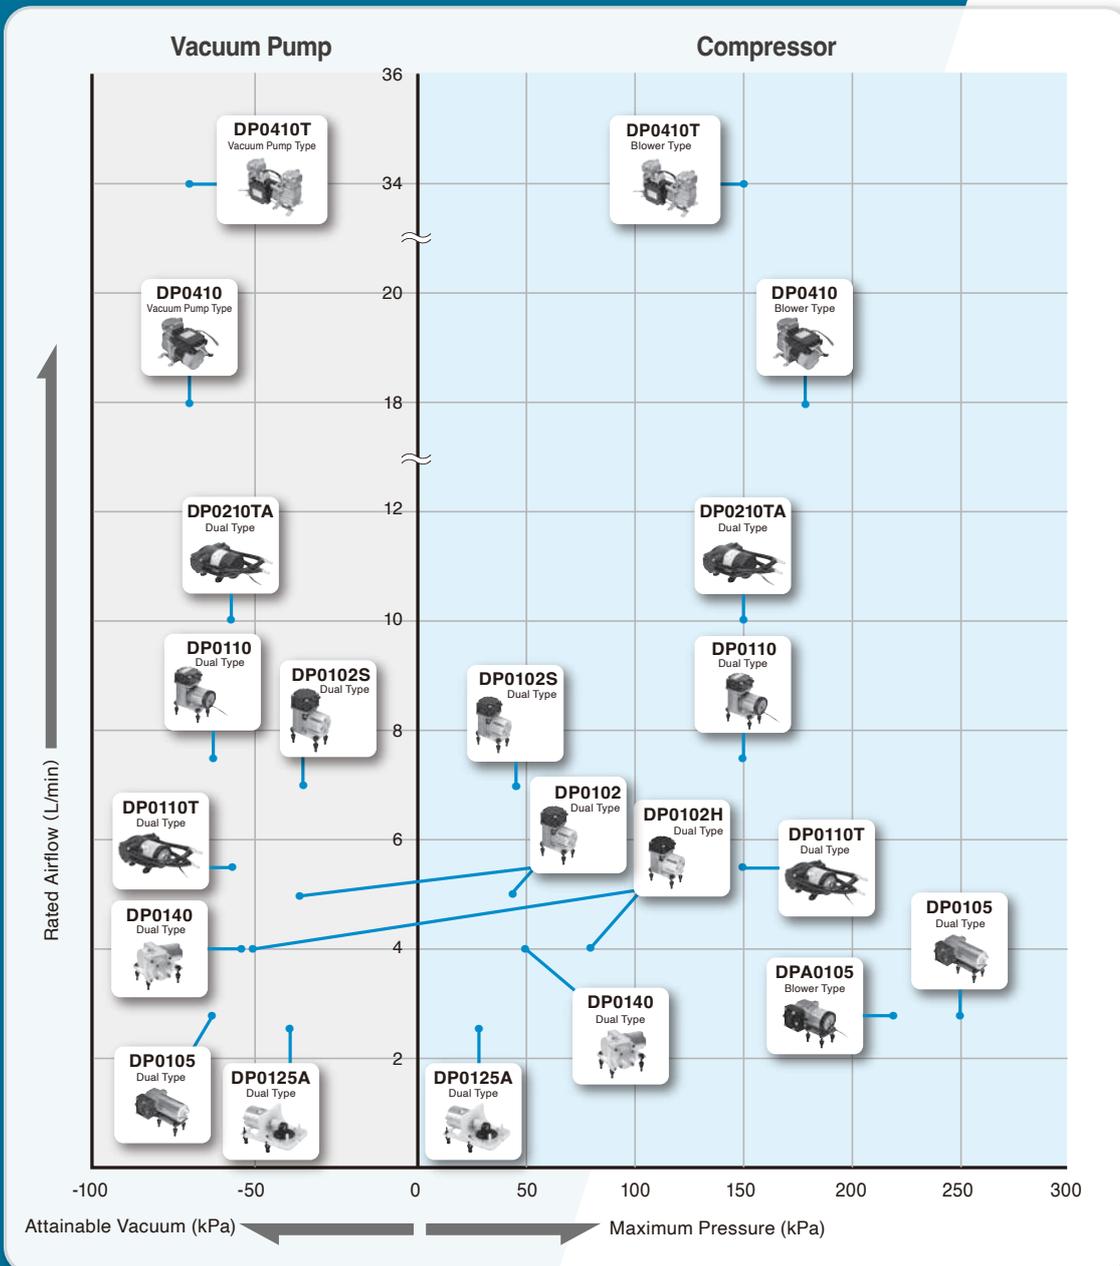

Compressor and Vacuum Pump




Model DP0105-X1 12 V DC
Model DP0105-Y1 24 V DC

Brush DC Motor



Airflow & Electric Current

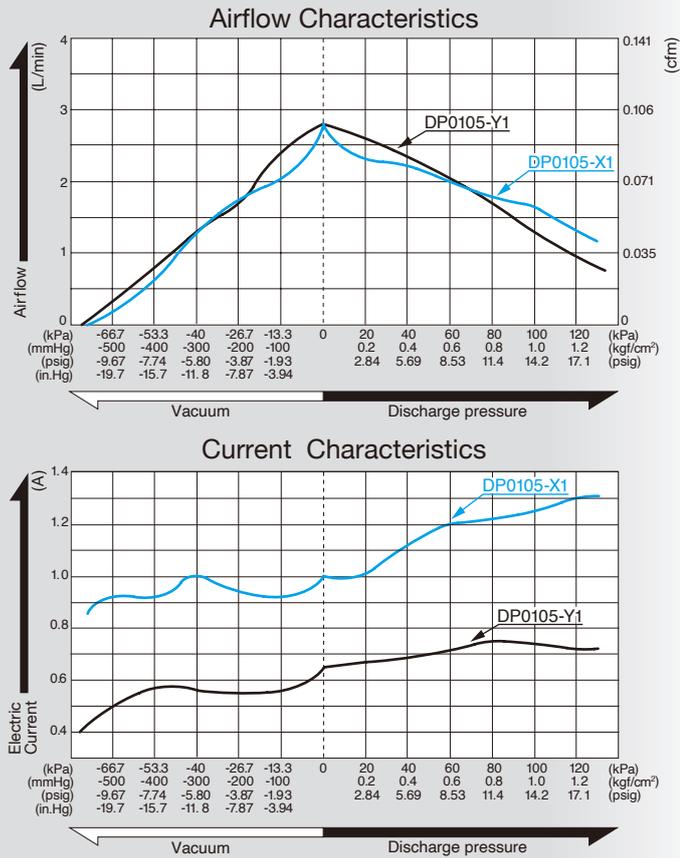


Specifications


| Model | DP0105-X1 | DP0105-Y1 |
|--------------------------|---|-----------|
| Attainable Vacuum | -66.7 kPa (-500 mmHg) -667 mbar -19.7 in.Hg | |
| Free Air Displacement | 2.8 L/min 0.099 cfm | |
| Rated Voltage | 12 V DC | 24 V DC |
| Maximum Current | 1.9 A | 0.95 A |
| Maximum Pressure | 250 kPa (2.5 kgf/cm ²) 2.5 bar 35.6 psig | |
| Duty Cycle | 30 minutes | |
| Working Pressure Range | -66.7 to 100 kPa (-500 mmHg to 1 kgf/cm ²) -667 mbar to 1 bar -19.7 in.Hg to 14.2 psig | |
| Rated Performance (MTTF) | 2,000 hours | |
| Inlet | 5 mm O.D. straight barb | |
| Outlet | 5 mm O.D. straight barb | |
| Coil Insulation Class | Class E equivalent | |
| Mounting Dimensions | 42 (L) x 24.5 (W) mm 1 - 21/32" (L) x 1 - 31/32" (W) | |
| Weight | 0.36 kg 0.79 Lbs | |
| Leadwire Length | 360 mm 14 - 11/64" | |

Application Examples

Vending Machines

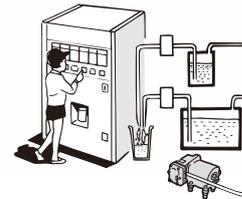

External Dimensions (Unit: mm)

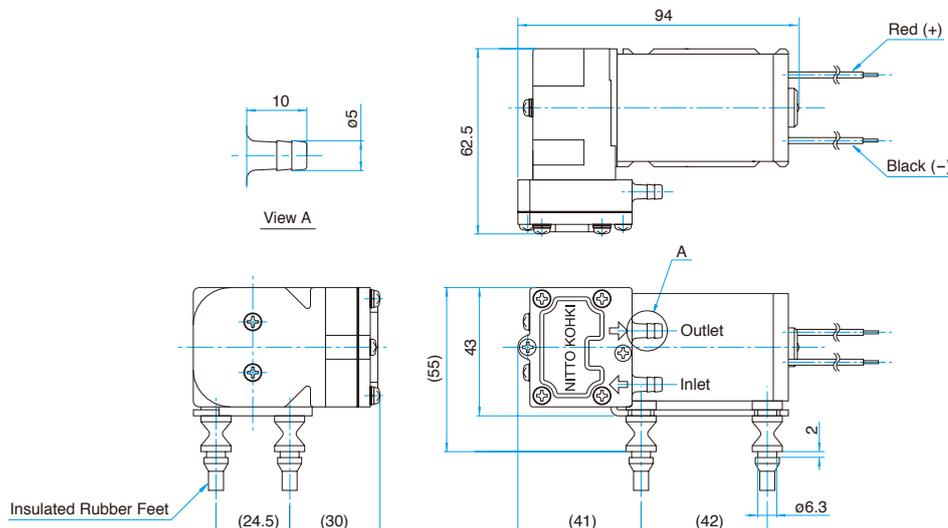


Compressor

Model **DPA0105-X1** 12 V DC
 Model **DPA0105-Y1** 24 V DC



Brushless DC Motor

Airflow & Electric Current

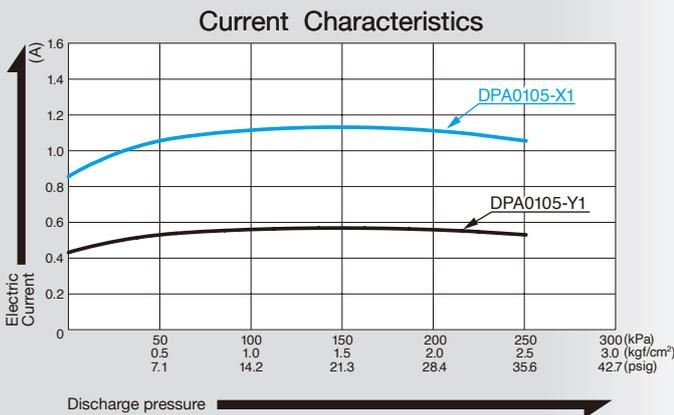


Specifications


| Model | DPA0105-X1 | DPA0105-Y1 |
|--------------------------|--|------------|
| Free Air Displacement | 2.8 L/min 0.099 cfm | |
| Rated Voltage | 12 V DC | 24 V DC |
| Maximum Current | 1.4 A | 0.7 A |
| Maximum Pressure | 220 kPa (2.2 kgf/cm ²) 2.2 bar 31.3 psig | |
| Duty Cycle | Continuous | |
| Working Pressure Range | 0 to 100 kPa (0 to 1 kgf/cm ²) 0 to 1 bar 0 to 14.2 psig | |
| Rated Performance (MTTF) | 5,000 hours | |
| Inlet | 5 mm O.D. straight barb | |
| Outlet | 5 mm O.D. straight barb | |
| Coil Insulation Class | Class A equivalent | |
| Mounting Dimensions | 32 (L) x 27.5 (W) mm 1 - 17/64" (L) x 1 - 5/64" (W) | |
| Weight | 0.3 kg 0.66 Lbs | |
| Leadwire Length | 360 mm 14 - 11/64" | |

Application Examples

Vending Machines

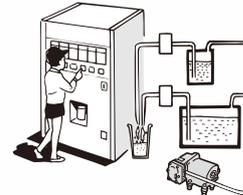

External Dimensions (Unit: mm)

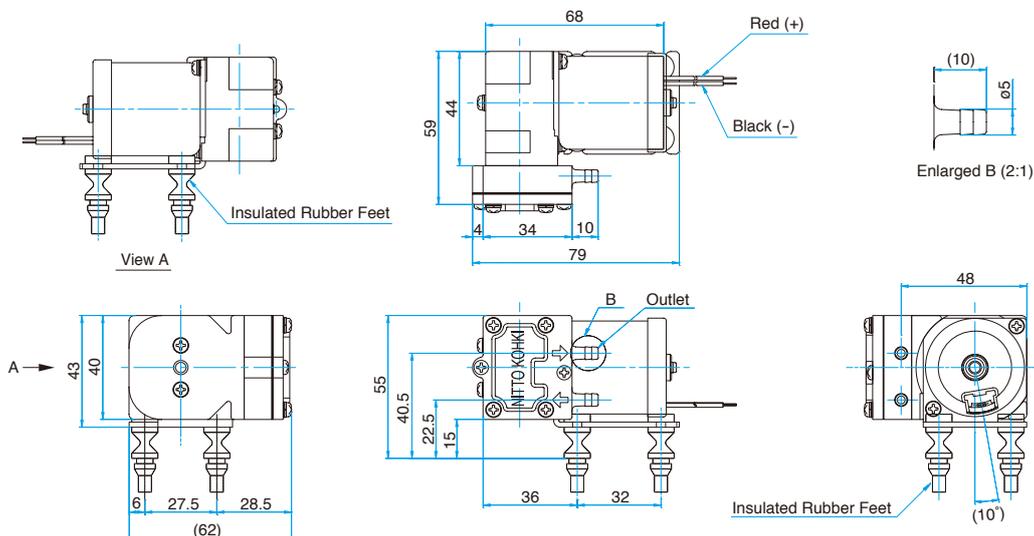


Vacuum Pump

Model DP0410-X1
Model DP0410-Y1

12 V DC PWM controllable




24 V DC PWM controllable

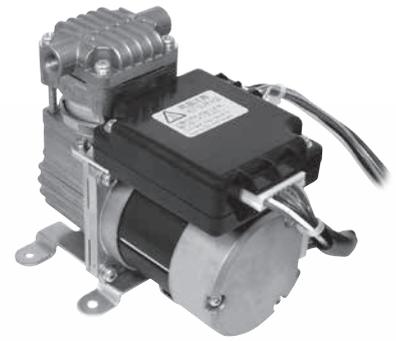

Brushless DC Motor



Airflow & Electric Current

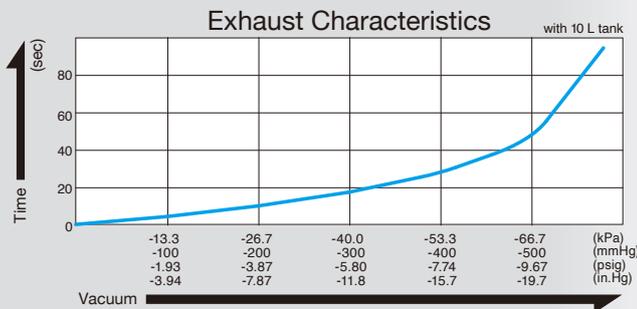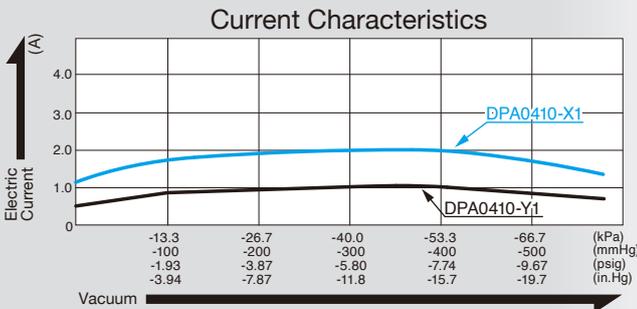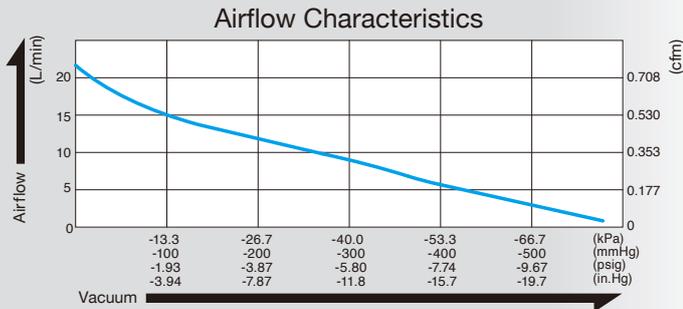


Specifications


| Model | DP0410-X1 | DP0410-Y1 |
|--------------------------|--|-----------|
| Attainable Vacuum | -77.3 kPa (-580 mmHg) -773 mbar -22.8 in.Hg | |
| Free Air Displacement | 18 L/min 0.64 cfm | |
| Rated Voltage | 12 V DC | 24 V DC |
| Maximum Current | 2.5 A | 1.5 A |
| Duty Cycle | Continuous | |
| Working Pressure Range | 0 to -77.3 kPa (0 to -580 mmHg) 0 to -773 mbar 0 to -22.8 in.Hg | |
| Rated Performance (MTTF) | 10,000 hours | |
| Inlet | Rc1/8 | |
| Outlet | Rc1/8 | |
| Coil Insulation Class | Class E equivalent | |
| Mounting Dimensions | 70 (L) x 45 (W) mm 2 - 3/4" (L) x 1 - 49/64" (W) | |
| Weight | 1.1 kg 2.4 Lbs | |
| Leadwire Length | 285 mm 11 - 7/32" | |

Application Examples

Vacuum glass sheet handling equipment

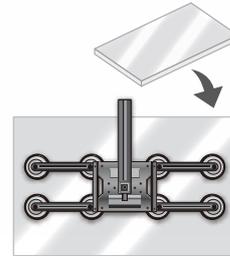

External Dimensions (Unit: mm)

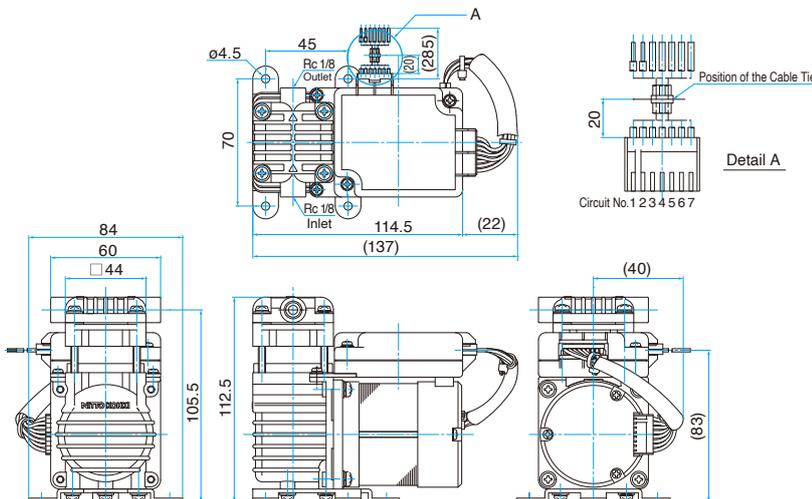

Connection Table

| Circuit No. | Power Source | | | Control Signal | | | |
|-------------|--------------|-------|------------|----------------|--------|-------|------|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| Cord Color | Red | Black | Brown | Orange | Yellow | Green | Gray |
| Function | V+ | V- | DRIVE/FREE | PULSE | ALARM | SPEED | SGND |
| Option | Function Off | ON | | OFF | | | |
| | Function On | ON | | ON | | | |
| Cord Size | AWG20 | | | AWG22 | | | |
| Line Type | UL1007 | | | | | | |

*Control function is "OFF" by default.

- Be sure to secure the lead wires with a cable tie. (See the detail A.) If they are not secured, poor contact of the connector may occur and result in failure.
- For the details of wiring, please see the user's instructions.

Compressor

Model DP0410-X2
Model DP0410-Y2

12 V DC PWM controllable


24 V DC PWM controllable

Brushless DC Motor




Airflow & Electric Current

Airflow Characteristics

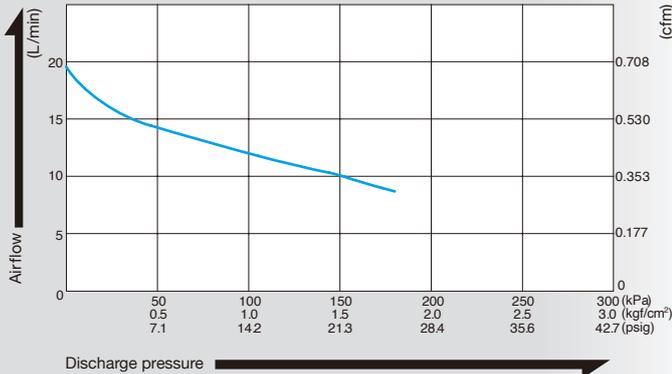

Current Characteristics

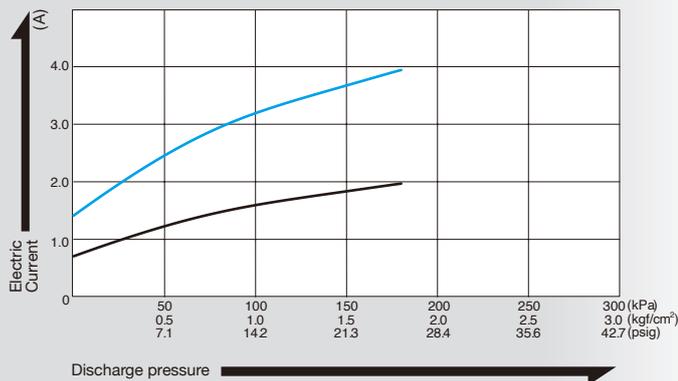


Specifications


| Model | DP0410-X2 | DP0410-Y2 |
|--------------------------|---|-----------|
| Free Air Displacement | 18 L/min 0.64 cfm | |
| Rated Voltage | 12 V DC | 24 V DC |
| Maximum Current | 5.0 A | 2.7 A |
| Maximum Pressure | 180 kPa (1.8 kgf/cm ²) 1.8 bar 25.6 psig | |
| Duty Cycle | Continuous | |
| Working Pressure Range | 0 to 180 kPa (0 to 1.8 kgf/cm ²) 0 to 1.8 bar 0 to 25.6 psig | |
| Rated Performance (MTTF) | 10,000 hours | |
| Inlet | ISO RC 1/8 | |
| Outlet | ISO RC 1/8 | |
| Coil Insulation Class | Class E equivalent | |
| Mounting Dimensions | 70 (L) x 45 (W) mm 2 - 3/4" (L) x 1 - 49/64" (W) | |
| Weight | 1.1 kg 2.4 Lbs | |
| Leadwire Length | 285 mm 11 - 7/32" | |

Application Examples

Air Cylinder/Chuck Driver

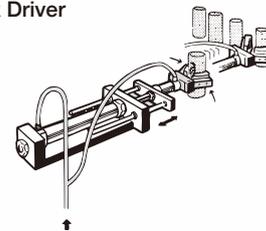

External Dimensions (Unit: mm)

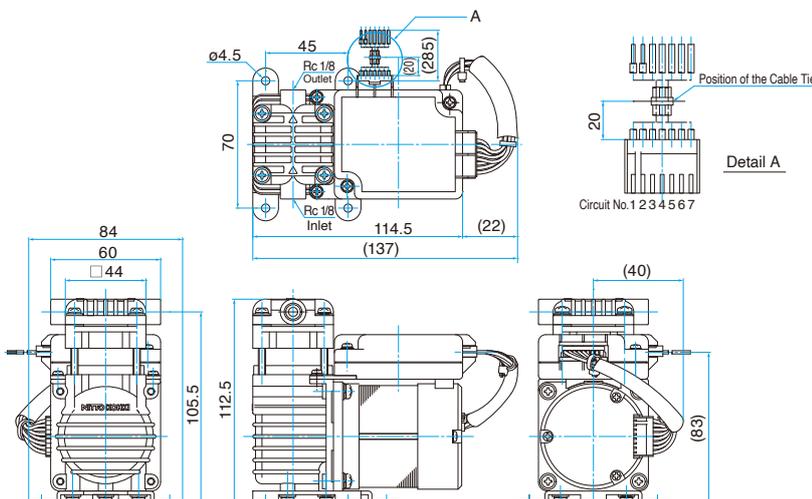

Connection Table

| Circuit No. | Power Source | | Control Signal | | | | |
|-------------|--------------|-------|----------------|--------|--------|-------|------|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| Cord Color | Red | Black | Brown | Orange | Yellow | Green | Gray |
| Function | V+ | V- | DRIVE/FREE | PULSE | ALARM | SPEED | SGND |
| Option | Function Off | ON | OFF | | | | |
| | Function On | ON | ON | | | | |
| Cord Size | AWG20 | | AWG22 | | | | |
| Line Type | UL1007 | | | | | | |

*Control function is "OFF" by default.

- Be sure to secure the lead wires with a cable tie. (See the detail A.) If they are not secured, poor contact of the connector may occur and result in failure.
- For the details of wiring, please see the user's instructions.

Vacuum Pump

Model **DPO410T-Y1**




PWM controllable



Brushless DC Motor **24 V DC**



Airflow & Electric Current

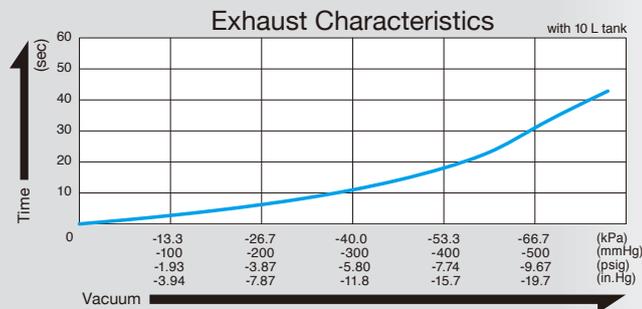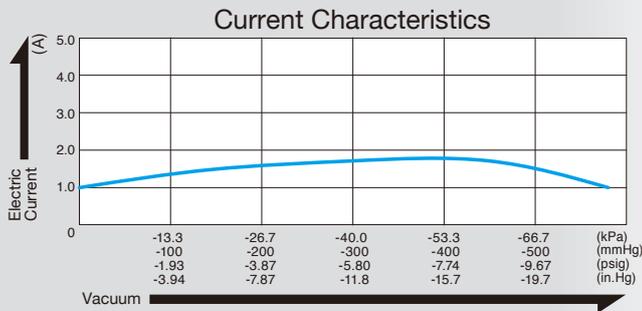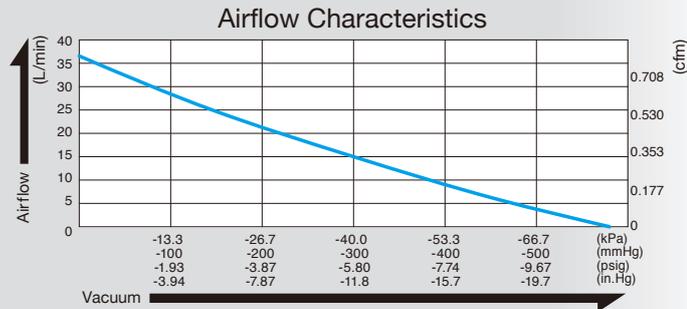


Specifications


| | |
|--------------------------|--|
| Attainable Vacuum | -77.3 kPa (-580 mmHg) -773 mbar -22.8 in.Hg |
| Free Air Displacement | 34 L/min 1.2 cfm |
| Rated Voltage | 24 V DC |
| Maximum Current | 2.5 A |
| Duty Cycle | Continuous |
| Working Pressure Range | 0 to -77.3 kPa (0 to -580 mmHg) 0 to -773 mbar 0 to -22.8 in.Hg |
| Rated Performance (MTTF) | 5,000 hours |
| Inlet | Rc1/8 |
| Outlet | Rc1/8 |
| Coil Insulation Class | Class E equivalent |
| Mounting Dimensions | 166 (L) x 84 (W) mm 6 - 17/32" (L) x 3 - 5/16" (W) |
| Weight | 1.6 kg 3.5 Lbs |
| Leadwire Length | 285 mm 11 - 7/32" |

Application Examples

Vacuum glass sheet handling equipment

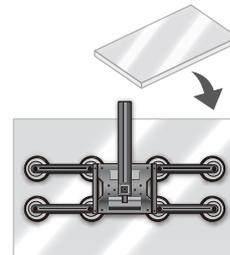

External Dimensions (Unit: mm)

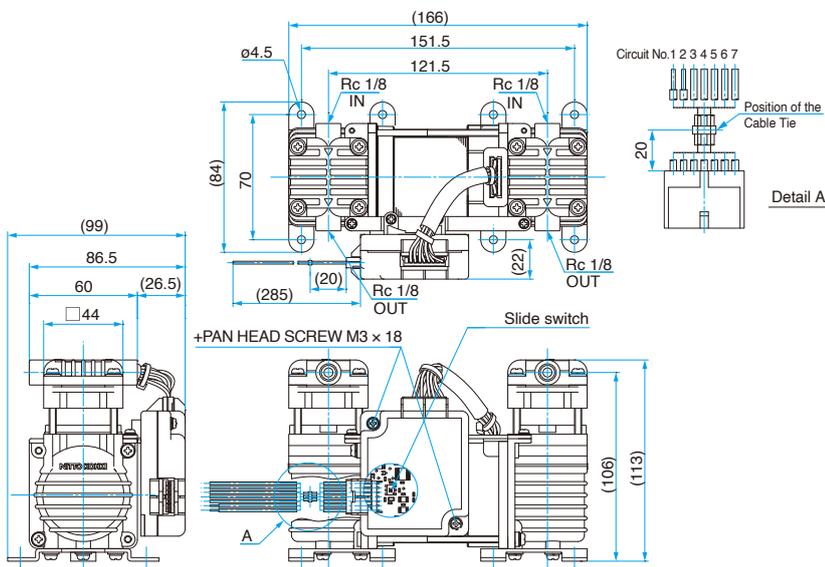

Connection Table

| Circuit No. | Power Source | | Control Signal | | | | |
|-------------|--------------|-------|----------------|--------|--------|-------|------|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| Cord Color | Red | Black | Brown | Orange | Yellow | Green | Gray |
| Function | V+ | V- | DRIVE / FREE | PULSE | ALARM | SPEED | SGND |
| Option | Function Off | ON | OFF | | | | |
| | Function On | ON | ON | | | | |
| Cord Size | AWG20 | | | AWG22 | | | |
| Line Type | UL1007 | | | | | | |

*Control function is "OFF" by default.

- Be sure to secure the lead wires with a cable tie. (See the detail A.) If they are not secured, poor contact of the connector may occur and result in failure.
- For the details of wiring, please see the user's instructions.

Compressor



Model **DPO410T-Y2**

PWM controllable



Brushless DC Motor **24 V DC**

Airflow & Electric Current

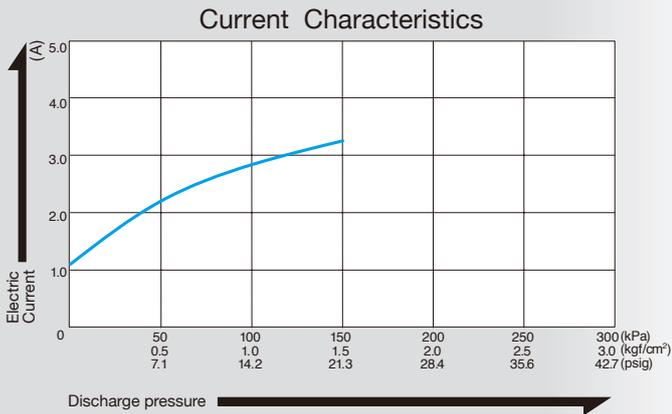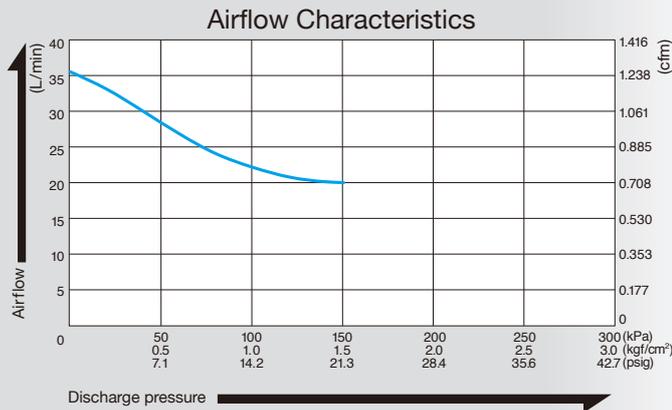


Specifications


| | |
|--------------------------|---|
| Free Air Displacement | 34 L/min 1.2 cfm |
| Rated Voltage | 24 V DC |
| Maximum Pressure | 150 kPa (1.5 kgf/cm ²) 1.5 bar 21.3 psig |
| Maximum Current | 4.0 A |
| Duty Cycle | Continuous |
| Working Pressure Range | 0 to 150 kPa (0 to 1.5 kgf/cm ²) 0 to 1.5 bar 0 to 21.3 psig |
| Rated Performance (MTTF) | 5,000 hours |
| Inlet | RC 1/8 |
| Outlet | RC 1/8 |
| Coil Insulation Class | Class E equivalent |
| Mounting Dimensions | 166 (L) x 84 (W) mm 6 - 17/32" (L) x 3 - 5/16" (W) |
| Weight | 1.6 kg 3.5 Lbs |
| Leadwire Length | 285 mm 11 - 7/32" |

Application Examples

Air Cylinder/Chuck Driver

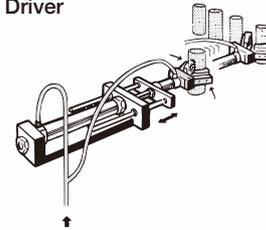

External Dimensions (Unit: mm)

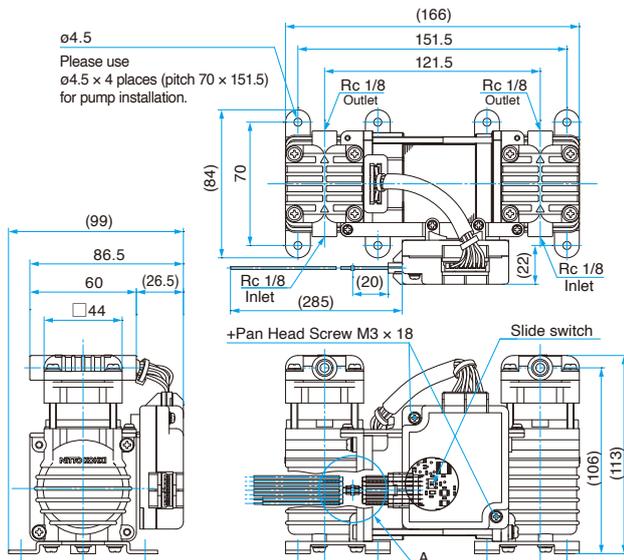

Connection Table

| Circuit No. | Power Source | | | Control Signal | | | |
|-------------|--------------|-------|--------------|----------------|--------|-------|------|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| Cord Color | Red | Black | Brown | Orange | Yellow | Green | Gray |
| Function | V+ | V- | DRIVE / FREE | PULSE | ALARM | SPEED | SGND |
| Option | Function Off | ON | | | OFF | | |
| | Function On | ON | | | ON | | |
| Cord Size | AWG20 | | | AWG22 | | | |
| Line Type | UL1007 | | | | | | |

*Control function is "OFF" by default.


- Be sure to secure the lead wires with a cable tie. (See the detail A.) If they are not secured, poor contact of the connector may occur and result in failure.
- For the details of wiring, please see the user's instructions.

Compressor and Vacuum Pump



Model DP0125A



Brush DC Motor 12 V DC

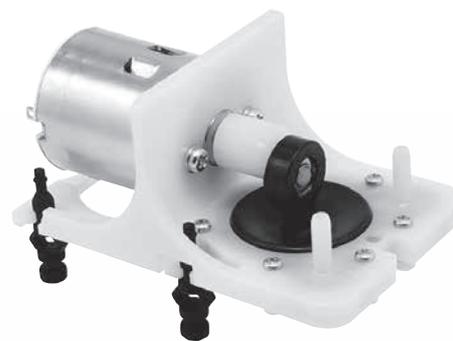

Airflow & Electric Current

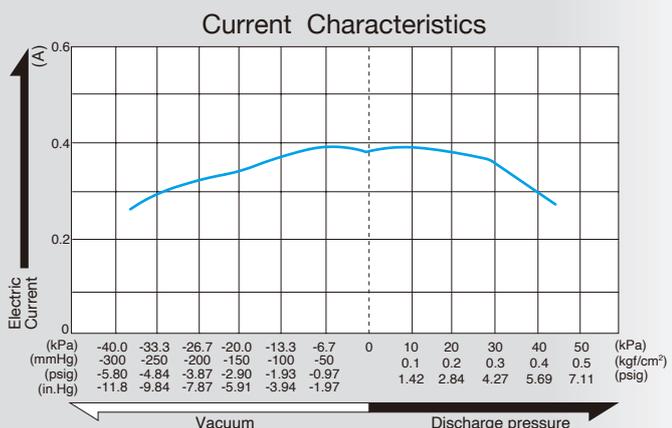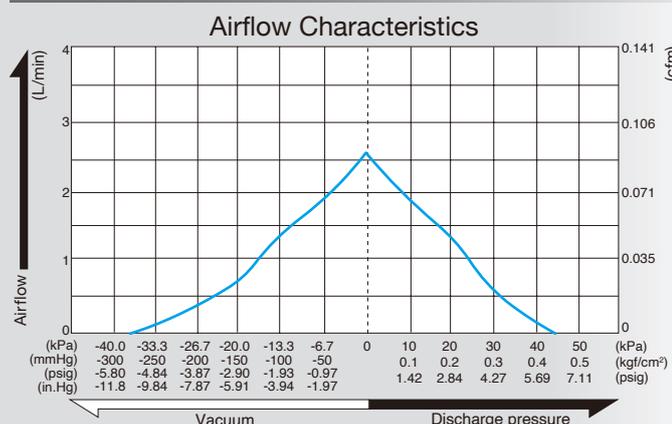


Specifications


| | |
|--------------------------|---|
| Attainable Vacuum | -33.3 kPa (-250 mmHg) -333 mbar - 9.84 in.Hg |
| Free Air Displacement | 2.5 L/min 0.088 cfm |
| Rated Voltage | 12 V DC |
| Maximum Pressure | 30 kPa (0.3 kgf/cm ²) 0.3 bar 4.27 psig |
| Maximum Current | 0.5 A |
| Duty Cycle | Continuous |
| Rated Performance (MTTF) | 1000 hours |
| Inlet | 3 mm O.D. straight barb |
| Outlet | 3 mm O.D. straight barb |
| Coil Insulation Class | Class E equivalent |
| Mounting Dimensions | 32 (L) x 32.5 (W) mm 1 - 17/64" (L) x 1 - 9/32" (W) |
| Weight | 0.075 kg 0.165 Lbs |

Application Examples


Disinfectant Spray

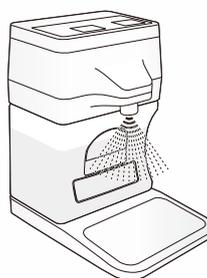

Caregiver Toothbrush

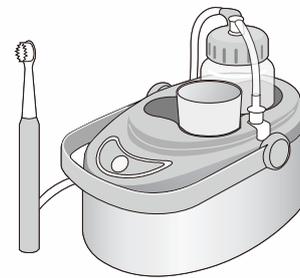

External Dimensions (Unit: mm)

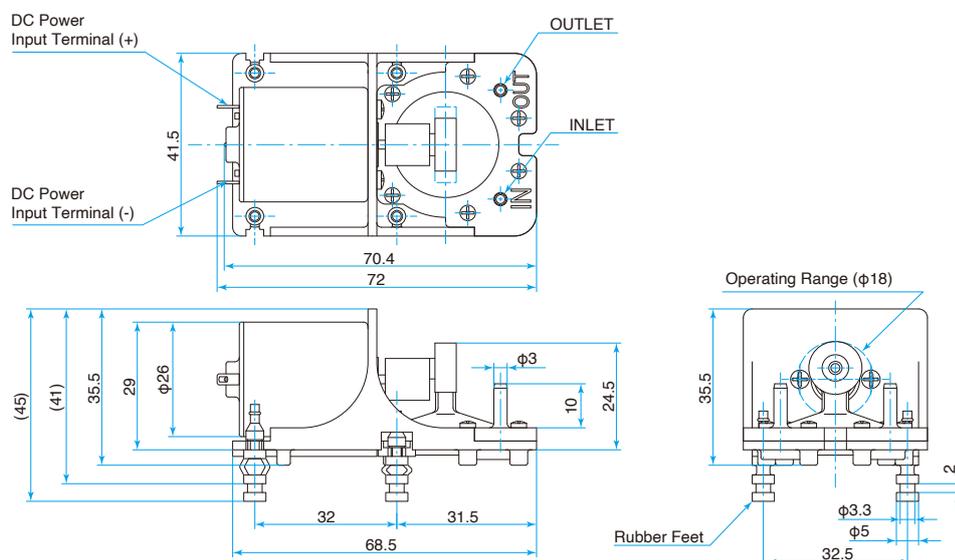

Compressor and Vacuum Pump



Model DP0102 12 V DC
Model DP0102S 24 V DC



Brushless DC Motor



Airflow & Electric Current

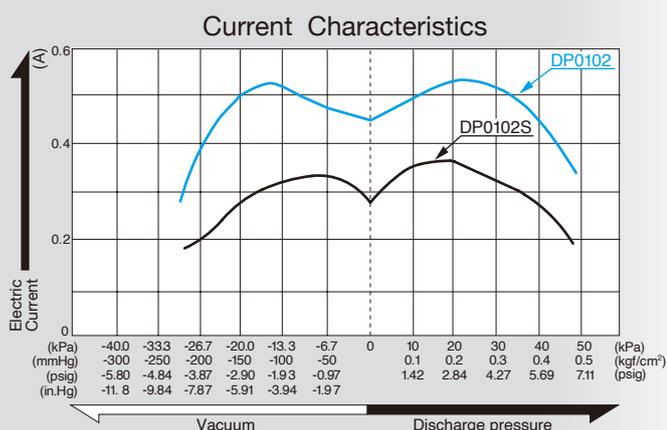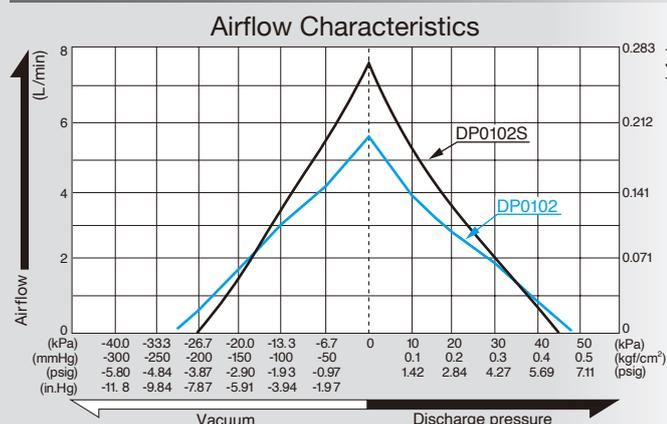

Specifications


| Model | DP0102 | DP0102S |
|--------------------------|---|------------------------|
| Attainable Vacuum | -26.7 kPa (-200 mmHg) -267 mbar -7.87 in.Hg | |
| Free Air Displacement | 5.0 L/min 0.177 cfm | 7.0 L/min 0.247 cfm |
| Rated Voltage | 12 V DC | 24 V DC |
| Maximum Current | 0.7 A | 0.5 A |
| Maximum Pressure | 45 kPa (0.45 kgf/cm ²) 0.45 bar 6.4 psig | |
| Duty Cycle | Continuous | |
| Working Pressure Range | -26.7 kPa to 45 kPa (-200 mmHg to 0.45 kgf/cm ²) -267 mbar to 0.45 bar -7.87 in.Hg to 6.4 psig | |
| Rated Performance (MTTF) | 10,000 hours | |
| Inlet | 6 mm O.D. straight barb | |
| Outlet | 6 mm O.D. straight barb | |
| Coil Insulation Class | Class E equivalent | |
| Mounting Dimensions | 50 (L) x 30 (W) mm 1 - 31/32" (L) x 1 - 3/16" (W) | |
| Weight | 0.25 kg 0.55 Lbs | |
| Leadwire Length | 400 mm 15 - 3/4" | |

Application Examples


Endoscopes



Removal of micromachining chips

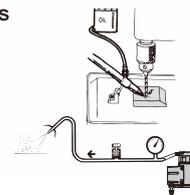

External Dimensions (Unit: mm)

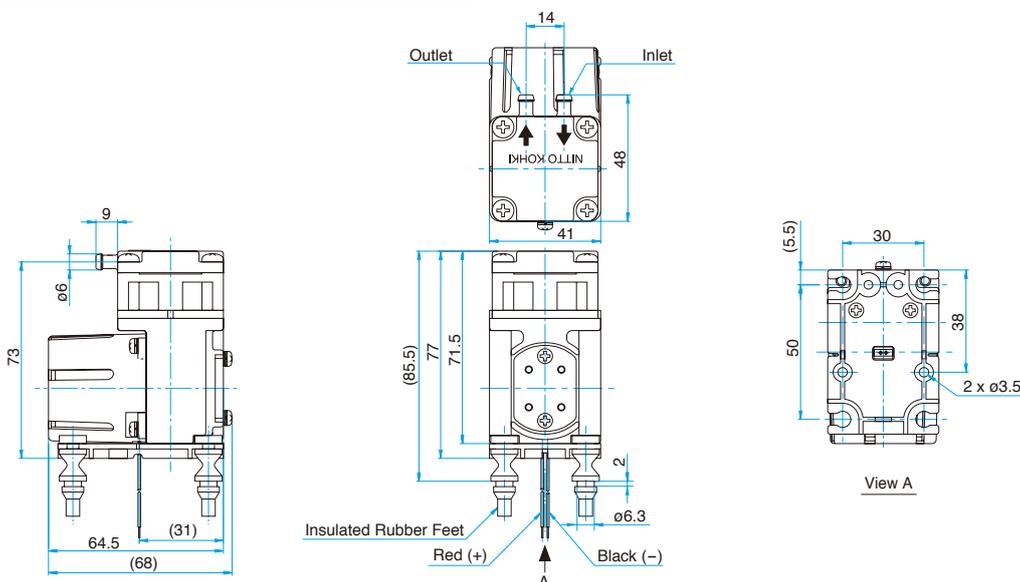



Compressor

Model **DP0102H-X2**



Brushless DC Motor **12 V DC**

Airflow & Electric Current

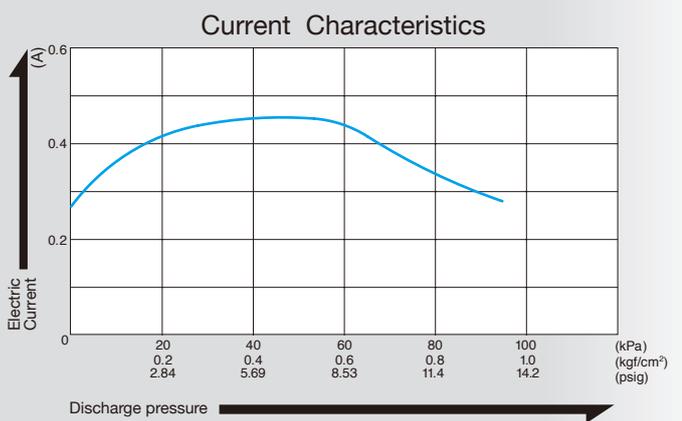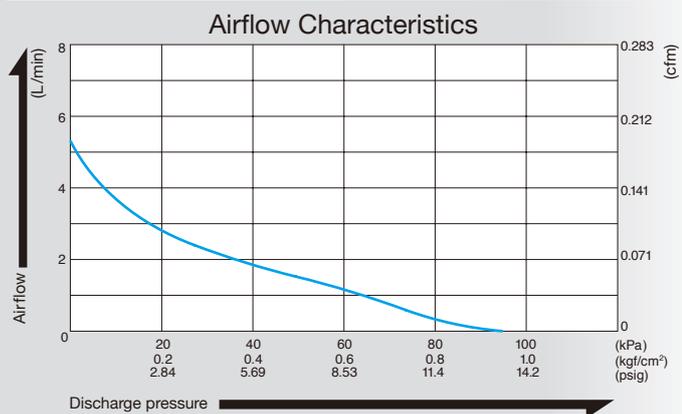


Specifications


| | |
|--------------------------|--|
| Free Air Displacement | 4.0 L/min 0.141 cfm |
| Rated Voltage | 12 V DC |
| Maximum Pressure | 80 kPa (0.8 kgf/cm ²) 0.8 bar 11.4 psig |
| Maximum Current | 0.7 A |
| Duty Cycle | Continuous |
| Working Pressure Range | 0 to 80 kPa (0 to 0.8 kgf/cm ²) 0 to 0.8 bar 0 to 11.4 psig |
| Rated Performance (MTTF) | 8,000 hours |
| Inlet | 6 mm O.D. straight barb |
| Outlet | 6 mm O.D. straight barb |
| Coil Insulation Class | Class E equivalent |
| Mounting Dimensions | 50 (L) x 30 (W) mm 1 - 31/32" (L) x 1 - 3/16" (W) |
| Weight | 0.25 kg 0.55 Lbs |
| Leadwire Length | 400 mm 15 - 3/4" |

Application Examples

Removal of micromachining chips

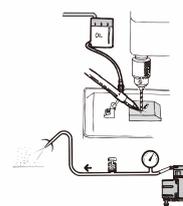

External Dimensions (Unit: mm)

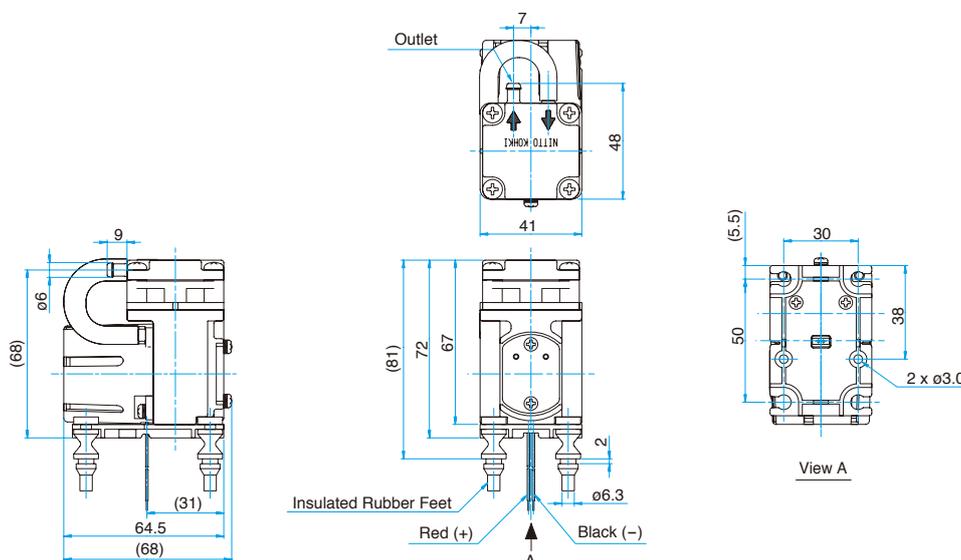



Compressor and Vacuum Pump

Model DP0110-X1 12 V DC
Model DP0110-Y1 24 V DC



Brushless DC Motor

Airflow & Electric Current

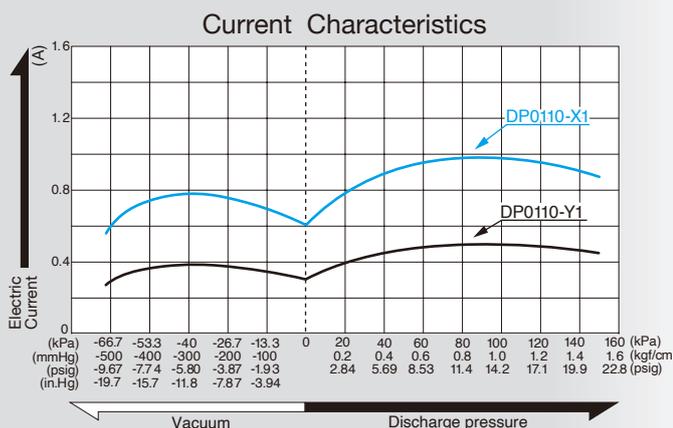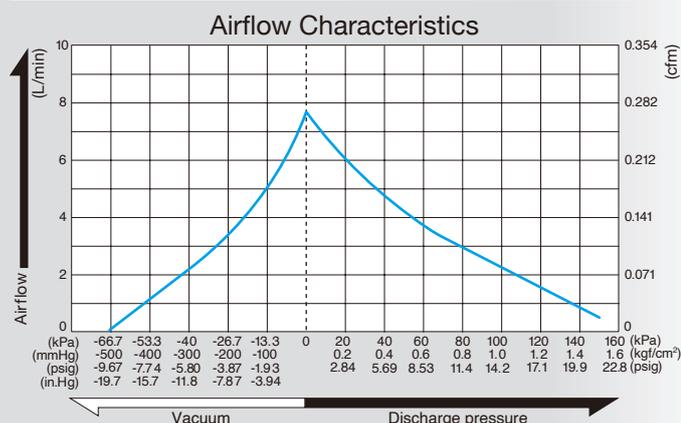


Specifications


| Model | DP0110-X1 | DP0110-Y1 |
|--------------------------|---|-----------|
| Attainable Vacuum | -66.7 kPa (-500 mmHg) -667 mbar -19.7 in.Hg | |
| Free Air Displacement | 7.5 L/min 0.265 cfm | |
| Rated Voltage | 12 V DC | 24 V DC |
| Maximum Current | 1.2 A | 0.6 A |
| Maximum Pressure | 150 kPa (1.5 kgf/cm ²) 1.5 bar 21.3 psig | |
| Duty Cycle | Continuous | |
| Working Pressure Range | -66.7 kPa to 150 kPa (-500 mmHg to 1.5 kgf/cm ²) -667 mbar to 1.5 bar -19.7 in.Hg to 21.3 psig | |
| Rated Performance (MTTF) | 8,000 hours | |
| Inlet | 6 mm O.D. straight barb | |
| Outlet | 6 mm O.D. straight barb | |
| Coil Insulation Class | Class A equivalent | |
| Mounting Dimensions | 50 (L) x 30 (W) mm 1 - 31/32" (L) x 1 - 3/16" (W) | |
| Weight | 0.30 kg 0.66 Lbs | |
| Leadwire Length | 360 mm 14 - 11/64" | |

Application Examples

Vacuum pick up and place devices for CD & DVD

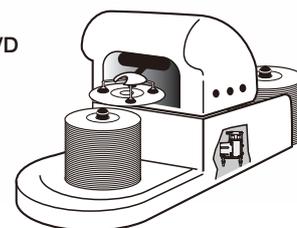

External Dimensions (Unit: mm)

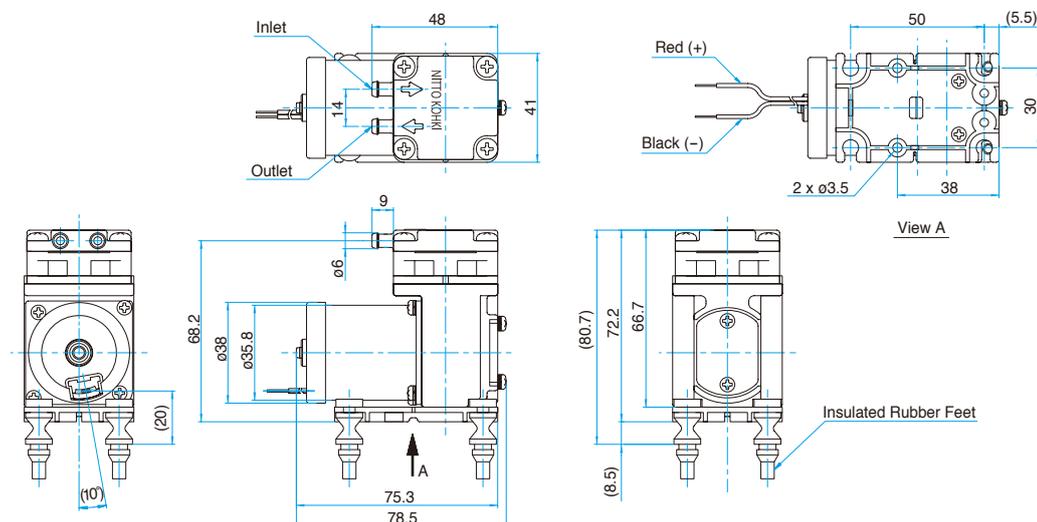

Compressor and Vacuum Pump



Model DP0110-X3

PWM controlled model



Brushless DC Motor 12 V DC

Airflow & Electric Current

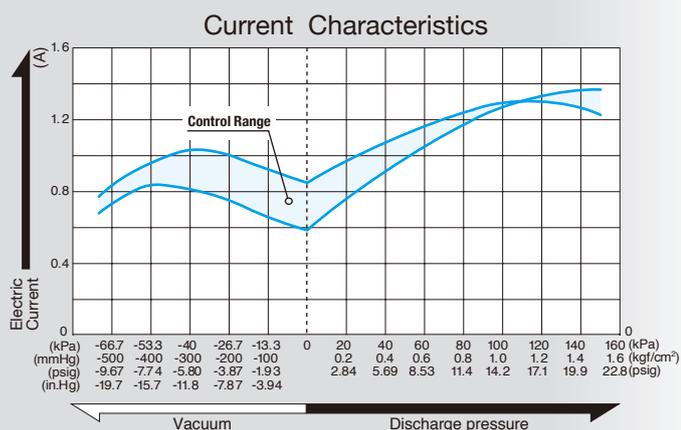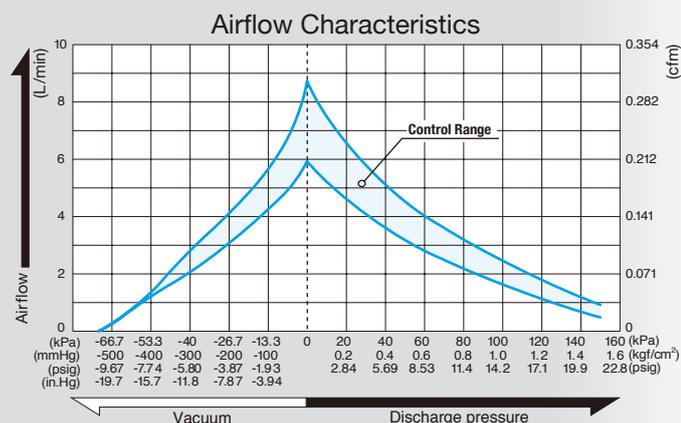


Specifications

| | |
|--------------------------|---|
| Attainable Vacuum | -66.7 kPa (-500 mmHg) -667 mbar -19.7 in.Hg |
| Free Air Displacement | 7.5 L/min 0.265 cfm |
| Rated Voltage | 12 V DC |
| Maximum Pressure | 150 kPa (1.5 kgf/cm ²) 1.5 bar 21.3 psig |
| Maximum Current | 1.4 A |
| Duty Cycle | Continuous |
| Working Pressure Range | -66.7 kPa to 150 kPa (-500 mmHg to 1.5 kgf/cm ²) -667 mbar to 1.5 bar -19.7 in.Hg to 21.3 psig |
| Rated Performance (MTTF) | 8,000 hours |
| Control(PWM) | 2.5 - 5 V, 15 - 25 kHz, Duty cycle 80 - 100% |
| Inlet | 6 mm O.D. straight barb |
| Outlet | 6 mm O.D. straight barb |
| Coil Insulation Class | Class A equivalent |
| Mounting Dimensions | 50 (L) x 30 (W) mm 1 - 31/32" (L) x 1 - 3/16" (W) |
| Weight | 0.30 kg 0.66 Lbs |
| Leadwire Length | 180 mm 7 - 3/32" |

Application Examples


Vacuum pick up and place devices for CD & DVD

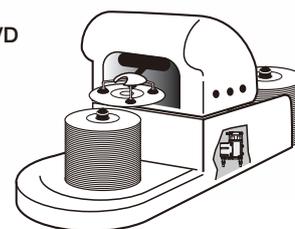

External Dimensions (Unit: mm)

Mounting Dimension of Rubber Foot:

Plate thickness : t = 2 mm,
Hole diameter : $\phi 6 \pm 0.1$ mm
(Rubber feet come with the product as accessories.)

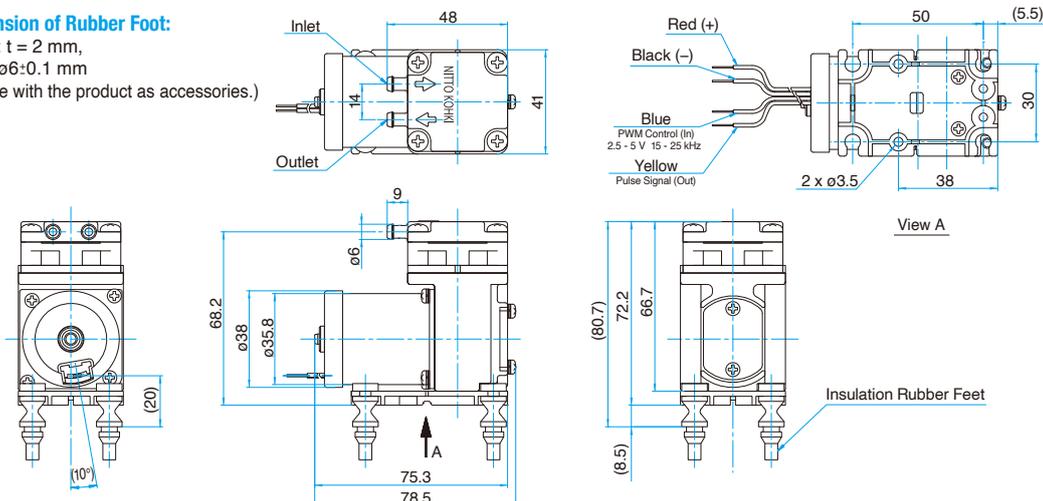

Compressor and Vacuum Pump



Model **DPO210TA-Y1** PWM controllable



Brushless DC Motor 24 V DC



Airflow & Electric Current

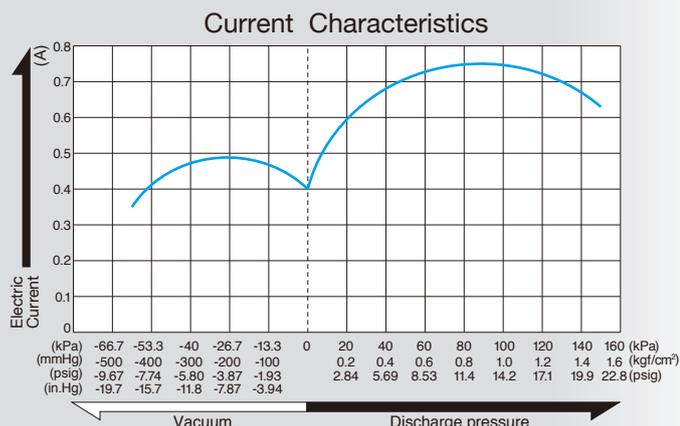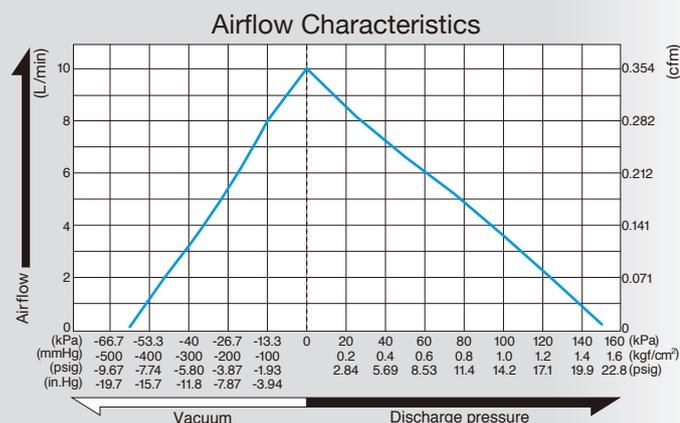


Specifications

| | |
|--------------------------|---|
| Attainable Vacuum | -60.0 kPa (-450 mmHg) -600 mbar -17.7 in.Hg |
| Free Air Displacement | 10 L/min 0.35 cfm |
| Rated Voltage | 24 V DC |
| Maximum Pressure | 150 kPa (1.5 kgf/cm ²) 1.5 bar 21.3 psig |
| Maximum Current | 0.8 A |
| Duty Cycle | Continuous |
| Working Pressure Range | -60.0 kPa to 150 kPa (-450 mmHg to 1.5 kgf/cm ²) -600 mbar to 1.5 bar -17.7 in.Hg to 21.3 psig |
| Rated Performance (MTTF) | 5,000 hours |
| Inlet | 6.8 mm O.D. straight barb |
| Outlet | 6.8 mm O.D. straight barb |
| Coil Insulation Class | Class B equivalent |
| Mounting Dimensions | 36.5 (L) x 37.5 (W) mm 1 - 7/16" (L) x 1 - 15/32" (W) |
| Weight | 0.32 kg 0.71 Lbs |
| Leadwire Length | 300 mm 11 - 13/16" |

Application Examples

Vending Machines

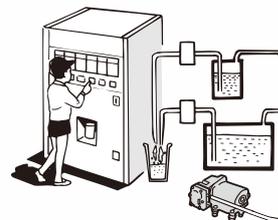


External Dimensions (Unit: mm)




Connection Table

| | | | | | | | | |
|------------------|----------------|--------|---|---|--------------|-------|-------|-----|
| Circuit No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Cord Color | — | Yellow | — | — | White | Blue | Black | Red |
| Connection Table | Control Signal | | | | Power Source | | | |
| Function | — | FG | — | — | PWM | BRAKE | GND | VM |
| Cord Size | AWG28 | | | | AWG26 | | | |
| Cord UL Style | UL1571 | | | | | | | |

No control function

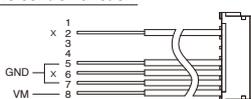

Use control function

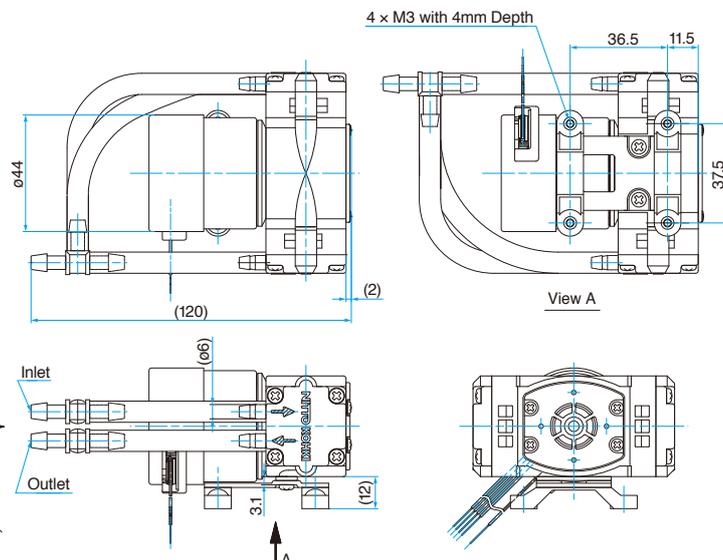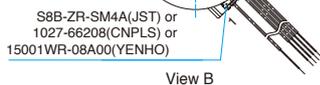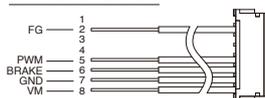

LIQUID PUMP

Piezoelectric Pump
DC Diaphragm Liquid Pump

LIQUID PUMP

Piezoelectric Pump

BIMOR series

DC Diaphragm Liquid Pump

DPE series


Page

BPS Type
BPH Type — 71
BPHS Type
BPF Type

DPE-100
DPE-400 — 73
DPE-400BL
DPE-800

DPE-100BLC — 75
DPE-200BLC

Liquid Pump series

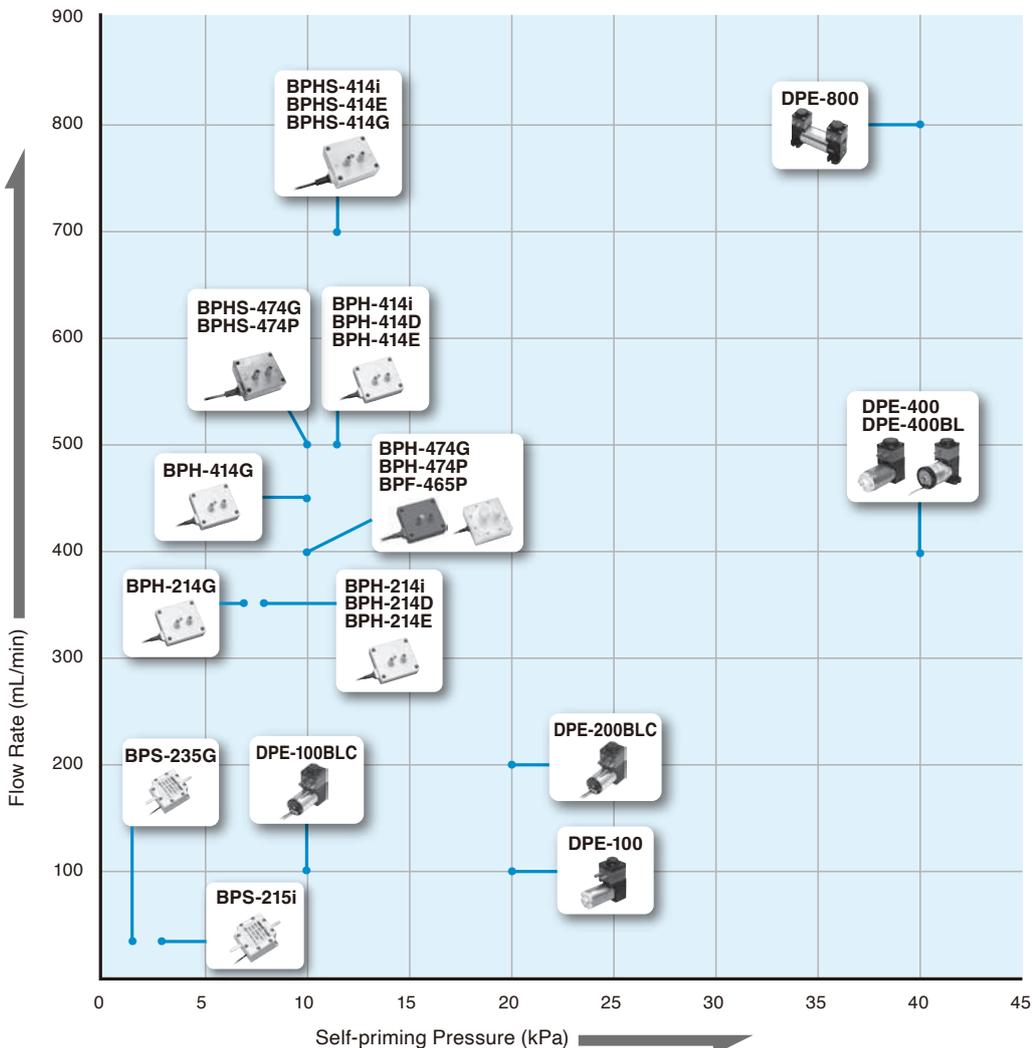

i : Butyl Rubber
G : Fluoro Rubber
D : Dimethyl Silicon Rubber
E : Ethylene Propylene Rubber
P : Perfluoroelastomer

Specifications

| Voltage(AC) — 120 V *1 | | | | | Voltage(AC) — 240 V *1 | | | | | Material of Wetted Parts | | | |
|------------------------|--------------|-------------------------------|----------------------|--------------------------|------------------------|--------------|-------------------------------|----------------------|--------------------------|--------------------------|----------------------|----------------|------------|
| Model | Current (mA) | Self-priming Pressure (kPa)*2 | Flow Rate (mL/min)*2 | Discharge Pressure (kPa) | Model | Current (mA) | Self-priming Pressure (kPa)*2 | Flow Rate (mL/min)*2 | Discharge Pressure (kPa) | Housing | Liquid Contact Sheet | Valve / O-ring | Weight (g) |
| BPS-215i | 3 | 3 | 30 | 15 | BPS-215i*3 | 1.8 | 3 | 30 | 15 | PP | PP | IIR | 40 |
| — | — | — | — | — | BPS-235G*3 | 1.8 | 1.5 | 30 | 15 | POM | PTFE | FKM | 40 |
| BPH-214i*3 | 15 | 8 | 350 | 18 | BPH-214i*3 | 7.5 | 8 | 350 | 18 | PP | PP | IIR | 130 |
| — | — | — | — | — | BPH-214D*3 | 7.5 | 8 | 350 | 18 | PP | PP | VMQ | 130 |
| BPH-214E | 15 | 8 | 350 | 18 | BPH-214E | 7.5 | 8 | 350 | 18 | PP | PP | EPDM | 140 |
| BPH-214G | 15 | 7 | 350 | 17 | BPH-214G | 7.5 | 7 | 350 | 17 | PP | PTFE | FKM | 140 |
| — | — | — | — | — | BPH-414i*3 | 15 | 12 | 500 | 35 | PP | PP | IIR | 140 |
| BPH-414D*3 | 30 | 12 | 500 | 35 | BPH-414D*3 | 15 | 12 | 500 | 35 | PP | PP | VMQ | 140 |
| BPH-414E | 30 | 12 | 500 | 35 | BPH-414E*3 | 15 | 12 | 500 | 35 | PP | PP | EPDM | 140 |
| BPH-414G*3 | 30 | 10 | 450 | 32 | BPH-414G*3 | 15 | 10 | 450 | 32 | PP | PTFE | FKM | 140 |
| BPH-474G*3 | 30 | 10 | 400 | 35 | BPH-474G | 15 | 10 | 400 | 35 | PPS | PTFE | FKM | 170 |
| BPH-474P*3 | 30 | 10 | 400 | 35 | BPH-474P | 15 | 10 | 400 | 35 | PPS | PTFE | FFKM/FEP | 170 |
| — | — | — | — | — | BPHS-414i*3 | 15 | 12 | 700 | 35 | PP | PP | IIR | 160 |
| — | — | — | — | — | BPHS-414E*3 | 15 | 12 | 700 | 35 | PP | PP | EPDM | 160 |
| — | — | — | — | — | BPHS-414G*3 | 15 | 12 | 700 | 35 | PP | PTFE | FKM | 160 |
| — | — | — | — | — | BPHS-474G*3 | 15 | 10 | 500 | 35 | PPS | PTFE | FKM | 180 |
| — | — | — | — | — | BPHS-474P*3 | 15 | 10 | 500 | 35 | PPS | PTFE | FFKM/FEP | 180 |
| BPF-465P*3 | 30 | 10 | 400 | 35 | BPF-465P*3 | 15 | 10 | 400 | 35 | PFA | PTFE | FFKM/FEP | 350 |

*1: The above performance is obtained by using 25°C water at AC frequency 60 Hz. When the pump is used at AC frequency 50 Hz, the flow rate will decrease by approximately 20%.

*2: When the liquid temperature is low, the check valve will harden. As a result, the flow rate and the self-priming pressure will decrease. For fluoro rubber in particular, the flow rate will decrease by half at 5°C, so select a pump with sufficient allowance. Since highly viscous liquids decrease the flow rate, please check the flow rate with an actual pump before use.

*3: Made-to-order models. Please send a request for quotation to your nearest distributor.

Condition of Use


| | |
|---------------------|--------------|
| Ambient temperature | 5 to 50°C *1 |
| Ambient humidity | 35 to 85% *2 |
| Fluid temperature | 5 to 50°C |

*1: No Freezing *2: No condensation

Material Description

EPDM Ethylene Propylene Rubber
 FEP Fluoroethylene Propylene
 FFKM Perfluoroelastomer
 FKM Fluoro Rubber
 IIR Butyl Rubber
 PFA Fluororesin (Perfluoroalkoxy)
 POM Polyacetal
 PP Polypropylene
 PPS Polyphenylene Sulfide
 PTFE Tetrafluoroelastomer (Polytetrafluoroethylene)
 VMQ Dimethyl Silicone Rubber

The meaning of each letter in the model name

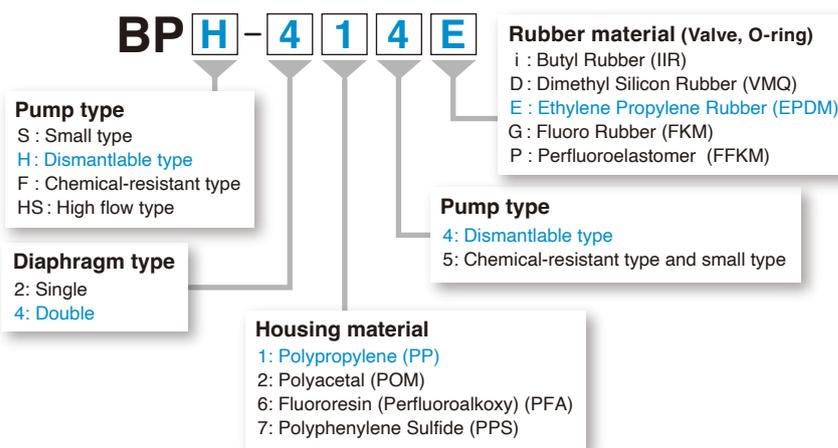

Suitable/unsuitable chemical liquids

| Model | Examples of suitable chemical liquids | Examples of unsuitable chemical liquids |
|---|--|--|
| BPS-215i BPH-214i BPH-414i BPHS-414i | Ethanol, Dilute hydrochloric acid, Sodium carbonate, Benzaldehyde, Formalin | Xylene, Mineral oil, Carbon tetrachloride, Trichloroethylene, Toluene, Benzene |
| BPH-214E BPH-414E BPHS-414E | Ammonia water, Ethanol, Dilute hydrochloric acid, Caustic potash, Caustic soda, Methanol | Xylene, Mineral oil, Carbon tetrachloride, Trichloroethylene, Toluene, Benzene |
| BPS-235G | Ethanol, Xylene, Silicone oil, Kerosene, Toluene, Benzene | Ammonia water, Hydrochloric acid, Hydrogen peroxide, Sodium hypochlorite, Nitric acid, Sulfuric acid |
| BPH-214D BPH-414D | Ammonia water, Ethanol, Sodium hypochlorite, Methanol | Caustic soda, Carbon tetrachloride, Silicone oil, Trichloroethylene, Toluene, Benzene |
| BPH-214G BPH-414G BPHS-414G | Ethanol, Hydrogen peroxide, Mineral oil, Sodium hypochlorite | Acetone, Ammonia water, Glacial acetic acid, Hydrofluoric acid, Formalin |
| BPH-474G BPHS-474G | Ethanol, Xylene, Carbon tetrachloride, Silicone oil, Trichloroethylene | Acetone, Ammonia water, Chlorosulfonic acid, Glacial acetic acid, Hydrofluoric acid, Formalin |
| BPH-474P BPHS-474P | Ethanol, Chloroform, Glacial acetic acid, Benzene, Methyl ethyl ketone | Chlorosulfonic acid, Fluorine oil, CFC 112, CFC 113 |
| BPF-465P | Ethanol, Aqua regia, Ozone, Carbon tetrachloride, Concentrated nitric acid, Concentrated sulfuric acid, Fuming sulfuric acid | Fluorine oil, CFC 112, CFC 113 |

*This chart is for reference only. Please confirm the suitability under the operating conditions before use.


DC Liquid Pump

DPE-100 / DPE-400 / Model DPE-400BL / DPE-800

-Comparison-







YouTube

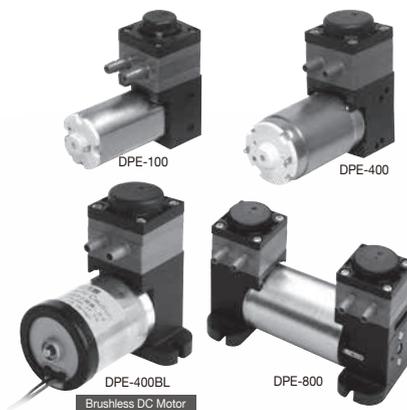

Brush DC Motor /
Brushless DC Motor

12 V/24 V DC

Flow & Electric Current

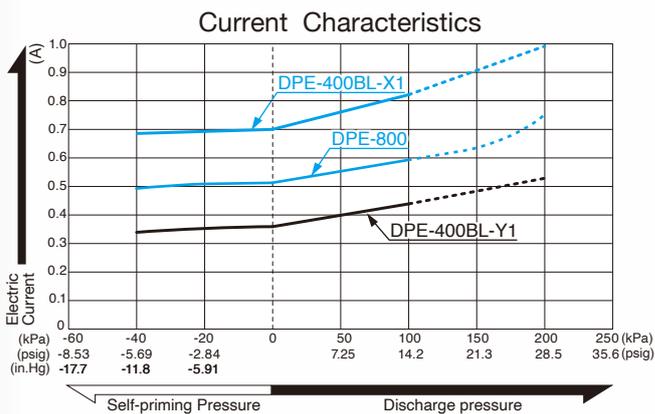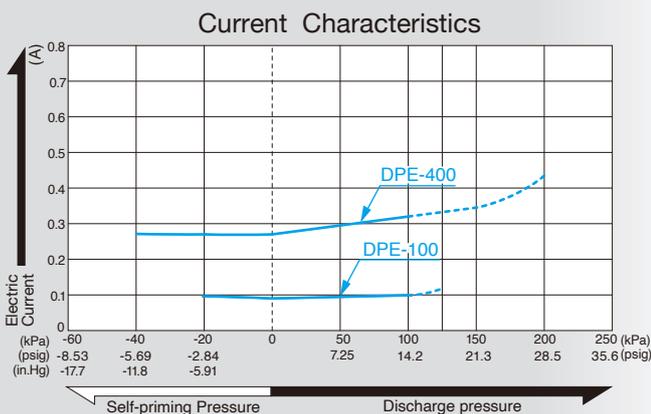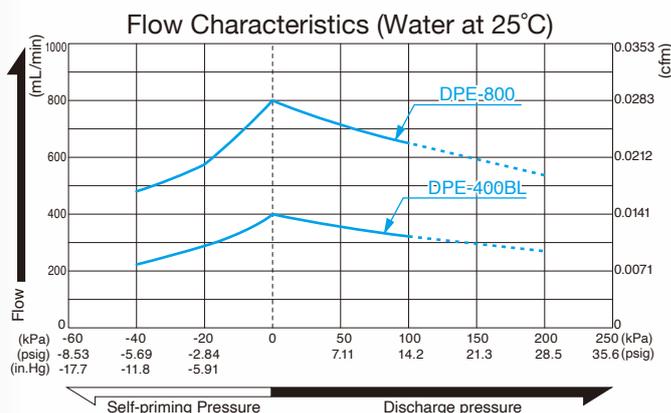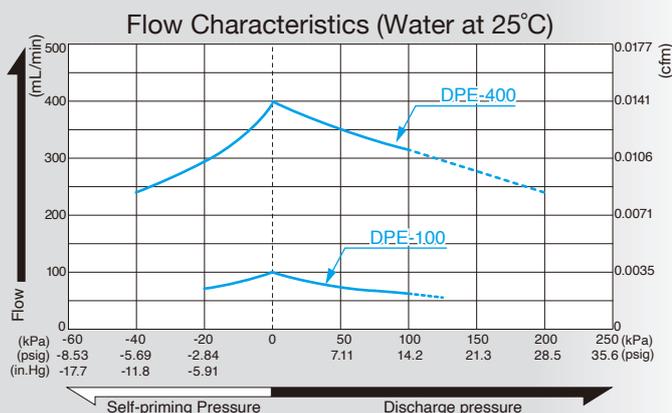


Specifications

| Model | DPE-100 | DPE-400 | DPE-400BL-X1 | DPE-400BL-Y1 | DPE-800 |
|---------------------------|--|--|---|--------------|---|
| Rated Voltage | 24 V DC | | 12 V DC | 24 V DC | |
| Flow Rate *1 | 100 mL/min 0.0035 cfm | | 400 mL/min 0.0141 cfm | | 800 mL/min 0.0283 cfm |
| Working Pressure Range | 0 to 100 kPa (0 to 1 kgf/cm ²) 0 to 1 bar 0 to 14.2 psig | | | | |
| Maximum Pressure *2 | 300 kPa (3 kgf/cm ²) 3 bar 42.7 psig | | | | |
| Maximum Current | 100 mA | 345 mA | 900 mA | 450 mA | 600 mA |
| Duty Cycle | Continuous | | | | |
| Rated Performance (MTTF) | 500 hours | | 6,000 hours | | 600 hours |
| Self-priming Pressure *1 | 20 kPa (150 mmHg) 0.2 bar 2.84 psig | | 40 kPa (300 mmHg) 0.4 bar 5.69 psig | | |
| Inlet | 4.7 mm O.D. straight barb | | 5.4 mm O.D. straight barb | | |
| Outlet | 4.7 mm O.D. straight barb | | 5.4 mm O.D. straight barb | | |
| Insulation Classification | Class E equivalent | Class F equivalent | Class A equivalent | | Class E equivalent |
| Mounting Dimensions | 9.5 (L) x 17 (W) mm 3/8" (L) x 43/64" (W) | 19 (L) x 26 (W) mm 3/4" (L) x 1 - 1/32" (W) | 41 (W) mm 1 - 39/64" (W) | | 74.5 (L) x 41 (W) mm 2 - 15/16" (L) x 1 - 39/64" (W) |
| Weight | 67 g 0.148 Lbs | 187 g 0.412 Lbs | 230 g 0.507 Lbs | | 350 g 0.771 Lbs |
| Motor | Brush DC Motor | | Brushless DC Motor | | Brush DC Motor |

*1. When the check valve is hardened due to low liquid temperature, self-priming performance and flow rate will go down.
*2. Restarting pumps with flow passage closed is impossible.
*3. Tubing between two pumping heads must be done in parallel. Tubing in series between the two pumping heads should not be made. This may cause extreme pressure hike that will result in broken parts, liquid splash out or possible ignition. (DPE-800)

DC Liquid Pump

Model DPE-100BLC / DPE-200BLC

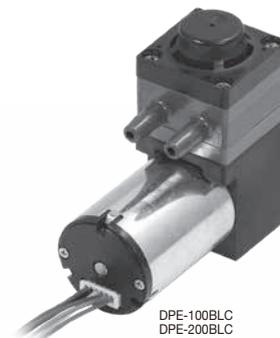



Brushless DC Motor

24 V DC



-Promotion-
YouTube

Flow & Electric Current

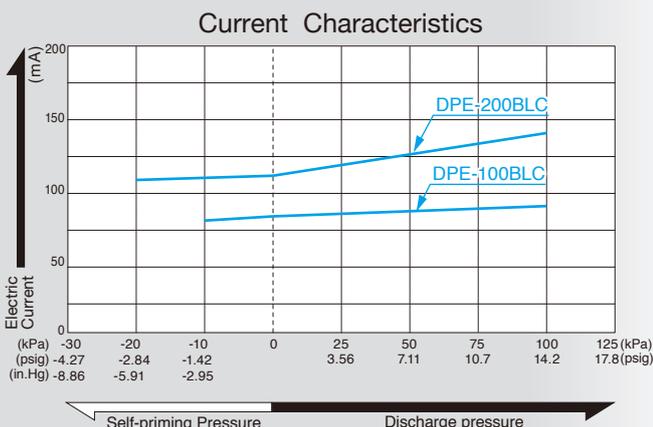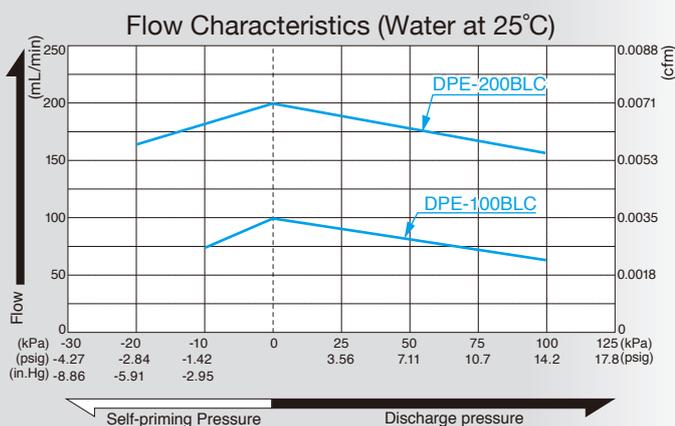

Specifications

| Model | DPE-100BLC | DPE-200BLC |
|---------------------------|--|---|
| Rated Voltage | 24 V DC | |
| Flow Rate *1 | 100 mL/min 0.0035 cfm | 200 mL/min 0.0071 cfm |
| Working Pressure Range | 0 to 100 kPa (0 to 1 kgf/cm ²) 0 to 1 bar 0 to 14.2 psig | |
| Maximum Pressure *2 | 300 kPa (3 kgf/cm ²) 3 bar 42.7 psig | |
| Maximum Current | 90 mA | 140 mA |
| Duty Cycle | Continuous | |
| Rated Performance (MTTF) | 6000 hours | |
| Self-priming Pressure *1 | 10 kPa (75 mmHg) 0.1 bar 1.42 psig | 20 kPa (150 mmHg) 0.2 bar 2.84 psig |
| Inlet | 4.7 mm O.D. hose barb | |
| Outlet | 4.7 mm O.D. hose barb | |
| Insulation Classification | Class E equivalent | |
| Mounting Dimensions | 9.5(L) x 17(W) mm 3/8"(L) x 43/64"(W) | |
| Weight | 80 g 0.176 Lbs | |


*1 When the check valve is hardened due to low liquid temperature, self-priming performance and flow rate will go down.
*2 The unit cannot be restarted with flow passage closed. It cannot be used at the maximum pressure.

Condition of Use

| | |
|-------------------------------|-----------|
| Operating Ambient Temperature | 5 to 40°C |
| Operating Ambient Humidity | 30 to 85% |
| Operating Fluid Temperature | 5 to 50°C |



Application Examples

- Liquid transport for analytical instruments e.g. medical, food, water treatment and environment measurement.
- Liquid transport within filtration, sampling, washers and sterilizers.
- Ink transport within industrial ink-jet printers.

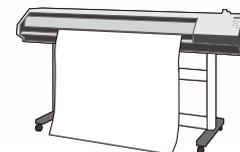

Pulse Absorption Mechanism

1. Suction
2. Discharge. Partial fluid delivery to pulse absorption chamber, not directly forced to outlet port.
3. Cyclical suction drawn into pump is synchronized with the discharge. Pulses are attenuated through the process of 2 and 3.

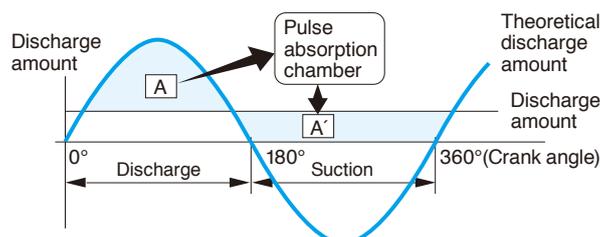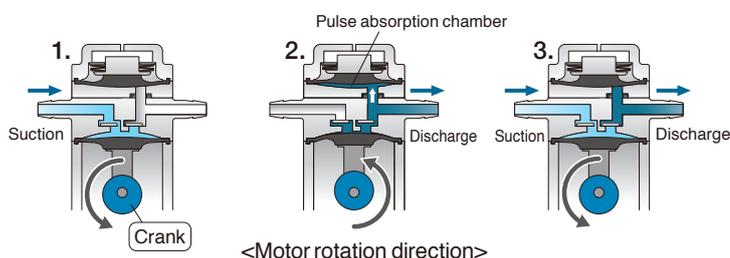

- The cause of pulsation (A) is taken into the pulse absorption chamber and discharged at the time of suction (A') to reduce pulse.
- Pulsation: Vibration due to change in pressure and flow rate

Material of wetted parts and applicable fluid


| Model | Material of wetted parts | | | | | Example of suitable chemical liquid * | Example of unsuitable chemical liquid |
|--------------------------------|------------------------------|------------|---------------------------------|-----------------------------------|--------|---|--|
| | Cylinder Head | Head Cover | Diaphragm | Valve | O-ring | | |
| DPE-100BLC-2E DPE-200BLC-2E | PA Polyamide(Nylon) | | PTFE Polytetrafluoroethylene | EPDM Ethylene-propylene rubber | | Ammonia water, Citric acid, Caustic soda, Ethanol, Caustic potash | Mineral oil, Trichloroethylene, Benzaldehyde, Carbon tetrachloride, Toluene |
| DPE-100BLC-7G DPE-200BLC-7G | PPS Polyphenylene sulfide | | | FKM Fluoro rubber | | Ethanol, Carbon tetrachloride, Trichloroethylene, Xylene, Silicone oil | Acetone, Chlorosulfonic acid, Formalin, Ammonia water, Glacial acetic acid |
| DPE-100BLC-7P DPE-200BLC-7P | | | | FFKM Perfluoroelastomer | | Ethanol, Glacial acetic acid, Methyl ethyl ketone, Chloroform, Benzene | Chlorosulfonic acid, CFC 112, Fluorine oil, CFC 113 |

*This chart is for reference only. Please confirm the suitability under the operating conditions before use.


Control Function

| No. | Function | Specifications | Conditions |
|-----|---------------------------|------------------------|---|
| 1 | Power source | 24 V DC | |
| 2 | | GND | |
| 3 | FG signal output | 6 Pulse/1 Rotation | Open-drain output |
| | Pull up voltage | 5 V DC | |
| 4 | PWM control input | 0 to 100% | 2 to 5 V DC (max=5 V DC) Recommended frequency 15 to 25 kHz |
| | Voltage control input | 0 to 5 V DC max=5 V DC | Variability range =0.6 to 3.2 V DC (Duty cycle: 0 to 100%) |
| 5 | PWM control selection | ON/OFF | PWM control ON with open circuit |
| | Voltage control selection | ON/OFF | Voltage control ON with 2 to 5 V DC input |
| 6 | 5 V DC output | 5 V DC output | 5 V DC output during motor startup |

Reference circuit diagram

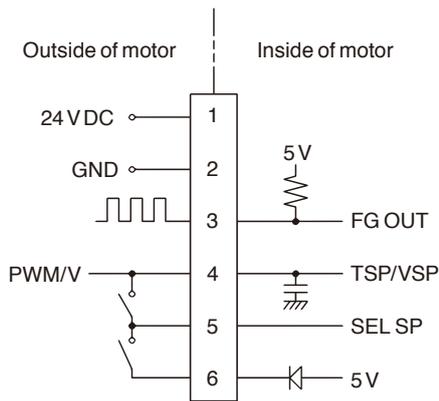


Reference of voltage control

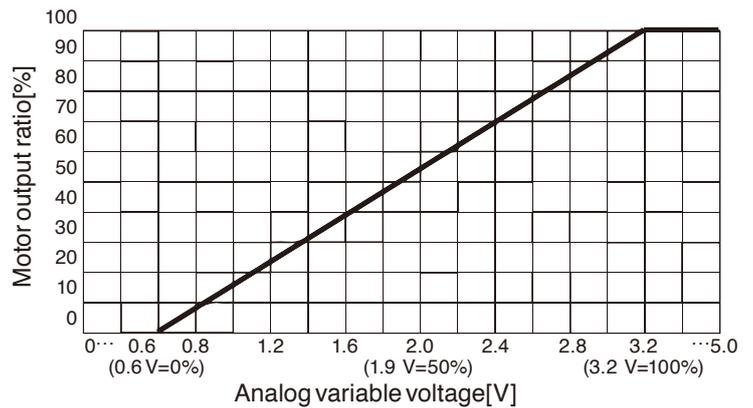

•The actual number of rotations of motor depends on the power supply voltage and load conditions of pump.
Examine the variable state of pump output under the conditions of actual use.

External Dimensions (Unit: mm)

DPE-100BLC DPE-200BLC

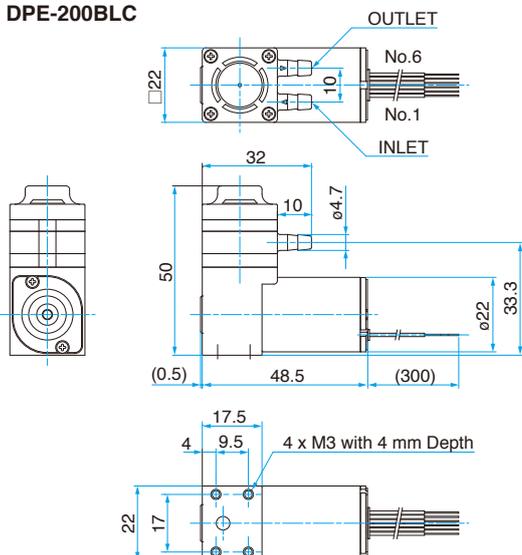

Connection table

| Circuit No. | Power Source | | Control Signal | | | |
|-------------------------|-----------------|-------|----------------|----------------------|-----------------|--------------|
| | 1 | 2 | 3 | 4 | 5 | 6 |
| Cord Color | RED | BLACK | YELLOW | BLUE | GREEN | BROWN |
| Function | V+ | V- | Pulse | PWM or voltage input | Voltage control | DC 5V output |
| Selection of connection | With no control | | ON | ON*1 | | ON*1 |
| | PWM control | | ON | ON*2 | | |
| | Voltage control | | ON | ON*3 | ON*3 | ON*3 |
| Cord Size | AWG26 | | AWG28 | | | |
| Cord UL Style | UL1061 | | | | | |

*1 For non-control (Duty cycle: 100%) drive, short-circuit pins 4 and 6.

*2 For PWM control drive, keep pin 5 in an open state and input PWM signal (Duty cycle: 0 to 100%, 2 to 5 V DC, and recommended frequency 15 to 25 kHz) to pin 4.

*3 For analog voltage control drive, short-circuit pins 5 and 6 and apply the voltage (0 to 5 V DC and variable range 0.6 to 3.2 V DC) to pin 4.


•Take noise countermeasures for the signal wire if necessary.

•Please cut the unnecessary lead wires so that there is no trouble in operating the unit.

MEDO BLOWER

LA series

| | | |
|---------|---|----|
| LA-28B | — | 79 |
| LA-45C | — | 79 |
| LA-60B | — | 80 |
| LA-80B | — | 80 |
| LA-100A | — | 81 |
| LA-120A | — | 81 |
| LA-200F | — | 82 |


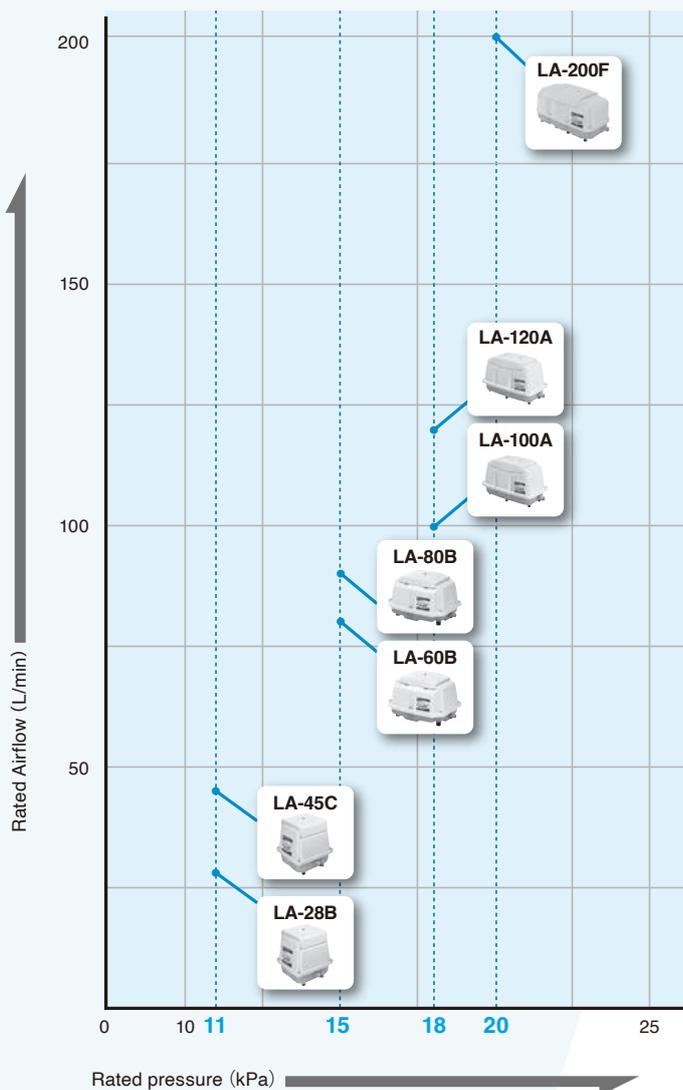


MEDO BLOWER

Model LA-28B / LA-45C



Airflow Characteristics

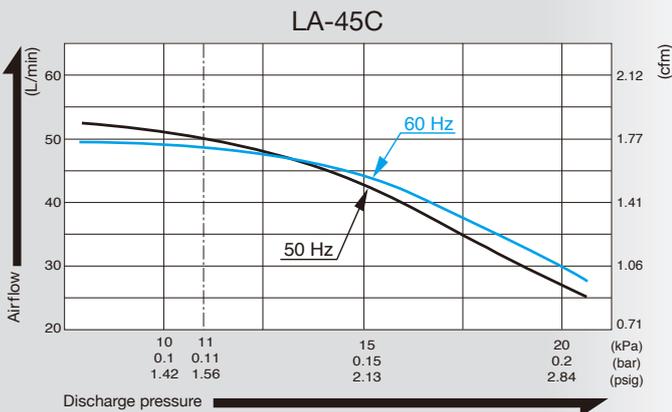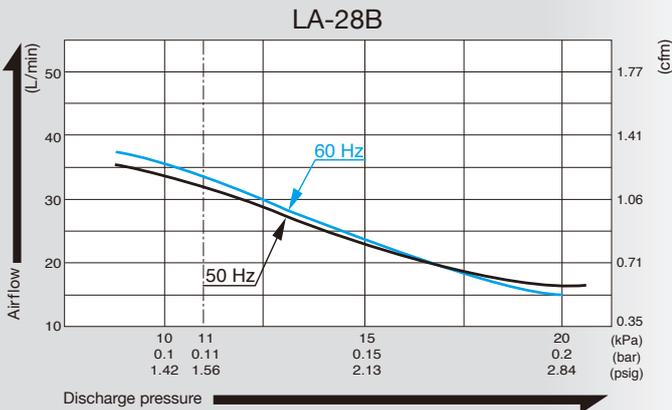


Specifications

| Model | LA-28B | | LA-45C | |
|------------------------|---|--|--|--|
| Power Supply | 120 V AC | 230 V AC* | 120 V AC | 230 V AC* |
| Rated Frequency | 60 Hz | 50 Hz | 60 Hz | 50 Hz |
| Power Consumption | 25.5 W | 29 W | 45 W | 47 W |
| Rated Pressure | 11 kPa (0.11 kgf/cm ²) 0.11 bar 1.56 psig | | | |
| Rated Airflow | 28 L/min 0.99 cfm | | 45 L/min 1.59 cfm | |
| Working Pressure Range | 5 to 15 kPa (0.05 to 0.15 kgf/cm ²) 0.05 to 0.15 bar 0.71 to 2.13 psig | 5 to 20 kPa (0.05 to 0.2 kg/cm ²) 0.05 to 0.2 bar 0.71 to 2.84 psig | 5 to 15 kPa (0.05 to 0.15 kg/cm ²) 0.05 to 0.15 bar 0.71 to 2.13 psig | 5 to 20 kPa (0.05 to 0.2 kg/cm ²) 0.05 to 0.2 bar 0.71 to 2.84 psig |
| Duty Cycle | Continuous | | | |
| Coil Insulation Class | Class A (UL standard) | Class E | Class A | Class E |
| External Dimensions | 207 (L) x 182 (W) x 205 (H) mm 8 - 5/32" (L) x 7 - 11/64" (W) x 8 - 5/64" (H) | | 207 (L) x 182 (W) x 208.5 (H) mm 8 - 5/32" (L) x 7 - 11/64" (W) x 8 - 13/64" (H) | |
| Weight | 2.9 kg 6.4 Lbs | | 3.2 kg 7.1 Lbs | |


*Please contact us for 240 V AC model.

Optional Hose Assemblies

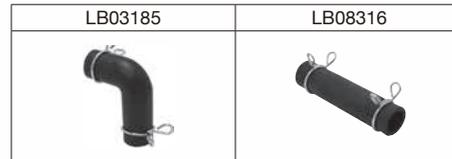


Application Examples

Liquid Mixer Bubbling

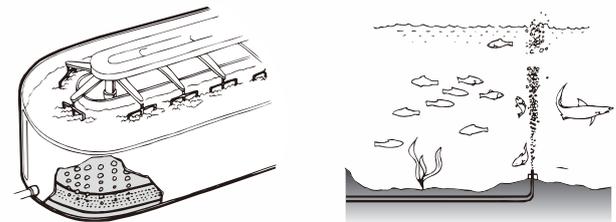


External Dimensions (Unit: mm)

LA-28B

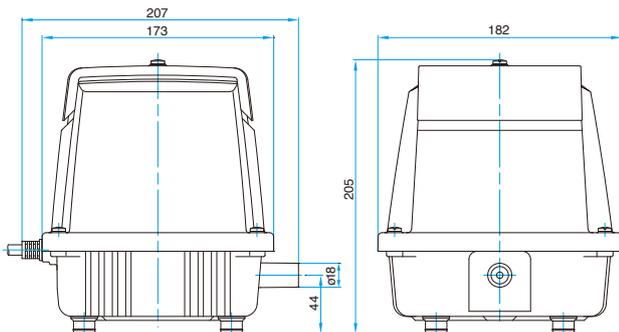

LA-45C


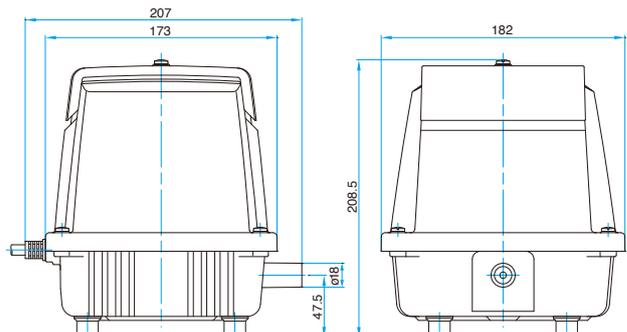


MEDO BLOWER

Model LA-60B / LA-80B



Airflow Characteristics

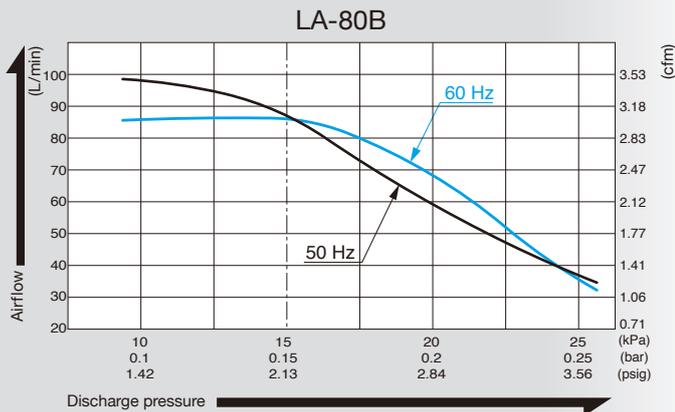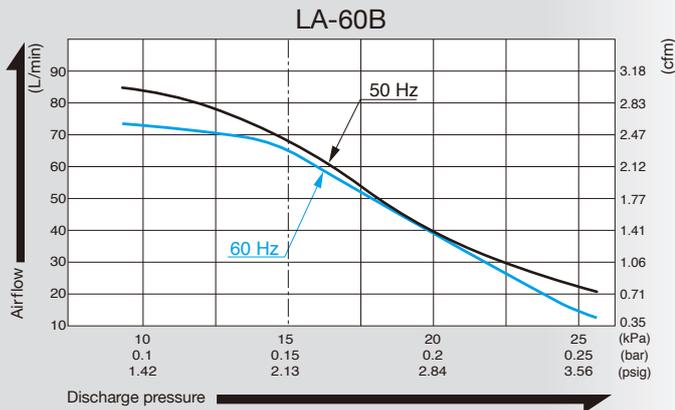


Specifications

| Model | LA-60B | | LA-80B | |
|------------------------|--|---|--|---|
| Power Supply | 120 V AC | 230 V AC* | 120 V AC | 230/240 V AC |
| Rated Frequency | 60 Hz | 50 Hz | 60 Hz | 50 Hz |
| Power Consumption | 60 W | 64 W | 80 W | 86 W |
| Rated Pressure | 15 kPa (0.15 kgf/cm ²) 0.15 bar 2.13 psig | | | |
| Rated Airflow | 60 L/min 2.12 cfm | | 80 L/min 2.83 cfm | |
| Working Pressure Range | 10 to 20 kPa (0.1 to 0.2 kgf/cm ²) 0.1 to 0.2 bar 1.42 to 2.84 psig | 5 to 20 kPa (0.05 to 0.2 kgf/cm ²) 0.05 to 0.2 bar 0.71 to 2.84 psig | 10 to 20 kPa (0.1 to 0.2 kgf/cm ²) 0.1 to 0.2 bar 1.42 to 2.84 psig | 5 to 20 kPa (0.05 to 0.2 kgf/cm ²) 0.05 to 0.2 bar 0.71 to 2.84 psig |
| Duty Cycle | Continuous | | | |
| Coil Insulation Class | Class A (UL standard) | Class E | Class A (UL standard) | Class E |
| External Dimensions | 305 (L) x 214 (W) x 188 (H) mm 12 - 1/64" (L) x 8 - 27/64" (W) x 7 - 13/32" (H) | | | |
| Weight | 5.0 kg 11 Lbs | | 5.3 kg 11.7 Lbs | |


*Please contact us for 240 V AC model.

Optional Hose Assemblies

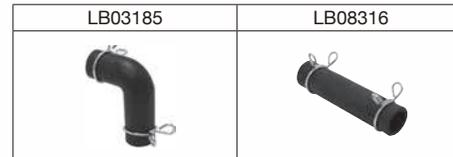


Application Examples



Liquid Mixer Bubbling

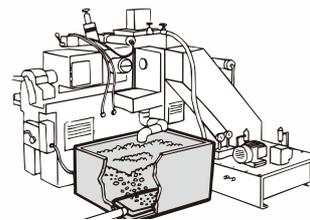

Home Aerobic Sewage Treatment System

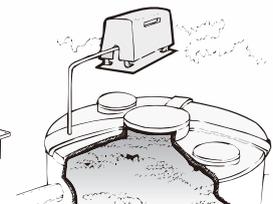

External Dimensions (Unit: mm)

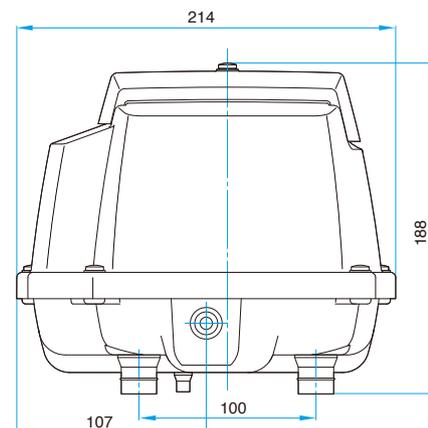
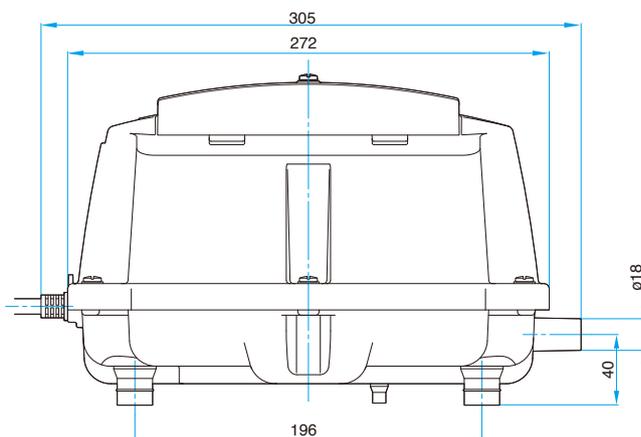


MEDO BLOWER

Model LA-100A / LA-120A



Airflow Characteristics

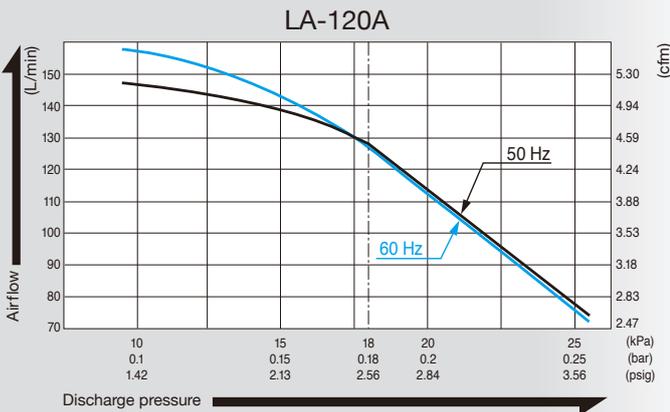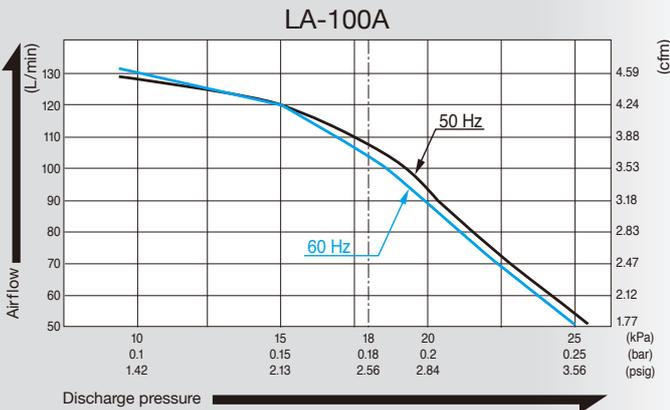


Specifications

| Model | LA-100A | LA-120A |
|------------------------|---|---|
| Power Supply | 230 V AC ¹ | 230/240 V AC ² |
| Rated Frequency | 50 Hz | 50 Hz |
| Power Consumption | 100 W | 130 W |
| Rated Pressure | 18 kPa (0.18 kgf/cm ²) 0.18 bar 2.56 psig | |
| Rated Airflow | 100 L/min 3.53 cfm | 120 L/min 4.24 cfm |
| Working Pressure Range | 5 to 25 kPa (0.05 to 0.25 kgf/cm ²) 0.05 to 0.25 bar 0.71 to 3.56 psig | 5 to 25 kPa (0.05 to 0.25 kgf/cm ²) 0.05 to 0.25 bar 0.71 to 3.56 psig |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class E | |
| External Dimensions | 407 (L) x 210 (W) x 232 (H) mm 16 - 1/32" (L) x 8 - 17/64" (W) x " 9 - 9/64(H) | |
| Weight | 9.7 kg 21.4 Lbs | |


¹: Please contact us for 120 V AC model and 240 V AC model.
²: Please contact us for 120 V AC model.

Optional Hose Assemblies

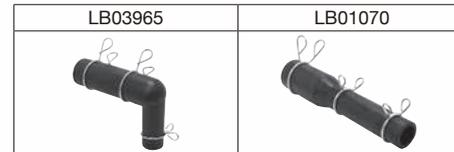

Application Examples



Liquid Mixer Bubbling

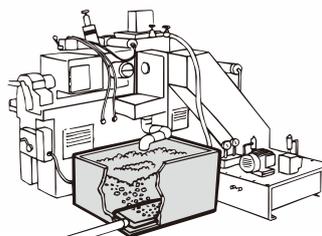

Home Aerobic Sewage Treatment System



External Dimensions (Unit: mm)

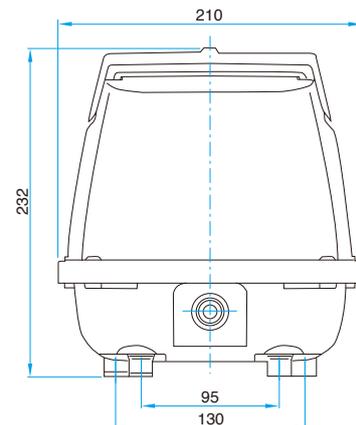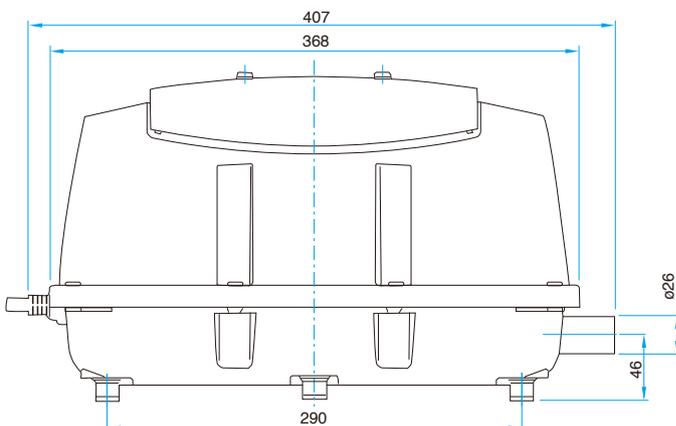


MEDO BLOWER

Model LA-200F




Airflow Characteristics

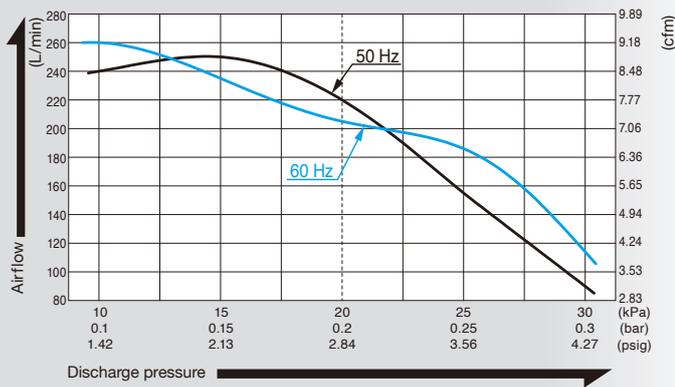

Specifications

| | | |
|------------------------|---|---------------------|
| Power Supply | 120 V AC | 230 V AC / 240 V AC |
| Rated Frequency | 60 Hz | 50 Hz |
| Power Consumption | 195 W | |
| Rated Pressure | 20 kPa (0.2 kgf/cm ²) 0.2 bar 2.84 psig | |
| Rated Airflow | 200 L/min 7.06 cfm | |
| Working Pressure Range | 10 to 30 kPa (0.1 to 0.3 kgf/cm ²) 0.1 to 0.3 bar 1.42 to 4.27 psig | |
| Duty Cycle | Continuous | |
| Coil Insulation Class | Class A (UL standard) | Class E |
| External Dimensions | 445 (L) x 220 (W) x 226 (H) mm 17.52" (L) x 8.66" (W) x 8.90" (H) | |
| Weight | 13.5 kg 29.8 Lbs | |

Optional Hose Assemblies

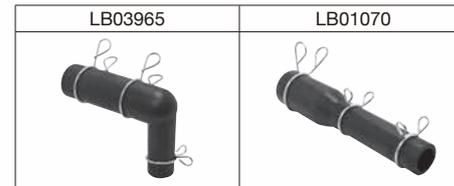

Application Examples


Grease Trap



Home Aerobic Sewage Treatment System



External Dimensions (Unit: mm)

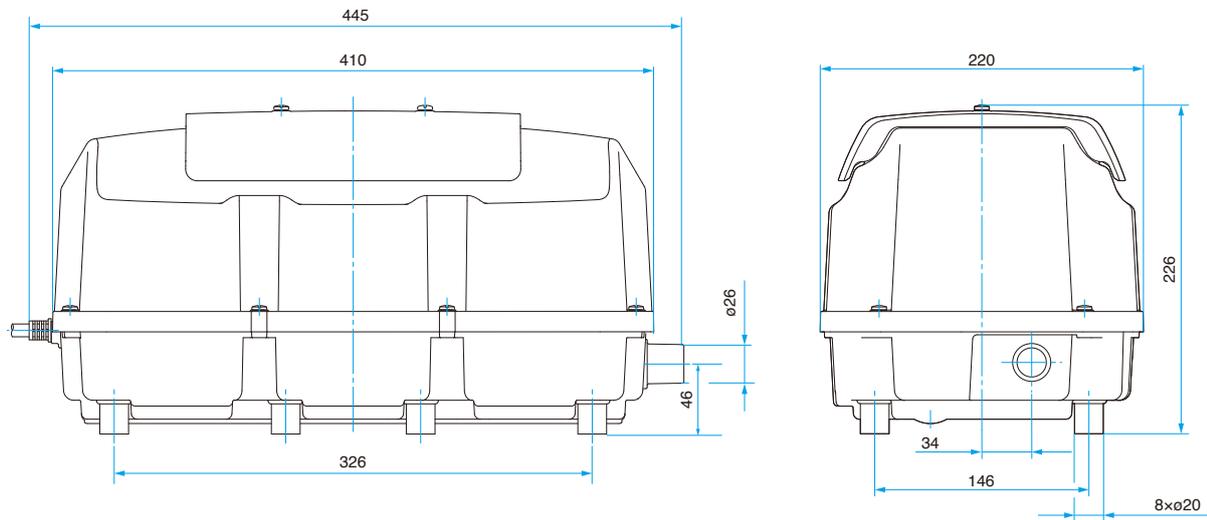

OTHER PRODUCTS

OTHER PRODUCTS

Cutting oil collecting unit

HK-400A

— 85

Linicon

LV-125A

— 87

Page

Cutting oil collecting unit

Model **HK-400A**



-Oil collecting test-
[YouTube](#)



The HK-400A collects small amounts of cutting oil that spill from machine tools.

*Compatible with both oil-based cutting oils and water-soluble cutting oils


- Install on the side of machines with a magnet.
- No air piping required. Save energy by switching from vacuum ejectors.
- Comes with a strainer to prevent suction of cutting chips.
- Capable of suction of gas & liquid mixture, no worry of motor burns even when idling.



Specifications

| | | |
|---|--|--------------------|
| Rated Voltage | 24 V DC | |
| Maximum current (*1, Operating pressure range, Fluid: Water 25°C) | 450 mA | |
| Flow rate (*1, *3, *4, open discharge (0 kPa), Fluid: Water 25°C) | 400 mL/min 0.0141 cfm | |
| Operating pressure range (*1, *2, Fluid: Water 25°C) | 0 to 100 kPa (0 to 1 kgf/cm ²) 0 to 1 bar 0 to 14.2 psig | |
| Self-priming pressure (*1, *3, Fluid: Air 20°C) | 40 kPa 0.4 bar 5.69 psig | |
| Duty cycle (Fluid: Water 25°C) | Continuous | |
| Rated performance (*5) | 6000 hours (MTTF) | |
| Circuit breaker rated current | 1 A | |
| Circuit Breaker Box protection grade | IP65 | |
| Applicable fluid | Cutting oil (water-soluble and water-insoluble) | |
| Recommended fluid viscosity (*4, *6) | 30 mPa·s or less | |
| Place of use | Indoors | |
| External dimensions | 119 mm (L)×118 mm (W)×81 mm (H) 4-11/16" (L) x 4-41/64" (W) x 3-3/16" | |
| Weight | Main Body (Pump Unit, Circuit Breaker Box) | 0.6 kg 1.32 Lbs |
| | Power Cable | 0.3 kg 0.66 Lbs |
| | Strainer Unit | 0.3 kg 0.66 Lbs |

Installation examples

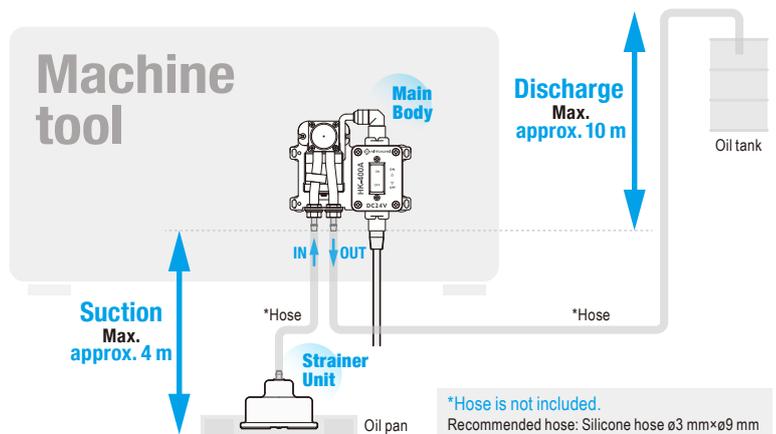

*1: Conditions are for rated voltage, cool unit, and initial operation.

*2: The product cannot be restarted from the closed pressure state or used beyond the working pressure range.

*3: When the fluid reaches a low temperature, the check valve hardens and the flow rate and self-suction power will decrease.

*4: When highly viscous cutting oil (2 mPa·s or more) is collected, the flow rate decreases. Especially when using with water-insoluble cutting oil, the fluid viscosity fluctuates significantly according to temperature change, so check whether the pump can be used under actual operating conditions.

*5: Rated performance (MTTF: Mean Time to Failure) is the mean value of the accumulated operating time at the rated voltage, open discharge (0 kPa) and water temperature of 25°C and when the flow rate becomes 80% (320 mL/min) or less of the specified value.

The rated performance varies depending on the operating conditions (operating pressure, operating fluid temperature, operating fluid viscosity, operating environment, etc.).

*6: Refer to the following formula for conversion from kinematic viscosity [mm²/s] to viscosity [mPa·s].


Viscosity [mPa·s] = Kinematic viscosity [mm²/s] × Density [g/cm³]
 (Kinematic viscosity: 1 mm²/s = 1 cSt Viscosity: 1 mPa·s=1 cP)

Cutting oil collecting capability

*Refer to the characteristic diagram and conversion formula below and consider whether the product can be used or not.

Viscosity vs. Flow Rate Characteristics

- Input power... 24 V DC Brown wire: +24 V Blue wire: GND
- Piping conditions... Silicone hose Inner diameter: ø3 mm, length: 4 m No lifting load

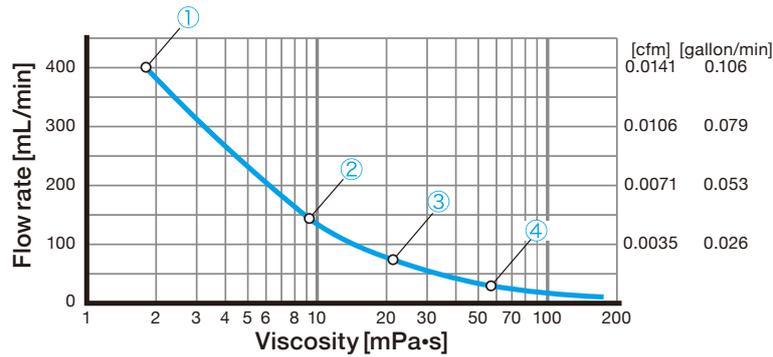

| | Liquid type | Kinematic viscosity [cSt] [mm ² /s] (40°C) | Viscosity [mPa·s] (24±1°C) | Flow rate [mL/min] (24±1°C) |
|---|-------------|---|----------------------------|-----------------------------|
| ① | Water | - | 1.9 | 400 |
| ② | Sample A | 7.0 | 9.4 | 145 |
| ③ | Sample B | 15.0 | 21.9 | 74 |
| ④ | Sample C | 32.5 | 56.8 | 27 |

Viscosity conversion formula

$$\text{Viscosity [mPa}\cdot\text{s]} = \text{Kinematic viscosity [mm}^2\text{/s]} \times \text{Density [g/cm}^3\text{]}$$

(Kinematic viscosity: 1 mm²/s = 1 cSt Viscosity: 1 mPa·s = 1 cP)

- Viscosity is measured with the digital viscometer VISCO Low Viscosity Sample Adapter (ULA) manufactured by Atago Co., Ltd.
- Refer to the above formula for conversion from kinematic viscosity to viscosity. For the kinematic viscosity and density of the cutting oil used, contact the cutting oil manufacturer.
- Characteristic diagrams are for reference only and are not guaranteed values.
- The above performance may not be attained depending on the operating conditions (operating environment, liquid type, piping material). Especially when using water-insoluble cutting oil, the fluid viscosity fluctuates significantly depending on the temperature change, so please judge whether the pump can be used or not under actual operating conditions.

List of replacement parts

| Part Name | Part No. | Image | Part Name | Part No. | Image |
|---|----------|-------|---|----------|-------|
| Pump Unit | LB09133 | | Filter Cover [Components] Filter Cover, Screw | LB09139 | |
| Filter Unit | LB09141 | | Circuit Breaker Box | LB09608 | |
| Power Cable (5 m) | LB09140 | | Wire Mesh | LB09138 | |
| Strainer Unit [Components] Strainer, Filter Unit, Screw Wire Mesh, Filter Cover | LB09134 | | Connector Cover (1 set : 2 pieces) | LB09994 | |
| Inline Filter | LB10099 | | Panel Mount Hose Barb | LB10100 | |



Optional accessory

| Part Name | Part No. | Image |
|-------------------------------|----------|-------|
| Silicone Hose (ø3×ø9×4000 mm) | LB09135 | |





External Dimensions (Unit: mm)

MAIN BODY ASSY

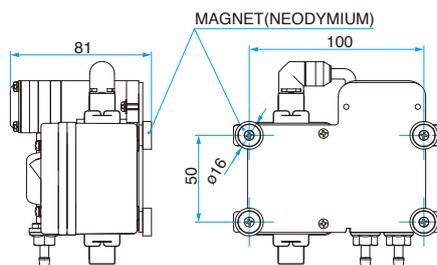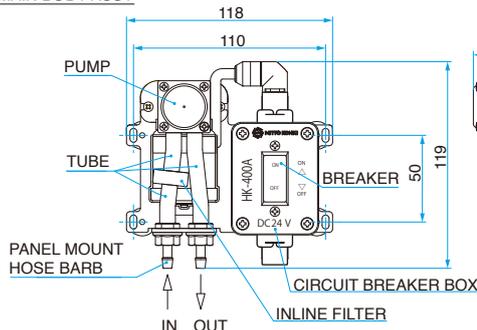

STRAINER ASSY

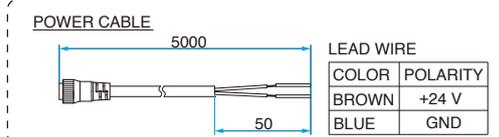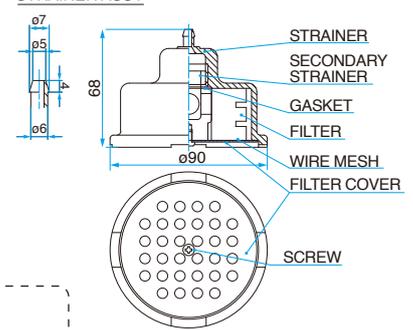

Linicon (Vacuum Pump)

Model LV-125A



-Application Examples-
[YouTube](#)



Oil-less Compressor

- AC linear free piston vacuum pump
- Equipped with fuse and removable power cable
- Compact and lightweight
- Low noise level
- Oil-less construction

Specifications

| | | |
|-----------------------|--|--|
| Rated Voltage | 115 V AC | 230 V AC |
| Rated Frequency | 60 Hz | 50 Hz |
| Power Consumption | 14 W | 15 W |
| Maximum Vacuum | -33.3 kPa (-250 mm Hg, -333 mbar, -9.84 in. Hg) | |
| Dimensions | 135 (L) x 91 (W) x 146 (H) mm (5 - 5/16" x 3 - 37/64" x 5 - 3/4") | |
| Duty Cycle | Continuous | ON: 10 min, OFF: 10 min or ON: 15 min, OFF: 20 min |
| Coil Insulation Class | Class B equivalent | Class E equivalent |
| Weight | 1.5 kg (3.3 Lbs) | |

Vacuum Pick-Up Set

If the following options are prepared together with Model LV-125A, the Vacuum Pick-Up Set can be arranged.

- ① LB07629 Vacuum pen assembly
- ② LQ01267 Tube 3 x 5 x 2000
- ③ LA71242 Needle 1 x 1.5 x 40 (6 pcs/set)
- ④ LA71251 Pad 6 mm dia.
- ⑤ LA71249 Pad 4 mm dia.
- ⑥ LA71143 Pen stand

The needle can be bent in accordance with applications.

*LA71069 P-100 includes ① - ⑥



High Adsorption Power

In the case that the depth of vacuum is -33.3 kPa (-250 mmHg) and the surface to be vacuumed is flat.

| Pad Diameter | A Suction power when the adsorption face is placed horizontally and moved upward. | B Suction power when the adsorption face is placed vertically and moved laterally. |
|--------------|--|---|
| 4 mm | 20 g | 10 g |
| 6 mm | 50 g | 25 g |

Adsorption power: $W (g) = D^2 \times 7.85 \times 250 / 736$

A is calculated by multiplying the safety rate of 0.5 to the above equation, and then rounded.

B is calculated by multiplying the safety rate of 0.25 to the above equation, and then rounded.




Application Examples


Transferring spherical objects such as balls



Assembling precision parts

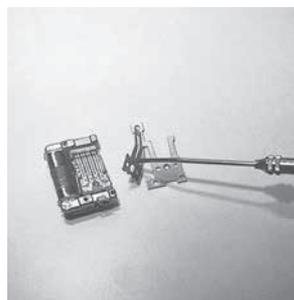

Moving tiny parts

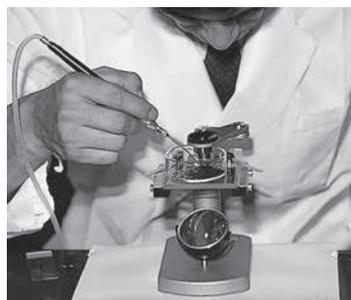

Transferring uneven parts



Most suitable for handling electronic parts such as ICs and LSIs. Also small parts, micro parts such as those in watches and chemicals.

Precautions for Compressors and Vacuum Pumps

| | | | | | |
|--|--|---|--|--|--|
| CAUTION The unit must be incorporated into a device that has an appropriate case and wiring. Not doing so may cause a fire, electric shock or burns. | | WARNING Do not let the unit draw in or discharge any gas other than air. This may cause an explosion, fire or electric shock. | | Avoid drawing in water and splashing any water on the unit. Otherwise there is the risk of a short circuit causing a fire or electric shock. | |
| Do not use the unit with a power supply other than the voltage shown on the unit. Doing so may cause a fire or electric shock. | Do not install the unit in a completely enclosed case (box) without proper or adequate ventilation. This may cause a fire or electric shock. | Use the unit within the proposed ambient temperature range. Using it out of the range may cause a fire or electric shock. | Avoid any strong impact to the unit as this may reduce the performance and durability of the unit. | | |
| Do not place combustible materials near the unit. This may cause a fire. | The grounding screw of the unit should be utilized, except when connected to a double insulation device. Not grounding the unit may result in a fire or electric shock. | The unit must be installed at a level higher than the water surface when it is used for bubbling. If the unit is installed at a level lower than the water surface, fluid may flow into the unit and cause an electric shock. | Units must not be modified. Modifications may cause a fire or electric shock. | | |
| Do not pull, scratch, forcefully bend, twist or heat the lead wires. This may damage them and cause a fire or electric shock. | When incorporating the unit into a device, the lead wires from the unit should be connected securely to the wiring of the device by means of soldering, crimping or by the use of screws. Insufficient connections may cause a fire or electric shock. | The unit must not be disassembled or repaired by anyone other than a person who has received Nitto Kohki technical training. (Except in the case of filter and piston maintenance and inspection in accordance with the operation manual.) Otherwise it may result in a fire or electric shock. | Do not allow anything to be placed on or to fall onto the lead wires. This may damage them and cause a fire or electric shock. | | |
| When drawing in air contaminated with moisture, powder, or dust, add an external device to the unit for removing them. If these contaminants are drawn in, it may cause an electric shock. *Only for vacuum pumps. | | | | | |

Precautions for Blowers

| | | | | | |
|--|--|---|---|--|--|
| CAUTION Do not install the unit in a place where it may be soaked with water or covered with snow. This may cause an electric shock or fire. | | WARNING Do not let the unit draw in or discharge any gas other than air. This may cause an explosion, fire or electric shock. | | | |
| Use a power supply equipped with a ground-fault interrupter and overcurrent breaker. Failure to do so may cause an electric shock or fire. | Do not use the unit in hot and humid conditions. This may cause an electric shock, breakdown or fire. | Always place the unit above water level. Failure to do so may result in an electric shock or breakdown. | Use a waterproof wall outlet to supply power to the unit. Failure to do so may cause an electric shock or fire. | | |
| The power supply voltage must be limited to the individual unit specifications as stated on the nameplate or instruction manual. Failure to do so may cause an electric shock or fire. | Have a qualified electrician do the electrical work. Failure to do so may cause an electric shock or fire. | Never modify the unit. This may cause an electric shock, breakdown, or fire. | Do not use the unit with the outlet port closed or at free displacement. This may cause an electric shock, breakdown, or fire. | | |
| Do not place anything near the unit (within about 50 cm). Doing so may cause an electric shock or fire. | Never touch the power plug with wet hands. This may cause an electric shock. | Insert the power plug securely into the innermost position. Failure to do so may cause an electric shock. | Do not put anything on the power cable. Doing so may cause a fire or electric shock. | | |
| Always grasp the power plug to disconnect the unit from the socket. Pulling it out by the cord may cause an electric shock or breakdown. | Do not use the unit in a place where flammable materials, such as gasoline, thinner, lacquer, benzene, etc. are being used. This may cause a fire or explosion. | Check the power plug at least once a year for dirt and dust and clean if necessary. Failure to do so may result in an electric shock or fire. | The power plug must be disconnected before the air filter is cleaned or replaced. Failure to do so may cause an electric shock or accident. | | |
| Any removed air filter must be replaced before the operation is resumed. Failure to do so may cause an electric shock or breakdown. | Never try to disassemble or repair the unit. This may cause an electric shock, breakdown, fire or injury. Any repairs must be done by an electrician authorized by Nitto distributors. | | Do not cover the Blower with a box or the like without proper or adequate ventilation. Doing so may cause a breakdown or fire. | | |

Precautions for DC-Motor Pumps

Connect the plus terminal (if there is no indication of the plus terminal, use the terminal with a red mark as the plus terminal,) or the red lead wire of the unit to the plus terminal of the DC power source. Reverse connection may cause a breakdown, malfunction, or reduced rated performance.

Precautions for Liquid Pumps


| | | | | | |
|--|---|---|---|--|--|
| CAUTION Avoid pumping liquids containing solid matter such as debris and dust. If dust or debris sticks to the valve, the unit may not perform properly. If debris or dust is expected to get into the liquid, take countermeasures, such as using a filter on the intake side. | | WARNING Confirm the suitability of the liquid that passes through the unit before use. Failure to do so may cause a leak, explosion, fire or electric shock. | | | |
| Do not pump liquids that may crystallize. The valve will not perform as intended if crystals adhere to it. Preliminary testing on the unit with the liquid to be used is recommended. | The performance of the unit is measured with the pump in its proper mounting position, which is described in the user's manual. Different mounting positions or nozzle directions may result in different performances. | | There may be a risk that even a slight liquid pressure can open the valve due to siphon phenomenon. Place the outlet port at a position higher than the water level in the supply tank, or install a check valve if necessary to prevent water from being siphoned into the pump. | | |

When Using Compressors and Vacuum Pumps

Check with our distributor in advance if you plan to use the compressor/vacuum pump at free displacement (0 kPa), or the vacuum pump with inlet port closed, or the compressor at maximum pressure.

- As compressors and vacuum pumps employ a self-cooling system, if the units are used at more than the rated pressure, the duty cycle of some of the models will need to be shortened.
 - When wanting to increase the duty cycle, it is recommended to use a fan to cool the compressor.
 - Do not use the compressor near flammable liquid gas.
 - Do not use the compressor in the rain or in wet and damp places.
 - Do not allow the pump to draw in corrosive gas.

- Be sure to install and use the compressor at a position higher than water level.

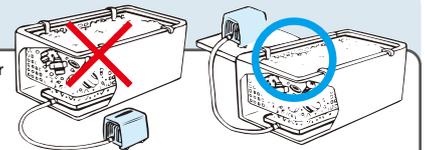

Handling Problems

In any of the below cases, stop operation immediately, switch off the power and disconnect the unit from the power supply. Ask our distributor for repair.

- When oil such as a lubricant has been applied to the unit in error.
- When liquid such as water has entered into the unit by mistake.
- When the unit has suffered a severe impact such as being dropped.
- When an abnormal operation is observed, such as the emission of smoke, or an unusual smell or noise.

Precautions for Pumps with Brush Motor

As operational time is increased, the value of insulation resistance becomes lower than that of the initial insulation resistance. If the outer surface of motor and the grounding of the power source are connected, do a preliminary check to assure no issues occur.

Our Product Warranty

Our Products are covered by a limited warranty ("Warranty") under the following conditions.

- Duration: depends on individual products and their specifications
- Service: repair or replacement at our option
Please be aware that a warranty claim will not be reimbursed with a cash payment.
- Object Person: original purchaser from our designated distributors

4. Out of Warranty

The following conditions are not covered by Warranty

- purchaser improperly used our products.
- purchaser did not comply with specifications and instructions stipulated in this Catalog when using our products, or
- purchaser did not comply with Caution for Safety stipulated in this Catalog when using our products, or
- repairing of our products was done by someone other than us, or
- We are not able to anticipate or predict such defects or causes of failure based on general technical knowledge of the specific application before or at the time of shipment, or
- defects are caused by the force majeure or other situations not attributable to us, or
- defects are not clearly attributable to us and
- defects are not about design, material or workmanship.

Limitation of Liability

We, including designated distributors, will not be liable for any special damages or consequential damages and will not have any monetary liability to purchasers.

PLASTIC CUPLA BC Type Valveless

For low pressure air piping

| Working pressure | Valve structure | Applicable fluid |
|--|------------------|------------------|
| 0.07 MPa (0.7 kgf/cm ²) | Straight through | Air |




- To connect, just push the plug into the socket.
- Plastic makes this ideal for use in environment prone to rusting.
- Compact and light weight for easy handling.
- Valveless construction gives more stable flow.

CUBE CUPLA

Small and lightweight coupling for air supply lines to medical and/or scientific equipment

| Working pressure | Valve structure | Applicable fluids |
|--------------------------------------|--|-------------------|
| 1.0 MPa (10 kgf/cm ²) | Two-way shut-off, One-way shut-off, Straight through | Air, Water |

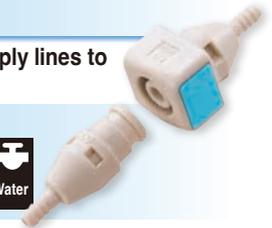

- Ultra-lightweight, made of polyacetal resin. Compact design for space saving.
- Just push plug into socket for connection. Simply press the button on the socket for disconnection.
- Both socket and plug have built-in valve types and valveless types. Valveless structure suits high viscosity fluids.
- Suitable for a wide range of applications from medical/scientific equipment to beverage machines or semiconductor manufacturing devices.

MICRO CUPLA

For piping in pneumatic control devices

| Working pressure | Valve structure | Applicable fluids |
|--------------------------------------|------------------|-------------------|
| 1.0 MPa (10 kgf/cm ²) | One-way shut-off | Air, Water |



- Even though the valve is built in the socket, the sleeve outer diameter is confined to 9.5 mm.
- Compact design for piping in narrow spaces.
- Push-to-connect operation. Tube Fitter type for even easier tube insertion.
- Plated brass and stainless bodies are available for excellent corrosion resistance.
- Available in various end configurations to satisfy a wide range of pneumatic applications.

SMALL CUPLA

Lightweight and compact for use on air lines and scientific equipment

| Working pressure | Valve structure | Applicable fluids |
|--------------------------------------|------------------|-------------------|
| 1.0 MPa (10 kgf/cm ²) | One-way shut-off | Air, Water |



- Compact socket with built-in valve and 14 mm OD sleeve.
- Just push in the plug to the socket for connection.
- Also available with quick connect/disconnect Tube Fitter type.
- Chrome-plated brass for corrosion resistance adopted for the body.
- Available in various end configurations to satisfy a wide range of pneumatic applications.

SUPER CUPLA

Light, compact for air piping connections

| Working pressure | Valve structure | Applicable fluid |
|--------------------------------------|------------------|------------------|
| 1.0 MPa (10 kgf/cm ²) | One-way shut-off | Air |



- Lightweight design suits direct connection to power tools.
- Push-to-connect for easy operation.
- Also available with quick connect/disconnect Tube Fitter type.
- Chrome-plated steel for corrosion resistance adopted for the body. (Partly aluminum)
- Available in various end configurations for a wide range of pneumatic applications.

HI CUPLA 200

Push-to-connect type for air lines

| Working pressure | Valve structure | Applicable fluid |
|--------------------------------------|------------------|------------------|
| 1.5 MPa (15 kgf/cm ²) | One-way shut-off | Air |



- Just push the plug into the socket for simple and secure connection.
- New valve design for low pressure loss to achieve flow rate increase (15% up over the conventional model).
- End-face seal is achieved when connected.
- Enhanced operability with low connection resistance.
- End-face seal design is superior to external seal with an O-ring due to no seal damage caused by exhausted lubrication.
- Also available with quick connect/disconnect Tube Fitter type.

HI CUPLA

Universal purpose couplings for air lines

| Working pressure | Valve structure | Applicable fluids |
|--------------------------------------|------------------|-------------------|
| 1.5 MPa (15 kgf/cm ²) | One-way shut-off | Air, Water |



- An excellent general purpose coupling for connecting factory air supply to pneumatic tools.
- Steel CUPLA is suitable for air. Brass or stainless steel is suitable for water.
- Critical structural parts of steel models are heat-treated for increased strength giving greater durability and resistance to wear.
- Available in various body materials, sizes and end configurations applicable to a wide range of applications.

HI CUPLA ACE

Lightweight plastic coupling with automatic safety lock for air line applications

| Working pressure | Valve structure | Applicable fluids |
|--------------------------------------|------------------|-------------------|
| 1.5 MPa (15 kgf/cm ²) | One-way shut-off | Air, Water |



- Pressure ratings comparable to steel CUPLA.
- A built in "automatic lock mechanism" locks the sleeve upon connection, thus prevents accidental disconnection.
- Just push plug into socket for simple connection.
- The weight is a quarter of steel HI CUPLA for easy handling.
- Can be used for air and water.

Air Compressor, Vacuum Pump & Liquid Pump



Japanese

www.nitto-kohki.co.jp/network/jp/



Vietnamese

www.nitto-kohki.co.jp/network/vi/



English

www.nitto-kohki.co.jp/network/



Indonesian

www.nitto-kohki.co.jp/network/id/



Thai

www.nitto-kohki.co.jp/network/th/



Spanish

www.nitto-kohki.co.jp/network/es/



YouTube

NITTO KOHKI GLOBAL



eCatalog

www.nitto-kohki.co.jp/e/prd/d_cat/

NITTO KOHKI CO., LTD.

Head Office

2-9-4, Nakaikegami, Ota-ku, Tokyo 146-8555, Japan

Tel : +81-3-3755-1111 Fax : +81-3-3753-8791 E-mail : overseas@nitto-kohki.co.jp

Web www.nitto-kohki.co.jp/e/



ISO9001
JQA-2025
ISO14001
JQA-EM4057
H.Q./R&D Lab

Overseas Affiliates / Offices

NITTO KOHKI U.S.A., INC.

46 Chancellor Drive, Roselle, Illinois 60172, U.S.A.

For Pump

Tel : +1-630-924-8811 Fax : +1-630-924-0808

For CUPLA

Tel : +1-630-924-5959 Fax : +1-630-924-1174

For Tool

Tel : +1-630-924-9393 Fax : +1-630-924-0303

www.nittokohki.com/

NITTO KOHKI EUROPE GMBH

Gottlieb-Daimler-Str. 10, 71144 Steinenbronn, Germany

Tel : +49-7157-989555-0

www.nitto-kohki.eu/

NITTO KOHKI EUROPE GMBH UK Branch

Unit A5, Langham Park Industrial Estate, Maple Road,

Castle Donington, Derbyshire DE74 2UT, United Kingdom

Tel : +44-1332-653800

www.nitto-kohki.eu/

NITTO KOHKI CO., LTD. Bangkok Representative Office

2 Jasmine Building, 22nd Floor, Soi Prasarnmitr(Sukhumvit23),

Sukhumvit Road, North Klontoe, Wattana, Bangkok 10110, Thailand

Tel : +66-2612-7388

Thai www.nitto-kohki.co.jp/network/th/

Vietnamese www.nitto-kohki.co.jp/network/vi/

NITTO KOHKI INDIA PVT LTD

Unit No. 605, 6th Floor, Global Foyer mall, Sec-43,

Gurugram, Haryana 122002, India

Tel : +91-124-403-9600

www.nitto-kohki.co.jp/network/

NITTO KOHKI CO., LTD. Singapore Branch

18, Kaki Bukit Road 3, #02-12, Entrepreneur Business Centre, Singapore 415978

Tel : +65-6227-5360 Fax : +65-6227-0192

www.nitto-kohki.co.jp/network/

NITTO KOHKI CO., LTD. Indonesia Representative Office

Plaza Marein 23rd Floor Jl. Jend. Sudirman Kav. 76-78, Jakarta 12910, Indonesia

Tel : +62-21-8065-7808

www.nitto-kohki.co.jp/network/id/

NITTO KOHKI AUSTRALIA PTY LTD

77 Brandl Street, Eight Mile Plains, Queensland 4113, Australia

Tel : +61-7-3340-4600 Fax : +61-73340-4640

www.nitto-australia.com.au/

NITTO KOHKI (SHANGHAI) CO., LTD.

Room 2602, Shanghai International Trade Centre,

No.2201 Yan An West Road, Shanghai 200336, China

Tel : +86-21-6415-3935 Fax : +86-21-6472-6957

www.nitto-kohki.cn/

NITTO KOHKI (SHANGHAI) CO., LTD. Shenzhen Branch

Room 708, Building 1, Wanting Building, No. 2009 Baoyuan Road,

Baoan District, Shenzhen, Guangdong 518102, China

Tel : +86-755-8375-2185 Fax : +86-755-8375-2187

www.nitto-kohki.cn/

DISTRIBUTED BY



บริษัท นานดีอินเตอร์เทรด จำกัด
NANDEE INTER-TRADE CO., LTD.

314,316,318,320,322 ซอยจันทน์ 32 ถนนจันทน์ แขวงทุ่งวัดดอน เขตสาทร กทม. 10120

☎ : 0-2675-8239

LINE : @nandeeintertrade

f : nandeeintertrade

🌐 : www.nandee.co.th

✉ : marketing@nandee.co.th

sales@nandee.co.th