

R69 Conductive pad

Surface resistance $10^6 \sim 10^9 \Omega$ is launched!!


Application and Features by Vacuum Pad

Pad type	Characteristics	Application
Standard type		 Flat work (hard and thick work)
Deep type		 Spherical fruit (apple, etc.) or round ball
Small type		 Semiconductor product
Bellows type		 Vacuum packed pack and food package
Multi-bellows type		
Oval type		 Long work such as circuit board or semiconductor product
Sponge type		 External wall material of building and work such as small stone and tile

Pad type	Characteristics	Application	
Soft type			 <p>Injection parts or easily scratched parts,</p>
Soft bellows type		 <p>vacuum pad</p>	
Skid-proof type			 <p>Oily press cut parts,</p>
Ultrathin type		 <p>Breathable work plastic bag and paper pack, etc.</p>	 <p>Copy paper, plastic film or thin work,</p>
<p>NEW</p> Flat type			 <p>Return of ultrathin type work, such as sheets, vinyl, etc.</p>
Long stroke type		 <p>Inner type spring external type spring</p>	 <p>Adsorption is possible even if the height of the work is not specified,</p>
Vacuum cylinder			 <p>A vacuum pad with a built-in cylinder and vacuum generator allows compressed air to be vacuumed and the work is adsorbed to raise the cylinder.</p>
Air tweezers		 <p>Hole type Button type</p>	 <p>Ideal for small work adsorption and transfer with tweezers with built-in vacuum pad and vacuum generator in pen-type body</p>
Mark-free type			 <p>Liquid crystal glass, painting process, semiconductor production equipment</p>

Conductive pad type

Standard type

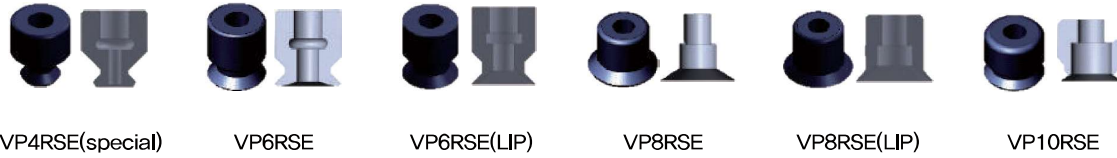

Bellows type

Soft bellows type



Flat type



Ultrathin type



Conductive vacuum pad inspection method



Put it on the measuring board in 100 units.


※ Actual measurement $10^7 \sim 10^8$: Acceptance
 10^6 early half $\sim 10^8$ latter half : Rejection

※ In case of surface resistance, the resistance value may vary depending on the room temperature and humidity. We set the measurement point according to the pad size and shape, and conduct a total inspection,



Total inspection by TREK surface resistance meter

Model Designation

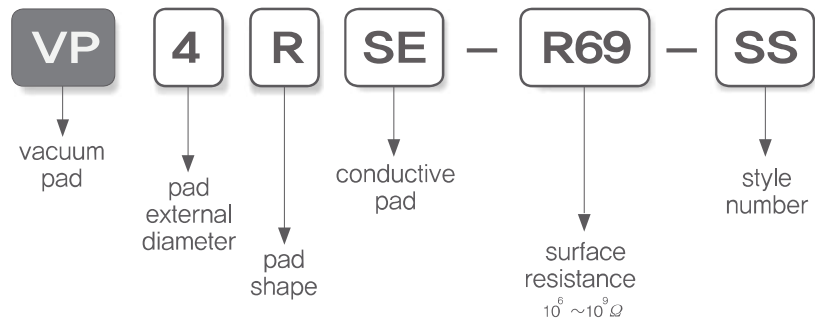

All items of vacuum pad holder are compatible

